

## ALLIMITY CV-BM50-SH

# ALLIMITY BM50 BM60 Replacement Remote Control User Manual

Model: CV-BM50-SH | Brand: ALLIMITY

## INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY BM50 BM60 Replacement Remote Control. It is designed to be compatible with various Philips Micro Hi-Fi Music Audio Systems. Please read this manual carefully to ensure proper setup and operation of your new remote control.

## PRODUCT OVERVIEW

The ALLIMITY BM50 BM60 Replacement Remote Control is a direct replacement for your original Philips Micro Hi-Fi system remote. It offers all essential functions for controlling your audio system.

## Remote Control Layout





**Image Description:** A clear, top-down view of the black ALLIMITY BM50 BM60 Replacement Remote Control, showcasing all buttons and their labels. The remote has a standard rectangular shape with rounded edges.

- **Power Button:** Turns the audio system on or off.
- **CD/USB/AUDIO IN/FM/Bluetooth:** Selects the input source.
- **PAUSE/PLAY/SKIP:** Controls media playback.
- **SHUFFLE/REPEAT/STOP:** Additional playback options.
- **PRESET/ALBUM:** Navigates through radio presets or album tracks.
- **SOUND:** Adjusts sound settings.
- **VOLUME +/-:** Increases or decreases the volume level.

- **MUTE:** Silences the audio output.
- **DISPLAY/PROG/SLEEP/CLOCK/TIMER:** Accesses various system functions and settings.

## SETUP

---

### Inserting Batteries

The remote control requires two (2) 1.5V AAA batteries (not included) for operation. No programming or setup is required beyond battery installation.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



**Image Description:** The back of the remote control with the battery cover removed, showing the empty battery compartment designed for two AAA batteries and their polarity markings.

# OPERATION

## Basic Functions

- **Power On/Off:** Press the **Power** button once to turn the system on or off.
- **Source Selection:** Press the desired input button (e.g., **CD**, **USB**, **FM**, **AUDIO IN**, **Bluetooth**) to switch between audio sources.
- **Volume Adjustment:** Use the **VOLUME +** or **VOLUME -** buttons to adjust the sound level.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Playback Control:** Use the **PLAY/PAUSE**, **STOP**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for media playback.

## Compatibility

This remote control is compatible with the following Philips Micro Hi-Fi Music Audio System models:

- BM50, BM60, BM50B, BM60B/10, BM50B/11
- BTM1360, BTM1360/05, BTM1360/12, BTM1360/55, BTM1360/96
- BTB1370, BTB1370/12
- BTM2312, BTM2312/12
- MCM2350, MCM2350/12
- BTM2360, BTM2360/12, BTM2360/55, BTM2360/61, BTM2360/77, BTM2360/85, BTM2360/96
- BTB2370, BTB2370/12
- BTM2450, BTM2450/12
- BTM2460, BTM2460W, BTM2460/12, BTM2460W/12
- BTM3360, BTM3360/12
- BTB3370, BTB3370/12

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

## TROUBLESHOOTING

| Problem                       | Solution   |
|-------------------------------|--|
| Remote control does not work. | <ul style="list-style-type: none"><li>◦ Ensure batteries are inserted correctly with correct polarity.</li><li>◦ Replace old batteries with new 1.5V AAA alkaline batteries.</li><li>◦ Check for any obstructions between the remote and the audio system's sensor.</li><li>◦ Ensure the audio system is powered on.</li></ul> |

| Problem                              | Solution   |
|--------------------------------------|--|
| Remote control works intermittently. | <ul style="list-style-type: none"><li>◦ Batteries may be low; replace them.</li><li>◦ Ensure you are within the effective range of the audio system.</li></ul> |




## SPECIFICATIONS


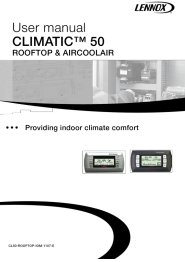
- **Model:** CV-BM50-SH
- **Dimensions:** 6.5 x 1.38 x 0.72 inches (16.5 x 3.5 x 1.8 cm)
- **Item Weight:** 1.59 ounces (45 grams)
- **Power Supply:** 2 x 1.5V AAA batteries (not included)
- **Connectivity:** Wireless (Infrared)
- **Color:** Black

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

### Related Documents - CV-BM50-SH

|   |   |
|---|---|
|  | <p><a href="#">Bestir BM Range Installation Guide: Delivery, Dimensions &amp; Service Requirements</a></p> <p>Comprehensive installation documentation for Bestir BM Range coffee machines, covering delivery information, machine and fridge dimensions, and essential service requirements for setup.</p> |
|  | <p><a href="#">Campark BM50 Baby Monitor User Manual</a></p> <p>User manual for the Campark BM50 Baby Monitor, covering setup, features, safety, and support. Features 2.4GHz wireless video, temperature monitoring, 5-inch LCD, long-range, and VOX activation.</p>                                       |
|  | <p><a href="#">AQUOS</a></p> <p>AQUOS</p>   |

|   |  |
|---|--|
|  The image shows the cover of the Victure BM50 Video Baby Monitor User Manual. It features a grid pattern with a camera icon and the text 'Victure User Manual' at the top and 'BM50 Video Baby Monitor' at the bottom.  | <p><a href="#">Victure BM50 Video Baby Monitor User Manual</a></p> <p>Comprehensive user manual for the Victure BM50 Video Baby Monitor, covering setup, features, troubleshooting, and technical specifications. Learn how to use your Victure baby monitor effectively.</p>  |
| <p>Magnetic Stirrer</p> <p>Operation instruction</p>  | <p><a href="#">VEVOR Magnetic Stirrer Operation Instructions</a></p> <p>Official operation instructions for VEVOR Magnetic Stirrers. This guide details product specifications, operating procedures for models with and without displays, safety precautions, and packing lists for laboratory and scientific applications.</p>   |
|  The image shows the cover of the CLIMATIC 50 Rooftop & AirCoolair User Manual. It features the Lennox logo, the text 'User manual CLIMATIC™ 50 ROOFTOP & AIRCOOLAIR', and a photograph of the equipment. Below the photo, it says '... Providing indoor climate comfort' and shows two control units. | <p><a href="#">CLIMATIC™ 50 Rooftop &amp; Aircoolair Installation, Operation, and Maintenance Manual</a></p> <p>Comprehensive manual for the CLIMATIC™ 50 microprocessor-based control system for Lennox Rooftop and AirCooler units. Covers installation, configuration, operation, scheduling, thermostat/hygrostat settings, ventilation, compressor control, defrost, supplementary heating, customized I/O, communication protocols (BMS, Modbus, LonWorks), and fault codes.</p> |