

UGREEN 35075

UGREEN Wireless Bluetooth Keyboard User Manual

Model: 35075

1. INTRODUCTION

Welcome to the user manual for your UGREEN Wireless Bluetooth Keyboard. This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your keyboard to ensure optimal performance and a seamless user experience.

2. PRODUCT OVERVIEW

The UGREEN Wireless Bluetooth Keyboard is designed for versatility and comfort, offering multiple connectivity options and an ergonomic design for efficient typing across various devices.

Key Features

- **Dual Connectivity:** Supports both Bluetooth 5.0 and 2.4G wireless technology, allowing connection to up to 4 devices simultaneously.
- **Quiet & Precise Typing:** Features a scissor-structure key mechanism for a comfortable, quiet, and accurate typing experience.
- **Long Battery Life:** Equipped with a built-in 400mAh rechargeable battery, providing up to 3 months of usage on a single charge (usage dependent).
- **Ergonomic Design:** An optimal 6-degree tilt angle reduces wrist strain for extended typing sessions.
- **Compact 99-Key Layout:** Includes 12 function keys and a full numeric keypad, saving desk space while maintaining full functionality.
- **Wide Compatibility:** Compatible with macOS, Windows, Linux, ChromeOS, iOS, and Android operating systems.

Package Contents

- UGREEN Wireless Bluetooth Keyboard
- USB-C Charging Cable



Overall view of the UGREEN Wireless Bluetooth Keyboard.

3. SETUP

Charging the Keyboard

Before first use, ensure the keyboard is fully charged. Connect the provided USB-C cable to the keyboard's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

400mAh Wiederaufladbare Batterie

Einmal laden, Drei Monaten verwenden



USB C

2 Std.

Ladezeit

3 Monaten

Batterielaufzeit

The keyboard features a 400mAh battery, providing up to 3 months of use on a 2-hour charge via USB-C.

Connecting to Devices

The UGREEN keyboard supports simultaneous connection to up to 4 devices using either 2.4G wireless or Bluetooth 5.0 technology.

3.1. 2.4G Wireless Connection

1. Locate the 2.4G USB receiver (usually stored in the keyboard's battery compartment or included separately).
2. Insert the 2.4G USB receiver into an available USB port on your computer or device.
3. Press **Fn + 1** (with the 2.4G icon) on the keyboard to switch to 2.4G mode. The indicator light will confirm the connection.

3.2. Bluetooth Connection (BT1, BT2, BT3)

1. Press **Fn + 2** (BT1 icon), **Fn + 3** (BT2 icon), or **Fn + 4** (BT3 icon) to select an available Bluetooth channel. The indicator light for the selected channel will blink rapidly, indicating that the keyboard is in pairing mode.

2. On your device (computer, tablet, smartphone), navigate to the Bluetooth settings.
3. Search for available devices and select "UGREEN Keyboard" from the list.
4. Follow any on-screen prompts to complete the pairing process. The indicator light will become solid once connected.

Bluetooth 5.0 & 2.4 G Verbindung



Fn + **2** = 2.4G Gerät

Fn + **1** = Bluetooth Gerät 1

Fn + **3** = Bluetooth Gerät 2

Fn + **4** = Bluetooth Gerät 3

Diagram illustrating how the UGREEN keyboard connects to multiple devices via 2.4G and Bluetooth channels.

4. OPERATING INSTRUCTIONS

4.1. Switching Between Connected Devices

To switch between your connected devices, simply press the corresponding function key combination:

- For 2.4G connection: Press **Fn** + **1**


- For Bluetooth 1 connection: Press **Fn + 2**
- For Bluetooth 2 connection: Press **Fn + 3**
- For Bluetooth 3 connection: Press **Fn + 4**

4.2. Multimedia and Function Keys

The keyboard features 12 multimedia shortcut keys for quick access to common functions. To use these, press the **Fn** key in combination with the desired F1-F12 key.

Key Combination	Function
Fn + F1	Brightness Down
Fn + F2	Brightness Up
Fn + F3	App Switch
Fn + F4	Close Window
Fn + F5	Refresh
Fn + F6	PC Power On
Fn + F7	Previous Track
Fn + F8	Play/Pause
Fn + F9	Next Track
Fn + F10	Mute
Fn + F11	Volume Down
Fn + F12	Volume Up

Kompatibel mit Windows auch macOS

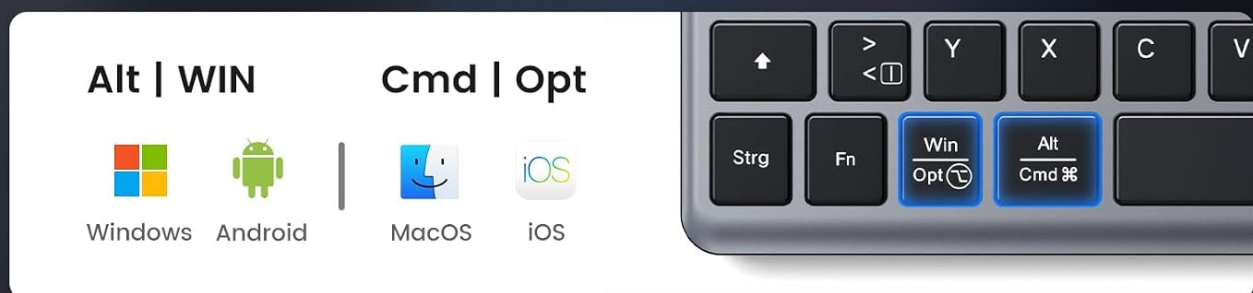

Overview of the 12 multimedia shortcut keys available on the keyboard.

 
 
4.3. System Compatibility and Layout Switching

The keyboard is designed to be compatible with various operating systems. The default keyboard layout is set for Windows.

- To switch to **Windows/Android** layout: Press **Fn + Q**
- To switch to **macOS/iOS** layout: Press **Fn + W**

Bequemes und Leises Tippen

Die Scherenstruktur ermöglicht
die Tasten ganz leise und komfortabel

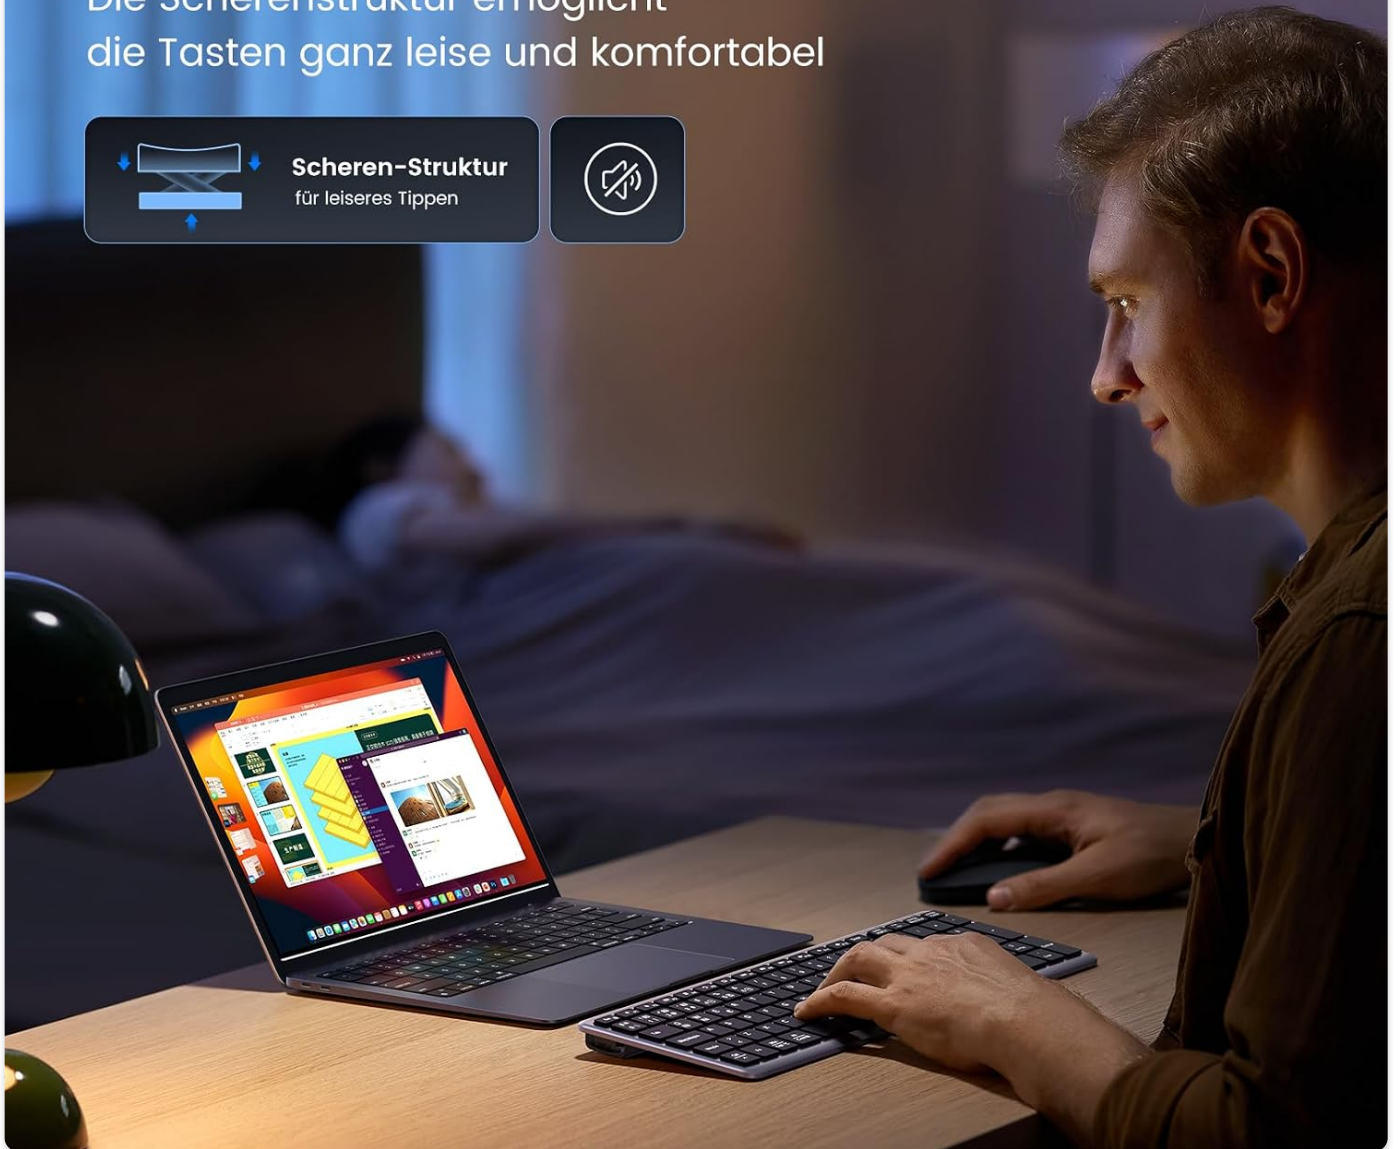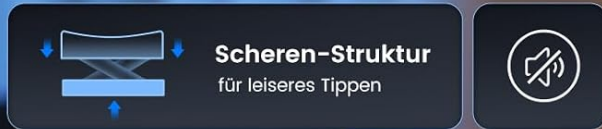

Visual representation of keyboard compatibility with Windows, Android, macOS, and iOS, showing key mapping changes.

4.4. Ergonomic Design

The keyboard features a 6-degree tilt angle, which is designed to provide a more natural and comfortable typing position, reducing strain on your wrists during prolonged use.

Ergonomisches Design



6° Neigungswinkel
für besseres
Nutzererlebnis

6°



Side view of the keyboard highlighting the ergonomic 6-degree tilt for improved user experience.

4.5. Quiet Typing Experience

The scissor-structure keys provide a tactile yet quiet typing experience, making it ideal for environments where noise reduction is important.



Close-up view of the scissor-structure key mechanism, designed for precise and quiet typing.

5. MAINTENANCE

5.1. Cleaning

To clean your keyboard, gently wipe the surface with a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the keyboard.

5.2. Battery Care

To maximize the lifespan of your keyboard's battery:

- Recharge the keyboard when the battery indicator light signals low power.
- Avoid fully discharging the battery frequently.
- Do not expose the keyboard to extreme temperatures (hot or cold).
- If storing the keyboard for an extended period, charge it to about 50% before storage.

6. TROUBLESHOOTING

6.1. Keyboard Not Connecting or Responding

- **Check Battery:** Ensure the keyboard has sufficient battery charge. Recharge if necessary.
- **Correct Channel:** Verify that the keyboard is switched to the correct channel (Fn + 1/2/3/4) for the device you are trying to use.
- **2.4G Receiver:** For 2.4G connection, ensure the USB receiver is securely plugged into your device's USB port. Try a different USB port.
- **Bluetooth Pairing:** For Bluetooth, ensure Bluetooth is enabled on your device and the keyboard is in pairing mode (blinking indicator light). If already paired, try unpairing and re-pairing the keyboard.
- **Restart Keyboard:** Turn the keyboard off and then on again using the power switch.
- **Device Restart:** Restart your computer or device.

6.2. Keys Not Working or Sticking

- **Battery Level:** Low battery can sometimes cause inconsistent key responses. Charge the keyboard.
- **Clean Keys:** Check for any debris or foreign objects under the keys. Gently clean the keys as described in the Maintenance section.
- **System Layout:** Ensure the keyboard layout is correctly set for your operating system (Fn + Q for Windows/Android, Fn + W for macOS/iOS).

6.3. Keyboard Enters Sleep Mode Frequently

The keyboard is designed to enter sleep mode after 30 minutes of inactivity to conserve battery power. To wake it up, simply press any key and wait for approximately 3 seconds for it to reconnect.

7. SPECIFICATIONS

Feature	Detail
Brand	UGREEN
Model	35075
Connectivity Technology	Bluetooth 5.0, 2.4Ghz Wireless
Battery Type	Lithium-Polymer
Battery Capacity	400mAh
Charging Time	Approx. 2 hours
Battery Life	Up to 3 months (depending on usage)
Dimensions (L x W x H)	36.5 x 12.3 x 0.71 cm
Weight	710 g
Number of Keys	99
Optimal Tilt Angle	6 degrees
Compatible Devices	Laptop, PC, Smartphone, Tablet
Compatible Operating Systems	macOS, Windows, Linux, ChromeOS, iOS, Android

Ultra Kompakt und Tragbar



Detailed dimensions of the UGREEN Wireless Bluetooth Keyboard.

8. WARRANTY AND SUPPORT

For detailed warranty information, technical support, and customer service, please refer to the official UGREEN website or contact their authorized support channels. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I type the at symbol (@) on the UGREEN 35075 Bluetooth keyboard?

To type the at symbol (@) on the UGREEN 35075 keyboard, the method depends on your operating system and the keyboard's current layout mode. This keyboard is sold with a QWERTZ (German) layout, which...

[Read full answer](#)

How do I reset the UGREEN Wireless Bluetooth Keyboard (Model 35075)?

The UGREEN Wireless Bluetooth Keyboard (Model 35075) user manual does not explicitly mention a 'reset' function in the traditional sense (e.g., a factory reset button or key combination). However, if you are experiencing issues,...

[Read full answer](#)

My UGREEN 35075 wireless keyboard is not responding and seems locked after I pressed Fn + 2 and F2; only the second indicator light is on. How can I fix this?

It appears that by pressing Fn + 2, you have switched the keyboard to Bluetooth Channel 1 (BT1). The "2" light you see is the indicator for that specific channel. If your computer is...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0CPFDBY8K>

More documents and user manuals: <https://manuals.plus/>