

[Manuals.plus](#) /

› [PartyKindom](#) /

› PartyKindom Wireless Speaker and Soundbar User Manual

PartyKindom 7ZSS19ESAHR1P57CD83L53YF0

PartyKindom Wireless Speaker and Soundbar User Manual

Model: 7ZSS19ESAHR1P57CD83L53YF0

1. INTRODUCTION

Thank you for purchasing the PartyKindom Wireless Speaker and Soundbar. This portable multimedia stereo soundbar is designed to enhance your audio experience for computers, TVs, mobile phones, and tablets. Its high-quality and compact design makes it suitable for various environments, both at home and on the go. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the provided or recommended power cables and accessories.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure proper ventilation around the soundbar during operation.

3. PACKAGE CONTENTS

Please check the box for the following items:

- PartyKindom Wireless Soundbar
- Remote Control
- RCA Audio Cable
- USB Charging Cable
- User Manual (this document)



Image: The PartyKindom Wireless Soundbar, its remote control, and included RCA and USB cables.

4. PRODUCT OVERVIEW

The PartyKindom soundbar features a sleek, minimalist design with a metal mesh finish. It offers multiple connectivity options and intuitive controls.

4.1. Front and Top Panel

The top panel houses the main control buttons for easy access, while the front features the speaker grilles.



1

Create a modern minimalist style design. The ultimate minimalist metal mesh design is combined with advanced audio technology

2

Exquisite workmanship, reasonable structure, professional and practical, can bring you convenience



Image: Detailed view of the soundbar's metal mesh design and the integrated control buttons on the top panel.

4.2. Rear Panel and Ports

The rear panel includes various input ports for connecting to different audio sources.

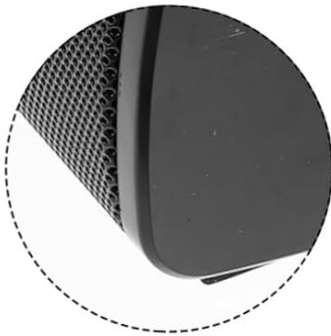


Image: The soundbar shown with its included cables, alongside magnified views of the RCA input ports and the control panel.

4.3. Remote Control

The included remote control provides full functionality from a distance, allowing you to manage settings conveniently.

5. SETUP

Follow these steps to set up your PartyKindom soundbar:

5.1. Placement

Place the soundbar on a stable, flat surface, such as a TV stand or shelf, directly in front of your television or computer monitor for optimal sound projection. Ensure there is adequate space around the soundbar for ventilation.



Image: A PartyKindom soundbar positioned neatly on a media console beneath a wall-mounted television.

5.2. Power Connection

1. Connect the USB charging cable to the soundbar's power input port.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on your device (e.g., TV, computer).

5.3. Audio Connection

Choose one of the following methods to connect your audio source:

5.3.1. RCA Connection

1. Connect the red and white plugs of the RCA audio cable to the corresponding red and white RCA input ports on the soundbar.
2. Connect the other end of the RCA cable to the audio output ports of your TV, DVD player, or other audio device.

5.3.2. 3.5mm AUX Connection

1. Connect a 3.5mm audio cable (not included) from your device's headphone jack or audio output to the AUX input port on the soundbar.

5.3.3. Bluetooth Connection

1. Power on the soundbar.
2. Switch the soundbar to Bluetooth mode (refer to Operating section).
3. Enable Bluetooth on your mobile phone, tablet, or computer.
4. Search for available devices and select "PartyKindom Soundbar" (or similar name) to pair.
5. Once paired, the soundbar will indicate a successful connection, and you can play audio wirelessly.

5.3.4. USB Input / TF Card Playback

1. Insert a USB flash drive or TF (MicroSD) card containing audio files into the respective port on the soundbar.
2. The soundbar will automatically switch to USB or TF card mode and begin playing audio.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

Press the Power button on the soundbar or remote control to turn the device on or off.


6.2. Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the soundbar or remote control to adjust the audio level.

6.3. Mode Selection

Press the Mode button on the soundbar or remote control to cycle through available input modes: Bluetooth, AUX, RCA, USB, TF Card, and FM Radio.

Nice music, No boundaries

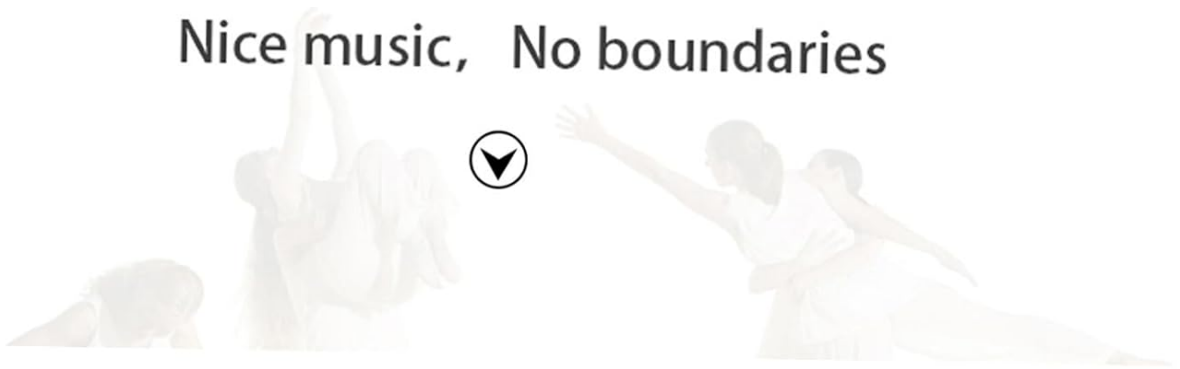

6 Core Advantages

FOCUS, only to create a better sound



Image: The soundbar showcasing its versatile connectivity options: FM Radio, 3.5mm AUX, TF Card Play, USB Input, and Lossless audio support.

6.4. Playback Controls

When playing audio from Bluetooth, USB, or TF card, use the following buttons:

- **Play/Pause:** Press to play or pause the current track.
- **Previous/Next:** Press to skip to the previous or next track.

6.5. Sound Effects

The soundbar offers various sound effects to enhance your listening experience. Use the remote control to select your preferred sound mode.



6 AMAZING SOUND EFFECTS

Normal

Rock

Pop

Classic

Jazz

Country

Image: The soundbar displaying its six available sound effects: Normal, Rock, Pop, Classic, Jazz, and Country, allowing for customized audio output.

6.6. FM Radio Operation

In FM Radio mode:

- Press the Play/Pause button to auto-scan and save available radio stations.
- Use the Previous/Next buttons to switch between saved stations.

7. MAINTENANCE

7.1. Cleaning

Wipe the surface of the soundbar with a soft, dry, lint-free cloth. Do not use liquid or aerosol cleaners, as they may damage the finish or internal components.

7.2. Storage

If not in use for an extended period, store the soundbar in a cool, dry place, away from direct sunlight and extreme

temperatures. It is recommended to disconnect it from the power source.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working	Ensure power cable is securely connected. Try a different power outlet.
No sound	Incorrect input mode; Volume too low; Audio cable not connected properly; Device not paired (Bluetooth)	Select the correct input mode. Increase volume. Check audio cable connections. Re-pair Bluetooth device.
Bluetooth connection unstable	Device too far; Obstructions; Interference	Move device closer to soundbar. Remove obstructions. Avoid other wireless devices.
Remote control not working	Batteries low/dead; Obstruction between remote and soundbar	Replace batteries. Ensure clear line of sight to the soundbar's sensor.

9. SPECIFICATIONS

Feature	Detail
Model Number	7ZSS19ESAHR1P57CD83L53YF0
Dimensions (L x W x H)	Approx. 55 cm x 5 cm x 5 cm (21.6 in x 2.0 in x 2.0 in)
Weight	Approx. 275.78 grams
Connectivity Technology	Bluetooth 4.2, RCA, USB, 3.5mm AUX, TF Card
Audio Output Mode	Stereo
Mounting Type	Tabletop
Material	ABS
Color	Black
Special Features	Portable, Lightweight, Remote Control



Image: The soundbar with its approximate dimensions clearly marked: 55.0 cm (21.6 inches) in length and 5.0 cm (2.0 inches) in height.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact PartyKindom customer service through the retailer's platform where the product was acquired. Please have your model number (7ZSS19ESAHR1P57CD83L53YF0) and purchase details ready when contacting support.

© 2023 PartyKindom. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPFPHLVG>

More documents and user manuals: <https://manuals.plus/>