

ELITAPRO MKF-001

ELITAPRO ULTRA-HIGH-SPEED Milk Frother (Model MKF-001) Instruction Manual

Model: MKF-001

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your ELITAPRO ULTRA-HIGH-SPEED Milk Frother, Model MKF-001. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

To ensure safe operation, always adhere to the following precautions:

- Keep the device out of reach of children.
- Do not immerse the motor unit in water or any other liquid.
- Only immerse the whisk attachment in liquids.
- Ensure hands are dry when handling the device.
- Do not operate the device if it is damaged or malfunctioning.
- Use only AA batteries (not included). Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period.
- Avoid touching moving parts during operation.
- This device is intended for household use only.

PRODUCT COMPONENTS

Your ELITAPRO Milk Frother package includes the following items:

- ELITAPRO Frother Handle (Motor Unit)
- Double Whisk Attachment
- Detachable Egg Beater Attachment

- Stainless Steel Stand



Image 1: ELITAPRO Milk Frother with its components, including the main frother unit, double whisk, egg beater, and stand.

SETUP AND FIRST USE

1. Battery Installation:

Locate the battery compartment at the bottom of the frother handle. Gently twist and pull to open. Insert two AA batteries (not included) according to the polarity markings (+/-). Close the compartment securely.

2. Attaching the Whisk:

Select either the Double Whisk or the Detachable Egg Beater. Align the whisk shaft with the opening on the frother handle and push firmly until it clicks into place.



Image 2: Illustration showing how to attach the detachable egg beater to the frother handle.

3. Placement on Stand:

Once assembled, the frother can be placed on its stainless steel stand for convenient storage.

OPERATING INSTRUCTIONS

The ELITAPRO Milk Frother is designed for frothing milk, mixing beverages, and beating eggs.

Frothing Milk

1. Pour your desired amount of milk (cold or warm) into a cup or pitcher. For best results, use a container that allows sufficient space for the milk to expand.
2. Insert the double whisk attachment into the milk, ensuring the whisk head is fully submerged but not touching the bottom.
3. Press and hold the power button located on the top of the frother handle to activate.

4. Move the frother gently up and down, just below the surface of the milk, for 15-30 seconds or until desired froth consistency is achieved.
5. Release the power button to turn off the frother.
6. Carefully remove the frother from the milk and place it on its stand.



Image 3: The ELITAPRO frother positioned near a cup of frothed coffee, demonstrating its primary use.

Beating Eggs or Mixing Beverages

1. Attach the detachable egg beater to the frother handle.
2. Submerge the egg beater into the eggs or beverage you wish to mix.
3. Press and hold the power button to activate.
4. Mix until the desired consistency is reached.
5. Release the power button to turn off the frother.

MIX EVERYTHING WITH ONE TOOL

MILK. COFFEE. EGGS. POWDERS.
COCKTAILS. DRINKS. SHAKES.



Image 4: The ELITAPRO frother with the egg beater attachment, shown alongside a glass containing a mixed beverage, illustrating its versatility.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your ELITAPRO Milk Frother.

1. After Each Use:

Immediately after use, detach the whisk attachment. Rinse the whisk head under running water. For thorough cleaning, immerse the whisk head in a glass of warm, soapy water and briefly activate the frother for 2-3 seconds. Rinse again with clean water.

2. Drying:

To dry the whisk, briefly activate the frother in the air for 2-3 seconds to shake off excess water. Alternatively, wipe with a clean cloth.

3. Motor Unit:

Wipe the frother handle (motor unit) with a damp cloth. **Do not immerse the motor unit in water.**

4. Storage:

Store the frother and its attachments on the provided stainless steel stand in a dry place.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Frother does not turn on.	Batteries are incorrectly installed or depleted.	Check battery polarity. Replace with fresh AA batteries.
Whisk spins slowly or inconsistently.	Low battery power; whisk attachment not securely fastened; whisk shaft bent.	Replace batteries. Ensure whisk is firmly attached. If whisk shaft is bent, contact customer support for replacement.
Milk does not froth effectively.	Milk type or temperature; whisk not positioned correctly.	Ensure milk is cold for best frothing results (some milk types froth better than others). Keep whisk head just below the surface.
Device makes unusual noise.	Whisk attachment loose or damaged.	Check if whisk is securely attached. Inspect whisk for damage.

SPECIFICATIONS

Model: MKF-001

Brand: ELITAPRO

Power Source: 2 x AA Batteries (not included)

Motor Speed: Approximately 19,000 RPM

Material: Stainless Steel (whisk), Silicone Rubber (handle)

Included Components: Frother handle, Double Whisk, Egg Beater, Stand

Product Care: Hand Wash Only (whisk), Wipe Clean (handle)



Image 5: Visual representation highlighting the 19,000 RPM motor speed of the ELITAPRO frother.

WARRANTY AND CUSTOMER SUPPORT

ELITAPRO stands behind its products. This product comes with a **LIFETIME WARRANTY**. For any concerns, questions, or support needs, please do not hesitate to contact ELITAPRO customer service. Refer to your product packaging or the ELITAPRO brand store on Amazon for contact details.

You can visit the official ELITAPRO Store for more information: [ELITAPRO Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question