

[Manuals.plus](#) /

› [VOXON](#) /

› VOXON USB Desk Fan User Manual

VOXON EDF02001

VOXON USB Desk Fan User Manual

Model: EDF02001

INTRODUCTION

Thank you for purchasing the VOXON USB Desk Fan. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

The VOXON USB Desk Fan is designed to provide personal cooling with adjustable strong wind, quiet operation, and portability, making it suitable for various environments such as offices, bedrooms, kitchens, and camping.

PRODUCT OVERVIEW



Figure 1: VOXON USB Desk Fan. This image shows the compact black desk fan with its USB cable connected, highlighting its sleek design and power button.

Key Features:

- **5 Adjustable Speeds:** Choose from low, medium-low, medium, high, and extra-high wind settings.
- **Quiet Operation:** Less than 50dB at high speed, and very quiet at low speed, ideal for undisturbed environments.
- **90° Vertical Rotation:** Adjust the fan head vertically to direct airflow precisely.
- **Easy to Clean:** Removable front cover for convenient cleaning.
- **USB Powered:** Operates via a 1.5-meter USB cable, compatible with various USB power sources.
- **Compact and Portable:** Lightweight design (217 grams) for easy placement and transport.

PACKAGE CONTENTS

Please check the package for the following items:

- VOXON USB Desk Fan (Model: EDF02001)
- 1.5M USB A to USB C Charging Cable
- User Manual




Figure 2: Product Packaging. The image displays the brown cardboard box for the VOXON USB Fan, indicating the model VX-DF001 and certified frustration-free packaging.

SETUP

1. **Unpack the Fan:** Carefully remove the VOXON USB Desk Fan and its accessories from the packaging.
2. **Placement:** Place the fan on a stable, flat surface. The bottom of the fan is designed with rubber to enhance stability.
3. **Connect Power:** Insert the USB-C end of the provided 1.5M USB cable into the fan's power port. Connect the USB-A end to any compatible USB power source, such as a computer USB port, power bank, USB wall adapter, or USB power strip.

USB-C Powered


No batteries, plug and play

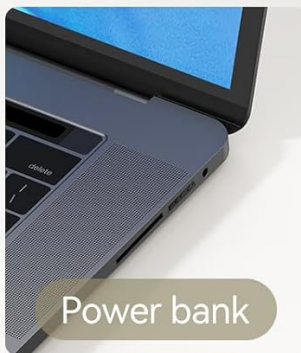

Power bank



USB Adapter

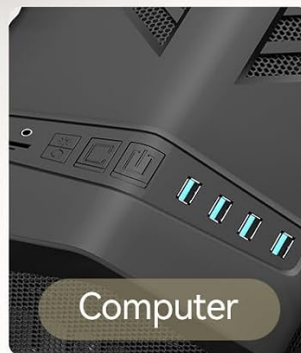

Computer



Usb power strip

Figure 3: USB-C Power Connections. This image illustrates various ways to power the fan, including a power bank, USB adapter, computer, and USB power strip.

Note: This fan does not come with internal batteries and requires continuous USB power to operate.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment:

The fan features a single button on the front for all operations.

1. **To Power On:** Press the button once. The fan will start at the lowest speed.
2. **To Adjust Speed:** Repeatedly press the button to cycle through the 5 available speeds: Low, Medium-Low, Medium, High, and Extra-High.
3. **To Power Off:** After the Extra-High speed, pressing the button one more time will turn the fan off.

Strong Airflow & 5 Speeds



Figure 4: Strong Airflow & 5 Speeds. This image visually represents the five fan speeds with corresponding RPMs: 1900rpm, 2100rpm, 2400rpm, 2800rpm, and 3200rpm.

Adjusting Airflow Direction:

The fan head can be manually rotated vertically to direct the airflow.

- Gently tilt the fan head up or down to achieve the desired angle. The fan supports up to 90° vertical rotation.

90° Tilt Adjustable

The fan head can rotate vertically at 90° to provide airflow in any desired direction



Figure 5: 90° Tilt Adjustable. This image demonstrates the fan head's ability to rotate vertically by 90 degrees to provide airflow in any desired direction.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your fan.

1. **Power Off and Unplug:** Before cleaning, always ensure the fan is turned off and unplugged from its power source.
2. **Remove Front Cover:** To clean the fan blades, the front cover is removable. Use your thumbs to twist the front cover counterclockwise until it detaches.
3. **Clean Blades and Cover:** Wipe away any dust or debris from the fan blades and the inside of the front cover using a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure all parts are completely dry before reassembly.
4. **Reinstall Front Cover:** Align the grooves on the front cover with the fan body and twist clockwise until it clicks securely into place. Ensure the cover is tightened properly to ensure safety during use.

Removable Cover

Easy to disassemble and clean!



Figure 6: Removable Cover. This image shows a hand removing the front cover of the fan for easy disassembly and cleaning under running water.

Caution: Do not immerse the fan unit in water or any other liquid. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply or loose connection.	Ensure the USB cable is securely plugged into both the fan and a working USB power source. Try a different USB port or adapter.
Fan is noisy.	Fan blades are dirty or obstructed. Fan is on highest speed.	Clean the fan blades as per the Maintenance section. Reduce the fan speed. Ensure the fan is on a stable surface.

Problem	Possible Cause	Solution
Weak airflow.	Fan blades are dirty. Fan is on a low speed setting.	Clean the fan blades. Increase the fan speed setting.

If the problem persists after trying the above solutions, please contact VOXON customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	VOXON
Model Number	EDF02001
Colour	Black
Electric Fan Design	Table Fan
Power Source	Powered by USB
Product Dimensions	6D x 16W x 17H Centimeters
Item Weight	260 Grams
Noise Level	25 dB (at lowest setting)
Wattage	3.3 Watts
Voltage	5 Volts
Blade Material	Plastic
Cable Length	1.5 meters

WARRANTY AND SUPPORT

VOXON provides a **36-month manufacturer warranty** for this USB fan. If you encounter any problems with your table fan, please do not hesitate to contact us.

For warranty claims, technical support, or any inquiries, please refer to the contact information provided on the product packaging or the official VOXON website.

Please retain your purchase receipt as proof of purchase for warranty purposes.

IMPORTANT SAFETY INFORMATION

- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water and moisture. Do not use in wet environments.
- Do not block the air intake or outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the fan from the power source before cleaning or when not in use for extended periods.

- Do not attempt to repair or modify the fan yourself. Refer all servicing to qualified personnel.

© 2025 VOXON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question