

[Manuals.plus](#) /

› [Raymate](#) /

› Raymate Bluetooth Speaker S7 Instruction Manual

Raymate S7

Raymate Bluetooth Speaker S7 Instruction Manual

Model: S7

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Raymate Bluetooth Speaker S7. Designed for portability and high-quality audio, this speaker features IPX7 waterproofing, 30W stereo sound with deep bass, and advanced Bluetooth 5.3 technology for seamless connectivity. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PACKAGE CONTENTS

Upon unboxing your Raymate Bluetooth Speaker S7, please verify that all the following items are included:

- Raymate Bluetooth Speaker (Model S7)
- Type-C Charging Cable
- AUX Audio Cable
- Silicone Lanyard
- User Manual



Image: The Raymate Bluetooth Speaker S7, showcasing its sleek design and waterproof capabilities, along with its included accessories.

PRODUCT OVERVIEW AND FEATURES

The Raymate Bluetooth Speaker S7 is engineered for superior audio performance and durability, making it ideal for various environments.

- **30W Hi-Fi Stereo Sound with Deep Bass:** Experience powerful and immersive audio that fills any space. The speaker delivers rich, clear sound with enhanced bass for an optimal listening experience.
- **IPX7 Waterproof Rating:** Designed to withstand splashes, rain, and even submersion in water up to 1 meter for 30 minutes. This makes it perfect for outdoor activities, pool parties, and use in the shower.
- **Bluetooth 5.3 Technology:** Ensures a stable and fast wireless connection up to 40 meters (100 feet) without signal interference. Compatible with a wide range of devices including smartphones, tablets, laptops, and MP3 players.
- **15-Hour Playtime:** Equipped with a built-in 3600mAh high-capacity rechargeable lithium-ion battery, providing extended music playback on a single charge. Charging time is under 4 hours via the Type-C port.
- **True Wireless Stereo (TWS) Pairing:** Connect up to 100 Raymate S7 speakers simultaneously for an expansive,

synchronized audio experience.

- **Intuitive Rotary Volume Knob:** Easily adjust the volume by rotating the top dial, offering precise control and a satisfying user experience.
- **Portable Design:** Its streamlined cylindrical shape (8.3" D x 3.4" W x 3.2" H) and included silicone lanyard make it easy to carry or attach to backpacks, bikes, or other gear.



Image: An exploded view of the Raymate S7 speaker, highlighting its internal components that deliver 30W Hi-Fi stereo sound with deep bass.

Bluetooth 5.3

Multi-Adapter Connections



Image: Demonstrates the speaker's Bluetooth 5.3 connectivity, showing multiple devices connected within a 40-meter range.

IPX7 100% Waterproof Speaker



Image: The Raymate S7 speaker in a pool environment, illustrating its IPX7 waterproof capability.

Portable Bluetooth Speakers

Enjoy Music All the Way With You

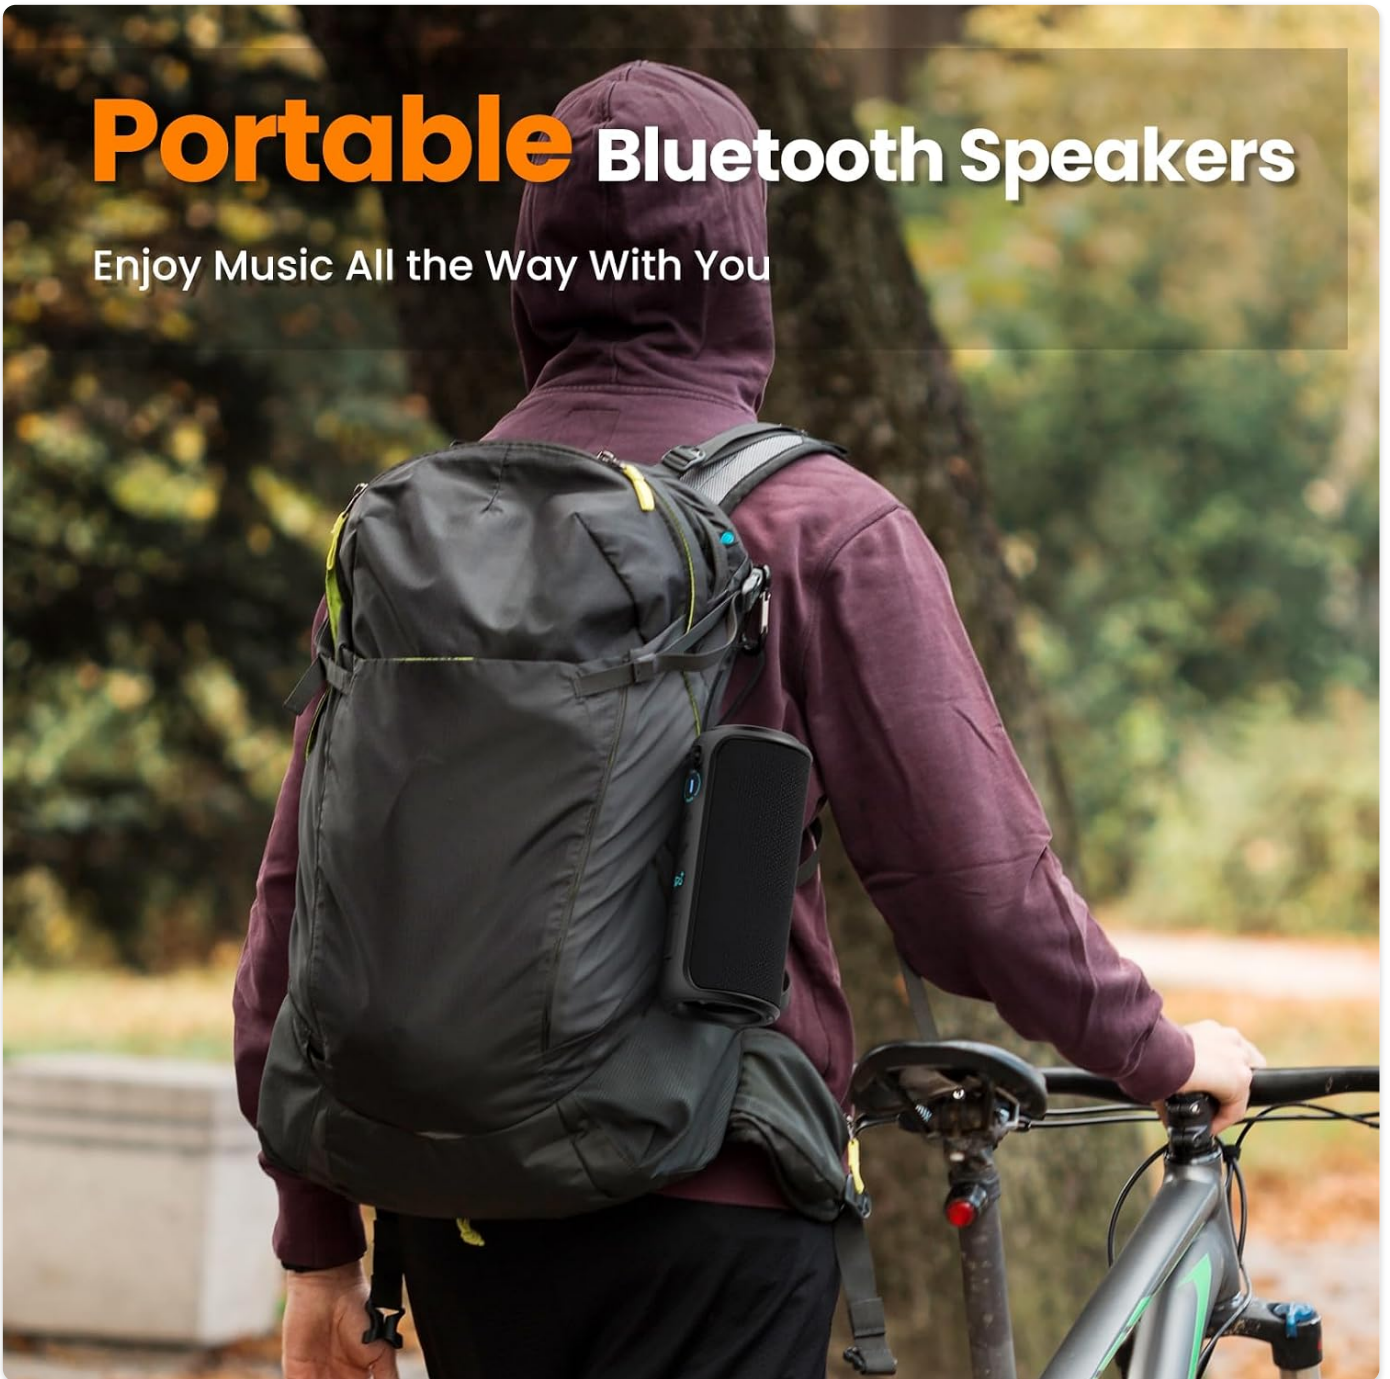


Image: The portable Raymate S7 speaker attached to a backpack with its silicone lanyard, ready for travel.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's charging port (located under the rubber flap on the side) and the other end to a compatible USB power adapter (not included).

- A full charge takes approximately 4 hours.
- The LED indicator will show charging status.

Powering On/Off

Press and hold the Power button (located on the side panel) for 2-3 seconds to turn the speaker on or off. You will hear an audible

prompt indicating the power status.

Bluetooth Pairing

Once powered on, the speaker will automatically enter Bluetooth pairing mode. The LED indicator will flash, indicating it's ready to connect.

1. Enable Bluetooth on your device (smartphone, tablet, etc.).
2. Search for "Raymate S7" in the list of available Bluetooth devices.
3. Select "Raymate S7" to connect. You will hear a confirmation tone once successfully paired.
4. The LED indicator will turn solid blue when connected.

True Wireless Stereo (TWS) Pairing

To achieve a true stereo sound experience, you can pair two Raymate S7 speakers together.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press the TWS pairing button (indicated by a triangle with a plus sign).
3. The primary speaker will search for the secondary speaker. Once found, they will automatically pair.
4. A confirmation tone will sound, and the LED indicators on both speakers will indicate a successful TWS connection.



Image: A detailed diagram of the speaker's control panel, showing the power, volume, and mode/TWS buttons, along with the Type-C and AUX ports.



Image: Two Raymate S7 speakers paired via TWS, providing a wider stereo sound experience in a living room setting.

OPERATION

Basic Controls

Button/Control	Function
Power Button	Press and hold for 2-3 seconds to Power On/Off. Short press to toggle sound mode (if applicable).
Rotary Volume Knob (Top)	Rotate clockwise to increase volume, counter-clockwise to decrease volume. Press down to Play/Pause.
Previous Track Button (Left Triangle)	Short press to go to the previous track.
Next Track Button (Right Triangle)	Short press to go to the next track.
Mode/TWS Button (Triangle with Plus)	Short press to switch between Bluetooth and AUX modes. Press and hold for TWS pairing.
Bass Boost Button (Next to Power)	Press to activate or deactivate bass boost.



Image: Close-up of the speaker's top panel, highlighting the intuitive rotary volume knob for easy adjustment.

Connecting via AUX

For devices without Bluetooth, use the provided AUX audio cable.

1. Open the rubber flap on the side of the speaker.
2. Connect one end of the AUX cable to the speaker's AUX port.
3. Connect the other end to your audio device's headphone jack or AUX output.
4. The speaker will automatically switch to AUX mode, or you may need to press the Mode button.

Your browser does not support the video tag.

Video: An official demonstration of the Raymate Bluetooth Speaker, highlighting its IPX7 waterproof features and wireless capabilities.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your speaker.

- **Cleaning:** Use a soft, damp cloth to clean the speaker's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Waterproofing:** Always ensure the rubber flap covering the charging and AUX ports is securely closed before exposing the speaker to water. While IPX7 rated, prolonged submersion or exposure to high-pressure water jets is not recommended.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

If you encounter any issues with your speaker, refer to the following common problems and solutions:

Problem	Solution
Speaker won't turn on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing LED). Make sure Bluetooth is enabled on your device. Move the speaker closer to your device. Forget "Raymate S7" from your device's Bluetooth list and try pairing again. Restart both the speaker and your device.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is correctly paired or the AUX cable is fully inserted. Check if the audio source is playing.
Sound distortion.	Reduce the volume on both the speaker and your device. Move the speaker closer to your device to avoid interference.
TWS pairing failed.	Ensure both speakers are not connected to any other device. Place speakers close to each other during pairing. Repeat the TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Name	S7
Brand	Raymate

Feature	Detail
Speaker Type	Subwoofer
Connectivity Technology	Bluetooth 5.3
Wireless Range	Up to 40 meters (100 feet)
Speaker Maximum Output Power	30 Watts
Battery Life	Up to 15 Hours
Battery Capacity	3600mAh Lithium Ion
Charging Time	Under 4 Hours
Water Resistance Level	IPX7 (Waterproof)
Product Dimensions	8.3"D x 3.4"W x 3.2"H (approx. 21.2 cm x 8.6 cm x 8.1 cm)
Item Weight	1.74 pounds (approx. 0.79 kg)
Control Method	Touch, Rotary Knob
UPC	768447926252



Image: A visual representation of the Raymate S7 speaker's dimensions.

WARRANTY AND SUPPORT

Raymate products are designed and manufactured to the highest quality standards. For warranty information, technical support, or any inquiries regarding your Raymate Bluetooth Speaker S7, please refer to the contact information provided on the product packaging or visit the official Raymate website.

We are committed to providing excellent customer service and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question