

Byecold GT-A1206PS

Byecold 700 Watt Infrared Wall Heater Instruction Manual

MODEL: GT-A1206PS

This manual provides essential information for the safe and efficient use of your Byecold Infrared Wall Heater. Please read it thoroughly before installation and operation.

1. Introduction

The Byecold Infrared Wall Heater is designed for efficient, comfortable, and healthy indoor heating. Utilizing advanced infrared technology, it provides sun-like warmth without noise, dust, or odors. Its slim design allows for direct wall mounting, saving space and making it ideal for various rooms.

Key Features:

- **Easy On/Off Switch:** Conveniently located on the frame for simple operation.
- **Advanced Infrared Technology:** Heats objects and people directly, similar to sunlight, for a comfortable and healthy environment.
- **Sun-like Radiant Heat:** Provides a pleasant and even warmth throughout the room.
- **Energy Efficient:** Designed to provide effective heating with optimized energy consumption.
- **Silent Operation:** Operates without fans or moving parts, ensuring a quiet heating experience.
- **Overheat Protection:** Built-in safety mechanism to prevent overheating.

Byecold Infrarotheizung



Image: Overview of Byecold Infrared Heater key benefits including healthy and friendly heating, instant warmth, and easy installation.

2. Safety Information

Please read and understand all safety instructions before using your heater to prevent injury or damage.

- **Electrical Safety:** Ensure the heater is plugged into a properly grounded outlet with the correct voltage (230V). Do not overload electrical circuits.
- **Placement:** Maintain a safe distance from flammable materials such as curtains, furniture, and bedding. Do not place the heater directly below a power outlet.
- **Do Not Cover:** Never cover the heater with clothing, towels, or any other material, as this can lead to overheating and fire.
- **Hot Surface:** The surface of the heater becomes hot during operation. Avoid direct contact. Do not mount the heater at heights easily accessible to small children or pets.

- **Indoor Use Only:** This heater is designed for indoor use only. Do not use it outdoors or in wet environments.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Overheat Protection:** The heater is equipped with an overheat protection system that will automatically shut off the unit if it becomes too hot. If this occurs, unplug the heater, allow it to cool, and check for any obstructions before restarting.

3. Setup and Installation

The Byecold Infrared Wall Heater is designed for secure wall mounting. Follow these steps for proper installation:

1. **Unpack:** Carefully remove the heater from its packaging and inspect for any signs of damage. Ensure all mounting accessories are present.
2. **Choose Location:** Select a suitable wall location. Ensure the wall material can support the heater's weight (7 kg) and that there is sufficient clearance around the heater (at least 10 cm from ceilings, floors, and adjacent walls) for proper heat distribution and safety.
3. **Mark Drilling Points:** Use the provided mounting template (if included) or measure the mounting holes on the back of the heater. Mark the drilling points accurately on the wall.
4. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall type.
5. **Insert Wall Plugs:** Insert the wall plugs into the drilled holes.
6. **Attach Brackets:** Secure the mounting brackets to the wall using the screws provided. Ensure they are firmly attached.
7. **Mount Heater:** Carefully lift the heater and align its mounting slots with the brackets. Slide the heater onto the brackets until it clicks securely into place.
8. **Final Check:** Gently tug on the heater to ensure it is securely fastened to the wall.



Image: The heater mounted on a wall, illustrating that mounting accessories are included for installation.



Image: Examples of the infrared heater installed in various indoor settings like a living room, office, bedroom, and dining room.

4. Operating Instructions

Your Byecold Infrared Wall Heater is designed for straightforward operation using the integrated on/off switch.

1. **Power Connection:** After successful installation, plug the heater's power cord into a standard 230V electrical outlet.
2. **Turn On:** Locate the on/off switch on the side or bottom frame of the heater. Flip the switch to the 'I' (On) position. The heater will begin to warm up.
3. **Turn Off:** To turn off the heater, flip the switch to the 'O' (Off) position.
4. **Initial Use:** During the first few hours of operation, a slight odor may be noticeable. This is normal and will dissipate quickly as manufacturing residues burn off. Ensure good ventilation during initial use.



Hauptmerkmale



Sonnenähnliche Heizung

Bequem und Gesund



IR-Beschichtungsoberfläche

Maximierung der Strahlenwirkung,
nicht verfärbt



Infrarot-Technologie

Schnelles Aufheizen

Image: A close-up of the on/off toggle switch on the heater's frame, demonstrating its simple operation.

Leise Heizung, Kein Lärm



Image: Depiction of the heater's silent operation, showing a sleeping child and a graphic comparing its low noise level to other sounds.

5. Maintenance

Proper care and maintenance will ensure the longevity and efficient performance of your Byecold Infrared Wall Heater.

- **Cleaning:** Always unplug the heater from the power outlet and allow it to cool completely before cleaning. Wipe the exterior surface with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- **Dust Removal:** Periodically remove any dust accumulation from the surface using a soft brush or vacuum cleaner with a brush attachment.
- **Cord and Plug Inspection:** Regularly inspect the power cord and plug for any signs of damage, such as cuts, fraying, or loose connections. If any damage is found, discontinue use and contact customer support.
- **Storage:** If the heater will not be used for an extended period, unplug it, clean it thoroughly, and store it in a cool,

dry place, preferably in its original packaging.

6. Troubleshooting

Refer to the table below for common issues and their solutions. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Heater does not turn on.	1. Not plugged in. 2. Power outlet fault. 3. On/Off switch is in 'Off' position.	1. Ensure the power cord is securely plugged into a working outlet. 2. Test the outlet with another appliance. 3. Flip the On/Off switch to the 'On' position.
Heater not heating effectively.	1. Room size exceeds recommended heating area. 2. Obstructions blocking heat radiation. 3. Room is not adequately insulated.	1. Ensure the 700W heater is used in a room within its recommended range (7-9 m²). 2. Remove any objects directly in front of the heater. 3. Consider additional insulation or supplementary heating if the room is very large or poorly insulated.
Heater emits unusual odor during initial use.	New unit burn-off of manufacturing residues.	This is normal for the first few hours of operation. Ensure good ventilation in the room. The odor will dissipate.
Heater suddenly turns off.	Overheat protection activated.	Unplug the heater and allow it to cool down for at least 30 minutes. Check for any obstructions or blockages around the heater. Plug it back in and restart. If it continues to shut off, contact support.

Traditionelle Heizung »



« Infraroth Heizung

Image: Illustrates the difference in heat distribution between traditional convection heating and radiant infrared heating.

7. Product Specifications

Feature	Detail
Brand	Byecold
Model Number	GT-A1206PS
Heat Output	700 Watt
Voltage	230 Volt

Feature	Detail
Dimensions (D x W x H)	2.3 x 90 x 60 cm
Weight	7 Kilogram
Heating Method	Radiant Heat
Recommended Heating Area	7-9 square meters
Mounting Type	Wall Mount
Special Features	Overheat Protection, Energy Efficient, Silent, Fast Heating
Color	White
Indoor/Outdoor Use	Indoor

GRÖSSENÜBERSICHT

 
300 - 900 Watt




Wählen Sie die geeignete
Heizung für Ihr Zimmer




300 Watt, 60x50cm, 3-5m²

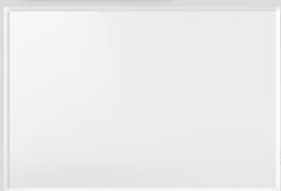

580 Watt, 90x60cm, 6-8m²

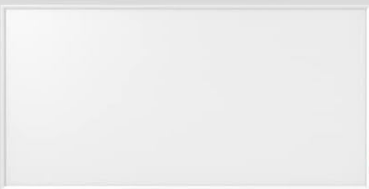 

700 Watt, 120x60cm, 7-9m²

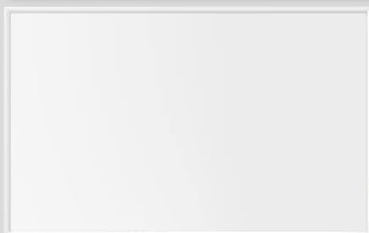 

900 Watt, 120x70cm, 9-12m²

8. Warranty and Support

Byecold is committed to providing high-quality products and excellent customer service. We stand behind the quality of our products, which undergo strict quality control before leaving the factory.

Customer Support: For any questions, concerns, or issues regarding your Byecold Infrared Wall Heater, our dedicated support team is available to assist you. We aim to provide a quick response to all product-related inquiries within 24 hours.

Returns and Replacements: Should you be unsatisfied with your product or require a return or replacement, we have established a dedicated warehouse to efficiently handle these requests.

For further information or to contact support, please visit the official Byecold Store: [Byecold Store on Amazon](#).

© 2026 Byecold. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question