

## Philips HD2350/80

# Philips Series 5000 Sandwich Maker Instruction Manual

**MODEL: HD2350/80**

**Brand: Philips**

## 1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Please read all instructions carefully before using the Philips Series 5000 Sandwich Maker.

- **Hot Surfaces:** The appliance surfaces become hot during use. Do not touch hot surfaces. Always use handles or knobs.
- **Electrical Safety:** Do not immerse the cord, plugs, or appliance in water or other liquid. Do not operate any appliance with a damaged cord or plug.
- **Children:** Close supervision is necessary when any appliance is used by or near children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Placement:** Always place the appliance on a stable, level, heat-resistant surface, away from flammable materials.
- **Ventilation:** Ensure adequate ventilation around the appliance during use.

## 2. Product Overview

The Philips Series 5000 Sandwich Maker, model HD2350/80, is a versatile kitchen appliance designed for preparing a variety of hot snacks. It features a 750W heating element and comes with

three sets of interchangeable non-stick plates for sandwiches, waffles, and grilling.

### Components:

- Main Appliance Unit
- Interchangeable Sandwich Plates (1 set)
- Interchangeable Waffle Plates (1 set)
- Interchangeable Grill Plates (1 set)



The Philips Series 5000 Sandwich Maker, showcasing its versatility with three interchangeable plate sets: sandwich, waffle, and grill.



The compact design of the Philips Series 5000 Sandwich Maker when closed, ready for storage or use.

### 3. Getting Started / Setup

#### Initial Preparation:

1. Unpack the appliance and all accessories. Remove any packaging materials and promotional stickers.
2. Before first use, wipe the exterior of the appliance with a damp cloth. Wash the removable plates with warm soapy water, rinse thoroughly, and dry completely. Ensure the plates are completely dry before attaching them to the appliance.

#### Attaching and Detaching Plates:

- **To Attach Plates:** Align the plate with the hinges and press down firmly until it clicks securely into place. Ensure both the top and bottom plates are securely fastened before use.
- **To Detach Plates:** Locate the plate release buttons (typically on the side or front of the plate attachment area) and press them to release the plates. Carefully lift the plates off the hinges. Always ensure the appliance is cool before handling plates.



+3

### 3 diversi set di piastre

Scambiate le piastre per una varietà di panini croccanti, sandwich pieni e gustosi waffle!

This appliance includes three distinct sets of plates, allowing you to prepare crispy sandwiches, full-filled toasties, and delicious waffles.

## 4. Operating Instructions

1. Ensure the appliance is placed on a stable, heat-resistant surface and the plates are clean and securely attached.
2. Close the appliance and plug it into a grounded wall socket. The power indicator light will illuminate, indicating the appliance is heating up.
3. Allow the appliance to preheat. The readiness indicator light will illuminate when the optimal cooking temperature is reached (approximately 4 minutes).
4. Open the appliance and carefully place your food (e.g., bread with filling, waffle batter) onto the bottom plate. Do not overfill.
5. Close the lid and engage the Easy Lock system. The readiness indicator light may turn off during cooking and re-illuminate as the temperature is maintained.
6. Cook for the desired time, typically 2-5 minutes depending on the food and desired crispness. Monitor cooking progress carefully.
7. Once cooking is complete, open the lid and carefully remove the food using a heat-resistant plastic or wooden utensil. Do not use metal utensils as they can damage the non-stick coating.

8. Unplug the appliance from the wall socket and allow it to cool down completely before cleaning.



## Spie luminose

Le luci indicano chiaramente quando la macchina per panini si sta riscaldando e quando è pronta per l'uso

Clear indicator lights signal when the sandwich maker is preheating and when it has reached the optimal temperature for cooking.



## Riscaldamento uniforme

Assaporate i panini a modo vostro: filanti, appetitosi e perfettamente dorati

Experience perfectly golden and evenly cooked results thanks to the uniform heat distribution across all plates.

## 5. Plate Types and Usage

- **Sandwich Plates:** These plates are designed to cut and seal two sandwiches, preventing fillings from leaking out during cooking. Ideal for classic toasties with various fillings.
- **Waffle Plates:** Use these plates to create perfectly shaped waffles with deep pockets, ready to be topped with your favorite sweet or savory ingredients.
- **Grill Plates:** The grill plates are suitable for grilling paninis, flatbreads, or other items, leaving characteristic grill marks for an authentic grilled appearance and taste.



The versatile plates allow for grilling sandwiches, making waffles, or toasting paninis.

## 6. Cleaning and Maintenance

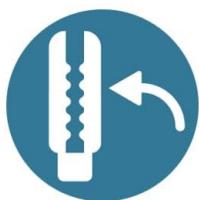
1. Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.
2. Remove the plates by pressing the release buttons. Wash the non-stick plates with warm soapy water and a soft sponge. Rinse thoroughly and dry completely. The plates are not dishwasher safe.
3. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaning agents, scouring pads, or metal brushes, as these can damage the surface and non-stick coating.
4. Never immerse the main unit of the appliance in water or any other liquid.
5. For storage, ensure the appliance is clean and dry. Utilize the integrated cable storage to wrap the power cord neatly. The appliance can be stored vertically to save space.



## Piastre antiaderenti rimovibili

Facile da pulire rimuovendo le piastre, grazie al duraturo rivestimento antiaderente

The non-stick plates are easily removable for hassle-free cleaning under running water, preventing food residue buildup.



## Sistemazione verticale compatta

Posizionate il prodotto in maniera verticale per riporlo comodamente sul piano di lavoro o nella credenza

The compact design allows for convenient vertical storage, saving valuable counter or cabinet space.



### Custodia per cavi incorporata

Per riordinare la cucina, avvolgete il cavo in modo ordinato per riporlo in modo organizzato e senza ingombri



An integrated cable storage system helps keep your kitchen tidy by allowing the power cord to be neatly wrapped and stored.

## 7. Troubleshooting

- **Appliance not heating:** Ensure the appliance is properly plugged into a working power outlet.

Check if the power indicator light is on.

- **Food sticking to plates:** Ensure plates are clean and lightly greased with cooking oil or butter before use (especially for first use or if food tends to stick). Do not use metal utensils, which can damage the non-stick coating.
- **Uneven cooking:** Ensure the appliance is preheated fully until the readiness indicator light illuminates. Distribute food evenly on the plates and avoid overfilling.
- **Lid not closing properly:** Do not overfill the plates. Ensure the plates are correctly installed and aligned with the hinges.

## 8. Technical Specifications

<b>Brand</b>	Philips
<b>Model</b>	HD2350/80
<b>Power</b>	750 W
<b>Voltage</b>	220 V
<b>Dimensions (L x W x H)</b>	23.9 x 11.1 x 23.9 cm
<b>Weight</b>	265 g
<b>Material</b>	Aluminum, Stainless Steel
<b>Special Features</b>	Lightweight, Removable Non-stick Plates, Integrated Cable Storage, Vertical Storage Capability

750W

### 750 W di potenza

Questa robusta piastra per panini da 750 W con riscaldamento rapido rende tutto più croccante e dorato



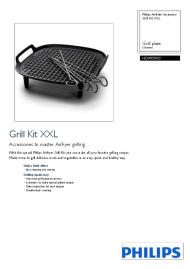
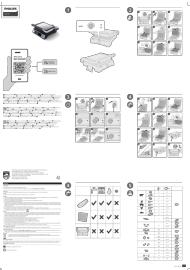
Equipped with 750W of power, this robust sandwich maker ensures rapid heating and efficient cooking for crispy, golden results.

## 9. Warranty and Support

This Philips appliance comes with a standard manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Philips website. You can find more information and contact details on the [Philips Brand Store](#).

© 2025 Philips. All rights reserved.

## Related Documents - HD2350/80

	<p><a href="#">Philips HD2330/90 Sandwich Maker: User Manual, Safety, and Maintenance Guide</a> Official user manual for the Philips HD2330/90 Sandwich Maker. Contains essential safety warnings, operating instructions, cleaning and maintenance tips, and warranty information from Versuni.</p>
	<p><a href="#">Philips HD2350 Sandwich Maker User Manual</a> Comprehensive user manual for the Philips HD2350 Sandwich Maker, covering safety, usage, cleaning, and warranty information in multiple languages.</p>
	<p><a href="#">Philips HD2330 Sandwich Maker - Important Information and User Manual</a> Important safety, usage, cleaning, and warranty information for the Philips HD2330 sandwich maker. This document provides essential guidelines for safe operation and maintenance.</p>
	<p><a href="#">Philips Airfryer Grill Kit XXL: Master Grilling with Ease</a> Discover the Philips Airfryer Grill Kit XXL (HD9959/00) for effortless grilling of meats and vegetables. Features a non-stick grill plate, 6 skewers, easy cleaning, and double-layer cooking capabilities. Get inspired with NutriU recipes.</p>
	<p><a href="#">Philips HD6301 Contact Grill User Manual and Safety Guide</a> Comprehensive user manual for the Philips HD6301 Series 5000 contact grill. Includes safety warnings, operating instructions, cleaning advice, cooking times, warranty information, and recycling guidelines.</p>



## [Philips 5000 Series Hair Straightener BHS510/00 with ThermoShield Technology](#)

Discover the Philips 5000 Series Hair Straightener (BHS510/00) featuring ThermoShield technology for less heat damage, Ionic Care for shiny hair, and Argan-infused plates for smooth styling. Learn about its features, technical specifications, and benefits for effortless hair styling.