

[Manuals.plus](#) /

› [LEDIARY](#) /

› LEDIARY 18.72" Black LED Lantern Flickering Flame Table Lamps (Model MDTD03) - Instruction Manual

LEDIARY MDTD03

LEDIARY 18.72" Black LED Lantern Flickering Flame Table Lamps (Model MDTD03)

Instruction Manual

PRODUCT OVERVIEW

The LEDIARY 18.72" Black LED Lantern Flickering Flame Table Lamps are designed to provide both ambient lighting and a decorative flickering flame effect. This set includes two lamps, featuring a rustic lantern design suitable for various indoor settings.



Image: The LEDIARY table lamp with its main light and flickering flame illuminated, highlighting its design.

PACKAGE CONTENTS

- 2 x LEDIARY 18.72" Black LED Lantern Table Lamps
- 2 x Lampshades
- (Note: Top bulbs (E26 base) are not included and must be purchased separately.)

SETUP INSTRUCTIONS

Follow these steps to assemble and set up your LEDIARY table lamp:

1. **Assemble the Lampshade Rings:** Carefully attach the lampshade rings to form the lampshade structure.
2. **Fix the Lamp Body:** Secure the lamp body to the base.
3. **Assemble the Lampshade:** Place the assembled lampshade onto the lamp body and secure it.
4. **Install Top Bulb (E26 Base):** Insert a compatible E26 base bulb (not included) into the top socket.

5. **Connect to Power:** Plug the lamp into a standard 120V AC power outlet.



Image: Step-by-step visual guide for lamp assembly, including lampshade and lamp body attachment.

LEDIARY

Dimension



Image: Product dimensions and compatible bulb types (E26 Medium base) for the LEDIARY lamp.

OPERATING INSTRUCTIONS

The lamp features a convenient rotary switch located on its base, offering four distinct lighting modes. Rotate the switch clockwise to cycle through the modes:

1. **First Turn:** Both the top light and the flickering flame night light turn ON.
2. **Second Turn:** Only the top light remains ON.
3. **Third Turn:** Only the flickering flame night light remains ON.
4. **Fourth Turn:** Both lights turn OFF.

The lamp remembers the last light status when turned on again.

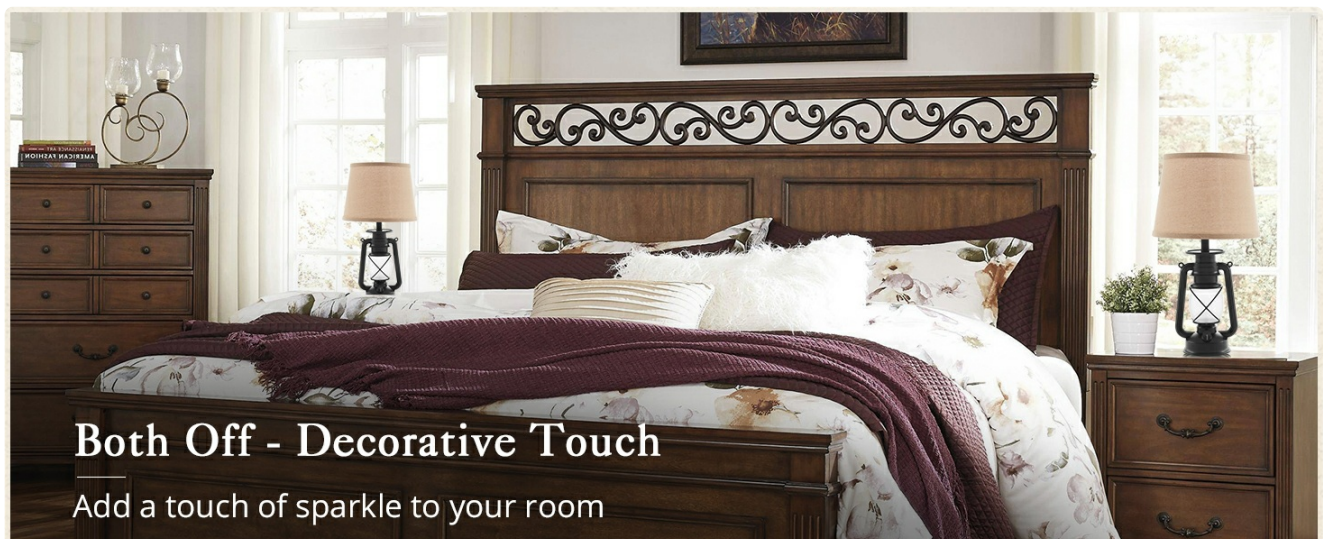


Image: Illustration of the 4-way rotary switch and its corresponding lighting modes.

Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the LEDIARY Black Flash Flame Lantern Table Lamps, showing the different lighting modes and the flickering flame effect. This video is provided by the seller.

MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe the lamp base and shade. Do not use abrasive cleaners or polishes.
- **Bulb Replacement:** Ensure the lamp is unplugged before replacing the top E26 bulb. Allow the bulb to cool completely before handling.
- **Storage:** If storing the lamp, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Lamp Not Turning On:**
 - Check if the power cord is securely plugged into the outlet and the lamp.
 - Ensure the rotary switch is turned to an ON position.
 - Verify that the E26 bulb (for the top light) is correctly installed and not burnt out. Replace if necessary.
- **Flickering Flame Not Working:**
 - Ensure the rotary switch is turned to a mode that includes the flame effect.
 - If the flame effect is still not working, contact customer support.
- **Unstable Lamp:**
 - Ensure the lamp is placed on a flat, stable surface.

- Check that all assembly components are securely tightened.

SPECIFICATIONS

Feature	Detail
Brand	LEDIARY
Model Number	MDTD03
Product Dimensions	9.75"D x 9.75"W x 18.72"H
Color	Serenity Black
Material Type	Resin
Shade Material	Acrylic
Light Source Type	LED
Power Source	Corded Electric
Voltage	120 Volts (AC)
Switch Type	Rotary
Bulb Base	E26 Medium (Top Bulb)
Number of Items	2 (Set)
Indoor Outdoor Usage	Indoor
Water Resistance Level	Waterproof (for flame lantern part, but overall indoor use)

WARRANTY AND SUPPORT

Manufacturer Warranty: This product comes with a 3-year warranty.

Customer Support: For any issues or inquiries, LEDIARY customer support aims to resolve problems within 24 hours. Please refer to your purchase documentation for contact details.

SAFETY INFORMATION

- Always unplug the lamp before cleaning or replacing bulbs.
- Do not expose the lamp to excessive moisture or outdoor elements. While the flame lantern part may have some water resistance, the overall product is intended for indoor use.
- Keep out of reach of children and pets.
- Use only E26 base bulbs that comply with the lamp's voltage requirements (120V AC).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question