

Jocca 8435253575630

JOCCA Digital Air Fryer User Manual

Model: 8435253575630

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual thoroughly before using the appliance and keep it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the cord, plug, or the appliance itself in water or any other liquid to prevent electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not block any ventilation openings. Allow sufficient space around the appliance for proper air circulation.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

PRODUCT OVERVIEW

Components

The JOCCA Digital Air Fryer is designed for healthy cooking with minimal oil. Familiarize yourself with its main parts:



This image shows the JOCCA Digital Air Fryer, a compact black appliance with a prominent digital control panel and a silver-accented pull-out basket handle.

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with touch controls for temperature, time, and preset functions.
- **Frying Basket:** Removable non-stick basket for holding food.
- **Basket Handle:** For safely pulling out and inserting the frying basket.
- **Air Inlet:** Located on the top of the unit.
- **Air Outlet Vents:** Located at the back of the unit.

SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials from the air fryer.
2. **Clean:** Wash the frying basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space around the back and sides, and 10 cm above the appliance for proper ventilation.
4. **Preheat (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C (350°F) to burn off any manufacturing odors. A slight smell may be present, which is normal.

OPERATING INSTRUCTIONS

Control Panel

The digital control panel allows you to easily set cooking parameters:

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control:** Use '+' and '-' buttons to adjust temperature.
- **Time Control:** Use '+' and '-' buttons to adjust cooking time.
- **Preset Functions:** Icons for common food types (e.g., fries, chicken, fish) that automatically set recommended time and temperature.

Basic Operation

- Prepare Food:** Place your ingredients in the frying basket. Do not overfill the basket to ensure even cooking.
- Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
- Power On:** Plug the power cord into a grounded wall outlet. The display will light up.
- Set Time & Temperature:** Manually adjust the cooking time and temperature using the respective controls, or select a preset function.
- Start Cooking:** Press the Power button to start the cooking process.
- Shake Basket (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even browning. Pull out the basket, shake, and reinsert. The air fryer will resume cooking.
- Finish Cooking:** The air fryer will beep when the set time has elapsed. Carefully pull out the basket and check if the food is cooked to your preference.
- Serve:** Use tongs to remove food from the basket. Do not tip the basket directly as excess oil may collect at the bottom.
- Power Off:** Unplug the appliance after use.

Cooking Tips

- For crispier results, lightly toss food with a small amount of oil (1-2 tablespoons) before air frying.
- Smaller pieces of food generally require less cooking time than larger pieces.
- Preheating the air fryer for 3-5 minutes before adding food can improve cooking results.
- You can reheat food in the air fryer. Set the temperature to 150°C (300°F) for about 10 minutes.

MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your air fryer.

- Unplug and Cool:** Always unplug the air fryer and allow it to cool down completely before cleaning.
- Clean Basket & Pan:** Remove the frying basket. Wash the basket and any removable accessories in hot soapy water. For stubborn residue, soak them in warm water for about 10 minutes. They are generally dishwasher safe, but hand washing is recommended to prolong the non-stick coating.
- Clean Interior:** Wipe the inside of the appliance with a damp cloth. If necessary, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
- Dry Thoroughly:** Ensure all parts are completely dry before reassembling and storing the appliance.

Storage

Store the air fryer in a cool, dry place when not in use. Ensure the power cord is neatly wrapped and secured.

TROUBLESHOOTING

If you encounter issues with your air fryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet.
Food is not cooked evenly.	Basket is overfilled. Food pieces are too large. Food was not shaken.	Do not overfill the basket; cook in smaller batches. Cut food into smaller, more uniform pieces. Shake the basket halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use. High fat content food.	Clean the basket and pan thoroughly after each use. For fatty foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Food is not crispy.	Not enough oil used (for some foods). Temperature too low or time too short.	Lightly toss food with a small amount of oil. Increase temperature or cooking time.

SPECIFICATIONS

Feature	Specification
Model Number	8435253575630
Brand	Jocca
Capacity	74 Liters (Note: This capacity may refer to packaging volume or be a typo; typical air fryer capacity is in single-digit liters.)
Wattage	1800 Watts
Color	Black
Package Dimensions	45 x 36 x 24 cm
Package Weight	800 g

WARRANTY AND CUSTOMER SUPPORT

This JOCCA appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact JOCCA customer support. Contact information can typically be found on the product packaging, the official JOCCA website, or your purchase receipt.

When contacting support, please have your product model number (8435253575630) and proof of purchase readily available.

Related Documents

 REF: 2219P	<p>JOCCA 2219P Air Fryer: User Manual & Operating Guide</p> <p>Discover the JOCCA 2219P Air Fryer. This comprehensive guide provides essential safety information, operating instructions, preset cooking programs, and maintenance tips for healthier, convenient home cooking.</p>
 Ref: 1507	<p>JOCCA Air Fryer 1507: User Manual and Instructions</p> <p>Comprehensive user manual for the JOCCA Air Fryer 1507, providing detailed instructions, safety warnings, cleaning guidelines, and technical specifications in multiple languages.</p>
 Ref: 1228	<p>JOCCA 1228 Air Cooler User Manual and Instructions</p> <p>User manual for the JOCCA 1228 personal air cooler. Find instructions on operation, safety, cleaning, technical specifications, and environmental recycling information. Keep your space cool and comfortable with JOCCA.</p>
 Ref: 1507	<p>JOCCA Air Fryer 1507 User Manual</p> <p>Comprehensive instructions and safety warnings for the JOCCA Air Fryer model 1507. Learn how to use, clean, and maintain your air fryer for optimal performance.</p>