

Mixx MTRP-SV-BK-349

Mixx Tribute Stereo Vinyl Turntable

USER MANUAL

Introduction

Thank you for choosing the Mixx Tribute Stereo Vinyl Turntable. This portable record player is designed to deliver an authentic vinyl listening experience with the convenience of modern features. It includes integrated stereo speakers for direct playback and Bluetooth connectivity for streaming to external speakers or receiving audio from your devices. This manual provides essential information for setting up, operating, and maintaining your turntable.



Figure 1: The Mixx Tribute Stereo Vinyl Turntable in its open position, showcasing a vinyl record on the platter and the tonearm positioned for playback. The integrated speakers are visible on the sides.

Safety Information

Please read all safety warnings and instructions before using this product to ensure safe operation and prevent damage.

- **Power Source:** Use only the provided power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or liquids. Keep away from water sources.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate airflow around the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the unit before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Handling:** Handle the tonearm and stylus with care to prevent damage.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

Package Contents

Verify that all items are present in the package:

- Mixx Tribute Stereo Vinyl Turntable
- Power Adapter
- 45 RPM Adapter
- Durable Carrying Case (integrated with the turntable)
- User Manual (this document)

Product Overview

Familiarize yourself with the main components and controls of your Mixx Tribute turntable.



Figure 2: Top-down view of the Mixx Tribute Turntable, highlighting the platter, tonearm, and control panel. The control panel includes the pitch adjustment, speed selector, auto-stop switch, and volume knob.

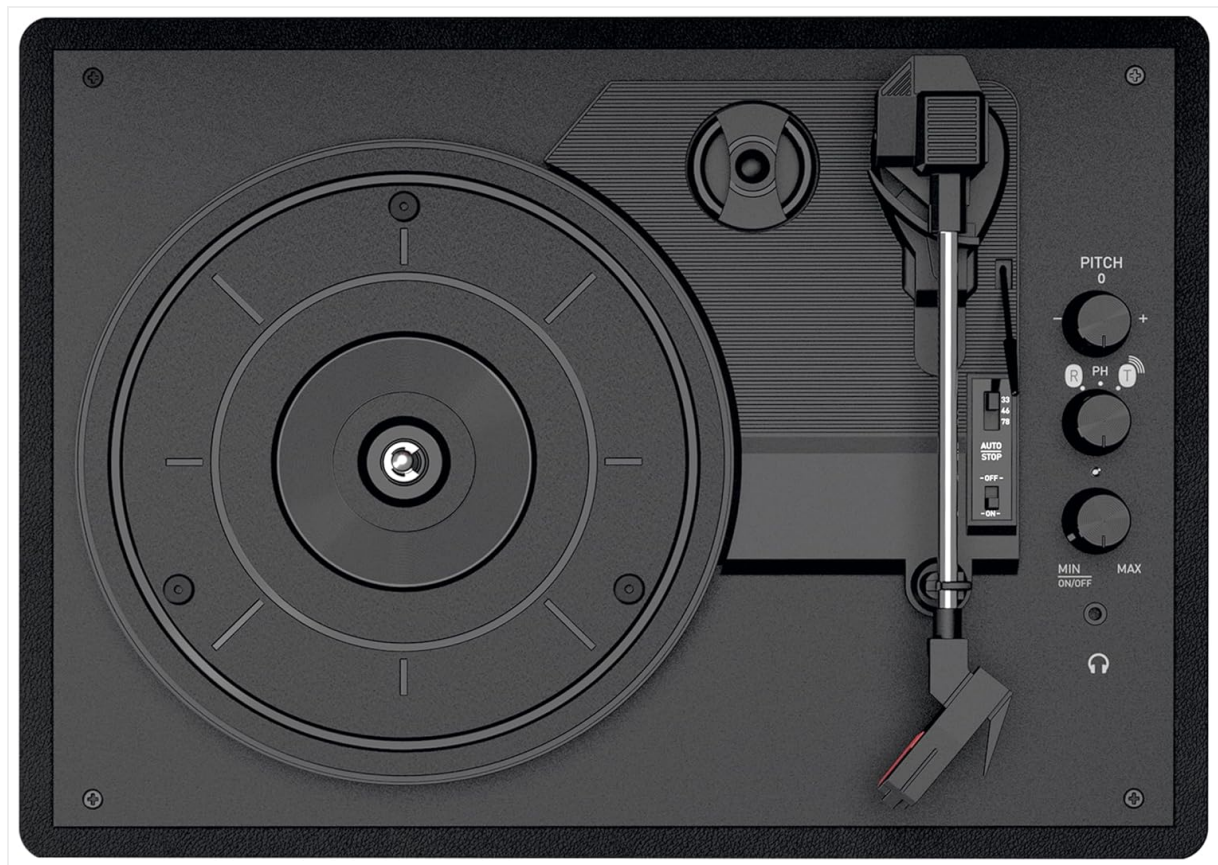


Figure 3: Rear view of the Mixx Tribute Turntable, showing the RCA audio output ports (L/R), AUX IN port, and DC 12V power input.

Front/Top Panel Controls:

- **Platter:** Where the vinyl record rests.
- **Tonearm:** Holds the stylus and tracks the record grooves.
- **Stylus (Needle):** The part that reads the record.
- **45 RPM Adapter:** Used for playing 7-inch records with large center holes.
- **Speed Selector (33/45 RPM):** Switch to select playback speed.
- **Auto Stop Switch:** Enables/disables automatic stopping of the platter at the end of a record.
- **Pitch Control:** Adjusts the playback speed slightly.
- **Volume Knob (MIN/MAX):** Controls the output volume of the integrated speakers and line out.
- **Power/Volume Knob (ON/OFF):** Turns the unit on/off and adjusts volume.
- **Headphone Jack:** For private listening.

Rear Panel Ports:

- **RCA Audio Output (L/R):** Connects to external amplifiers or powered speakers.
- **AUX IN:** Connects external audio devices (e.g., smartphone, tablet) via a 3.5mm audio cable.
- **DC 12V Power Input:** Connects the power adapter.

Setup

1. **Unpack:** Carefully remove the turntable from its packaging. Retain the packaging for future transport or storage.

2. **Placement:** Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibrations.
3. **Power Connection:** Connect the DC 12V power adapter to the DC 12V input port on the back of the turntable, then plug the adapter into a wall outlet.
4. **Remove Stylus Protector:** Gently remove the clear plastic stylus protector from the stylus. Be careful not to bend the stylus.
5. **Open Lid:** Open the lid of the turntable.

Operating Instructions

Playing a Vinyl Record:

1. **Power On:** Turn the Power/Volume knob clockwise to turn on the unit. The power indicator light will illuminate.
2. **Select Speed:** Set the speed selector switch to 33 RPM for LPs or 45 RPM for singles. If playing a 45 RPM single with a large center hole, place the included 45 RPM adapter on the spindle.
3. **Place Record:** Carefully place a vinyl record on the platter.
4. **Auto Stop:** Set the Auto Stop switch to ON if you want the platter to stop spinning automatically when the record finishes. Set to OFF for continuous play.
5. **Position Tonearm:** Gently lift the tonearm using the tonearm lift lever. Move the tonearm over the desired starting track of the record.
6. **Lower Tonearm:** Slowly lower the tonearm onto the record using the tonearm lift lever. The record will begin to play.
7. **Adjust Volume:** Adjust the volume using the Volume knob.
8. **End of Playback:** When the record finishes (if Auto Stop is ON), the platter will stop. If Auto Stop is OFF, manually lift the tonearm and return it to the tonearm rest.

Bluetooth Output (Connecting to External Bluetooth Speakers):

The Mixx Tribute can stream audio wirelessly to external Bluetooth speakers.

1. Ensure your external Bluetooth speaker is in pairing mode.
2. Turn on the Mixx Tribute turntable. It will automatically enter Bluetooth pairing mode (the Bluetooth indicator light may flash).
3. The turntable will search for and connect to nearby Bluetooth speakers. Once connected, the Bluetooth indicator light will become solid.
4. Play a record, and the audio will be streamed to your connected Bluetooth speaker.

Bluetooth Input (Connecting a Smartphone/Tablet):

You can also use the Mixx Tribute as a Bluetooth speaker for your smartphone or tablet.

1. Turn on the Mixx Tribute turntable.
2. On your smartphone or tablet, go to Bluetooth settings and search for available devices.
3. Select "Mixx Tribute" (or similar name) from the list of devices to pair.
4. Once connected, you can play audio from your device through the turntable's integrated speakers.

Using AUX IN:

Connect external audio devices (e.g., MP3 player, smartphone) to the turntable using a 3.5mm audio cable (not included) plugged into the AUX IN port on the back. The audio will play through the turntable's integrated speakers.

Using RCA Audio Output:

Connect the RCA L/R output ports on the back of the turntable to an external amplifier or powered speakers using an RCA cable (not included) for enhanced sound.

Maintenance

- **Stylus Care:** The stylus is delicate. Clean it periodically with a soft brush, brushing from back to front. Do not touch the stylus with your fingers.
- **Unit Cleaning:** Wipe the turntable with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Record Care:** Keep your records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **Storage:** When not in use, close the lid to protect the platter and tonearm from dust. If storing for an extended period, unplug the unit and place the stylus protector back on.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working.	Ensure power adapter is securely connected to the unit and a working wall outlet.
No sound from speakers	Volume too low; external speakers not connected/powerd; Bluetooth not paired.	Increase volume. Check external speaker connections/power. Re-pair Bluetooth devices.
Record skipping	Record is dirty or scratched; stylus is dirty or damaged; turntable not level.	Clean record. Clean or replace stylus. Ensure turntable is on a flat, stable surface.
Sound distorted	Volume too high; dirty stylus; damaged record.	Lower volume. Clean stylus. Try a different record.
Platter not spinning	Power off; Auto Stop engaged prematurely; belt issue.	Check power. Try setting Auto Stop to OFF. Contact support if belt issue suspected.

Specifications

Feature	Detail
Brand	Mixx
Model Name	Tribute
Model Number	MTRP-SV-BK-349
Color	Black

Feature	Detail
Connections	Bluetooth, RCA Audio Out, AUX In, Headphone Jack
Special Features	Integrated Speaker, Portable Design, Auto Stop
Compatible Devices	External Speakers, Smartphone, Tablet
Max Rotation Speed	45 RPM (supports 33 RPM)
Included Components	Carrying case, 45 RPM adapter
Material	Aluminum
Style	Vintage
Motor Type	AC Motor



Warranty and Support

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Mixx website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please contact Mixx customer support for assistance.

© 2023 Mixx. All rights reserved.

Related Documents

	<p>MIXX Tribute Vinyl Record Player Quick Start Guide</p> <p>Get started quickly with your MIXX Tribute Vinyl Record Player. This guide provides setup instructions, operation steps, and essential safety information for optimal use.</p>
	<p>MIXX Tribute Vinyl Record Player Quick Start Guide</p> <p>Get started with your MIXX Tribute Vinyl Record Player. This quick start guide covers setup, playback, connectivity, maintenance, and safety instructions.</p>



[MIXX StreamQ D2 Wireless Bluetooth Headphones Quick Start Guide](#)

Your essential guide to setting up and using the MIXX StreamQ D2 wireless Bluetooth headphones. Learn about pairing, charging, app features, and important safety information.



[MIXX StreamBuds Sports Charge 2 True Wireless Earbuds - Quick Start Guide & Warnings](#)

Concise HTML guide for MIXX StreamBuds Sports Charge 2 true wireless earbuds, covering how to wear, product details, and regulatory warnings. Features multilingual support and detailed product information.