

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [STANLEY](#) /

› [Stanley SXPW24BX Pressure Washer User Manual](#)

STANLEY SXPW24BX

Stanley SXPW24BX Pressure Washer User Manual

Model: SXPW24BX

1. PRODUCT OVERVIEW

The Stanley SXPW24BX is a high-pressure washer designed for effective cleaning of outdoor domestic surfaces, vehicles, and tools. It features a powerful motor and comes with various accessories to tackle different cleaning tasks.



Figure 1: Stanley SXPW24BX Pressure Washer and included accessories.

1.1 Key Features

- Ideal for cleaning stubborn dirt on outdoor domestic surfaces, cars, motorcycles, floors, stairs, swimming pools, tools, and walls.
- Maximum pressure of 170 bar.
- Power consumption of 2400 W.
- Maximum flow rate of 500 liters per hour.
- Maximum water supply temperature of 50°C.
- Static hose reel with locking system for easy storage.
- Quick-connect water inlet with inspectable filter to prevent impurities.

1.2 Package Contents

The following items are included with your Stanley SXPW24BX Pressure Washer:

- Pressure Washer Unit
- Pistol (Spray Gun)
- Lance
- High-Pressure Hose (6 meters)
- Rotary Jet Nozzle

- Adjustable Jet Nozzle
- Foam Kit (0.4 liters)
- Fixed Brush
- Patio Cleaner Deluxe
- Flexible Adapter

2. SETUP

2.1 Assembly

1. Unpack all components from the packaging.
2. Attach the wheels to the main unit if not pre-assembled.
3. Connect the high-pressure hose to the pressure washer unit and the spray gun. Ensure connections are secure.
4. Attach the desired nozzle or accessory (e.g., rotary jet nozzle, adjustable jet nozzle, or patio cleaner) to the lance.
5. Connect the lance to the spray gun.

2.2 Water Connection

Connect the pressure washer to a suitable water supply. The unit features a quick-connect water inlet with an inspectable filter. Ensure the filter is clean before connecting.



Figure 2: Rear view of the pressure washer, highlighting the water inlet connection point.

2.3 Power Connection

Connect the power cable to a grounded electrical outlet. Ensure the power supply matches the specifications of the pressure washer (2400 W).

3. OPERATING INSTRUCTIONS

3.1 Starting the Pressure Washer

1. Ensure all connections (water, hose, power) are secure.
2. Turn on the water supply completely.
3. Press the power switch on the unit to the "ON" position.
4. Squeeze the trigger on the spray gun to release air from the system until a steady stream of water emerges.



Figure 3: Proper stance and operation of the pressure washer.

3.2 Using Different Nozzles and Accessories

The Stanley SXPW24BX comes with various nozzles and accessories for different cleaning tasks:

- **Rotary Jet Nozzle:** Provides a powerful, concentrated rotating jet for stubborn dirt and hard surfaces like concrete.
- **Adjustable Jet Nozzle:** Allows adjustment from a wide fan spray to a concentrated pencil jet for versatile cleaning.
- **Foam Kit:** Attach to the spray gun to apply detergent for enhanced cleaning. Fill the 0.4L tank with appropriate pressure washer detergent.
- **Fixed Brush:** Ideal for gentle cleaning of sensitive surfaces, often used with detergent.
- **Patio Cleaner Deluxe:** Designed for efficient and splash-free cleaning of large flat surfaces like patios and driveways.



Figure 4: The Patio Cleaner Deluxe attachment effectively cleaning a surface.

3.3 Total Stop System (TSS)

The unit is equipped with a Total Stop System (TSS) which automatically shuts off the motor when the trigger is released. This prolongs the life of the pump and saves energy. The motor restarts when the trigger is squeezed again.

4. MAINTENANCE

4.1 Cleaning the Water Inlet Filter

Regularly inspect and clean the water inlet filter to prevent impurities from entering the pump. To clean, disconnect the water supply, remove the filter, rinse it under running water, and reinsert it.

4.2 Hose Reel Management

After use, utilize the static hose reel with its locking system to neatly store the high-pressure hose. This prevents kinks and extends the hose's lifespan.

4.3 Storage

Before storing, ensure all water is drained from the pump and hoses, especially in freezing temperatures. Store the pressure washer in a dry, protected area.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No water pressure	Water supply off or restricted	Ensure water supply is fully open.
	Clogged water inlet filter	Clean the water inlet filter.
	Air in the pump	Squeeze trigger with water supply on until steady stream emerges.
Motor not starting	No power supply	Check power connection and outlet.
	Thermal overload activated	Allow unit to cool down for 30 minutes.
Pulsating pressure	Air in the pump	Bleed air from the system by squeezing trigger.
	Insufficient water supply	Ensure adequate water flow to the unit.

6. SPECIFICATIONS

Specification	Value
Model	SXPW24BX
Brand	STANLEY
Maximum Pressure	170 bar
Power Consumption	2400 W
Maximum Flow Rate	500 l/h
Maximum Water Supply Temperature	50°C
High-Pressure Hose Length	6 meters
Weight	12.1 kg
Product Dimensions (L x W x H)	28 x 25.3 x 70.5 cm
Detergent Tank Volume	0.4 Liters (Foam Kit)

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official STANLEY website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Annovi Reverberi spa

Brand Store: [STANLEY Amazon Store](#)