

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [STANLEY](#) /

› [Stanley SXPW24B Pressure Washer User Manual](#)

## STANLEY SXPW24B

# Stanley SXPW24B Pressure Washer User Manual

Model: SXPW24B

### INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Stanley SXPW24B High-Pressure Cold Water Washer. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Stanley SXPW24B is designed for cleaning stubborn dirt on various outdoor domestic surfaces, including cars, motorcycles, floors, stairs, swimming pools, tools, and walls.



Image: Stanley SXPW24B Pressure Washer shown with its main unit, spray gun, lance, and foam kit.

## SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply matches the voltage specified on the product label.
- Do not direct the water jet at people, animals, electrical equipment, or the appliance itself.
- Wear appropriate personal protective equipment, including eye protection.
- Keep children and pets away from the operating area.
- Always disconnect the power supply before performing any maintenance or cleaning.

- The appliance features a **Total Stop System**, which automatically shuts off the motor when the trigger is released, prolonging pump life.
- A **safety valve** regulates internal pressure, preventing overloads.
- The trigger includes a **safety lock** to prevent accidental activation.

## INCLUDED COMPONENTS

The Stanley SXPW24B pressure washer comes with the following components:

- Main Pressure Washer Unit
- Spray Gun
- Lance
- High-Pressure Hose (6 meters)
- Rotary Jet Nozzle
- Adjustable Jet Nozzle
- Foam Kit (0.4 liters)
- Quick-Connect Water Inlet with Inspectable Filter





Image: Front view of the Stanley SXPW24B Pressure Washer, highlighting the main unit and hose reel.

## SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage.

2. **Assembly:**

- Attach the wheels to the main unit if not already pre-assembled.
- Connect the high-pressure hose to the pressure washer outlet and the spray gun. Ensure connections are secure.
- Select the desired nozzle (rotary or adjustable) and attach it to the lance, then connect the lance to the spray gun.

3. **Water Connection:**

- Connect a garden hose to the quick-connect water inlet on the pressure washer. Ensure the inspectable filter is clean and properly seated.
- Connect the other end of the garden hose to a water tap.
- Turn on the water tap fully to ensure a steady water supply to the pressure washer.



Image: Diagram illustrating the water intake connection for the pressure washer, showing the flow from a water source to the unit.

4. **Electrical Connection:** Plug the power cord into a suitable grounded electrical outlet. Ensure the outlet meets the power requirements of the unit (2400 W).
5. **Priming the Pump:** Before turning on the power, squeeze the trigger on the spray gun to allow water to flow through the system and expel any air. Continue until a steady stream of water emerges from the nozzle. This prevents damage to the pump.

## OPERATING INSTRUCTIONS

1. **Starting the Unit:** Once primed, turn on the pressure washer using the ON/OFF switch. The motor will start.
2. **Using the Spray Gun:**
  - Point the nozzle at the surface to be cleaned, keeping a safe distance.
  - Squeeze the trigger to activate the high-pressure water jet.
  - Adjust the spray pattern using the adjustable jet nozzle as needed. The rotary jet nozzle provides a more concentrated, powerful spray for stubborn dirt.



Image: A close-up view of the pressure washer nozzle emitting a powerful stream of water, demonstrating its cleaning capability.



Image: A person operating the Stanley pressure washer to clean a paved outdoor surface, showing the unit and the user in action.

### 3. Using the Foam Kit:

- Fill the 0.4-liter foam kit with appropriate pressure washer detergent.
- Attach the foam kit to the spray gun.
- Activate the spray gun to apply foam to the desired surface.
- Allow the foam to dwell for a few minutes before rinsing with clear water.

4. **Stopping the Unit:** Release the trigger. The Total Stop System will turn off the motor. For prolonged breaks or when finished, turn off the ON/OFF switch and disconnect the power.

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **After Each Use:**

- Turn off the unit and water supply.
  - Squeeze the trigger to release any remaining pressure in the system.
  - Disconnect the water hose and power cord.
  - Rewind the high-pressure hose onto the static hose reel using the locking system to keep it tidy.
  - Clean the exterior of the unit with a damp cloth.
- **Water Inlet Filter:** Regularly inspect and clean the water inlet filter to prevent impurities from entering the pump. Remove the quick-connect fitting and rinse the filter under running water.
  - **Nozzle Cleaning:** If the spray pattern becomes irregular or pressure drops, the nozzle may be clogged. Use the provided nozzle cleaning tool (if applicable) or a thin wire to clear any obstructions.
  - **Storage:** Store the pressure washer in a dry, frost-free environment. If storing for extended periods, especially in cold climates, ensure all water is drained from the pump and hoses to prevent freezing damage.

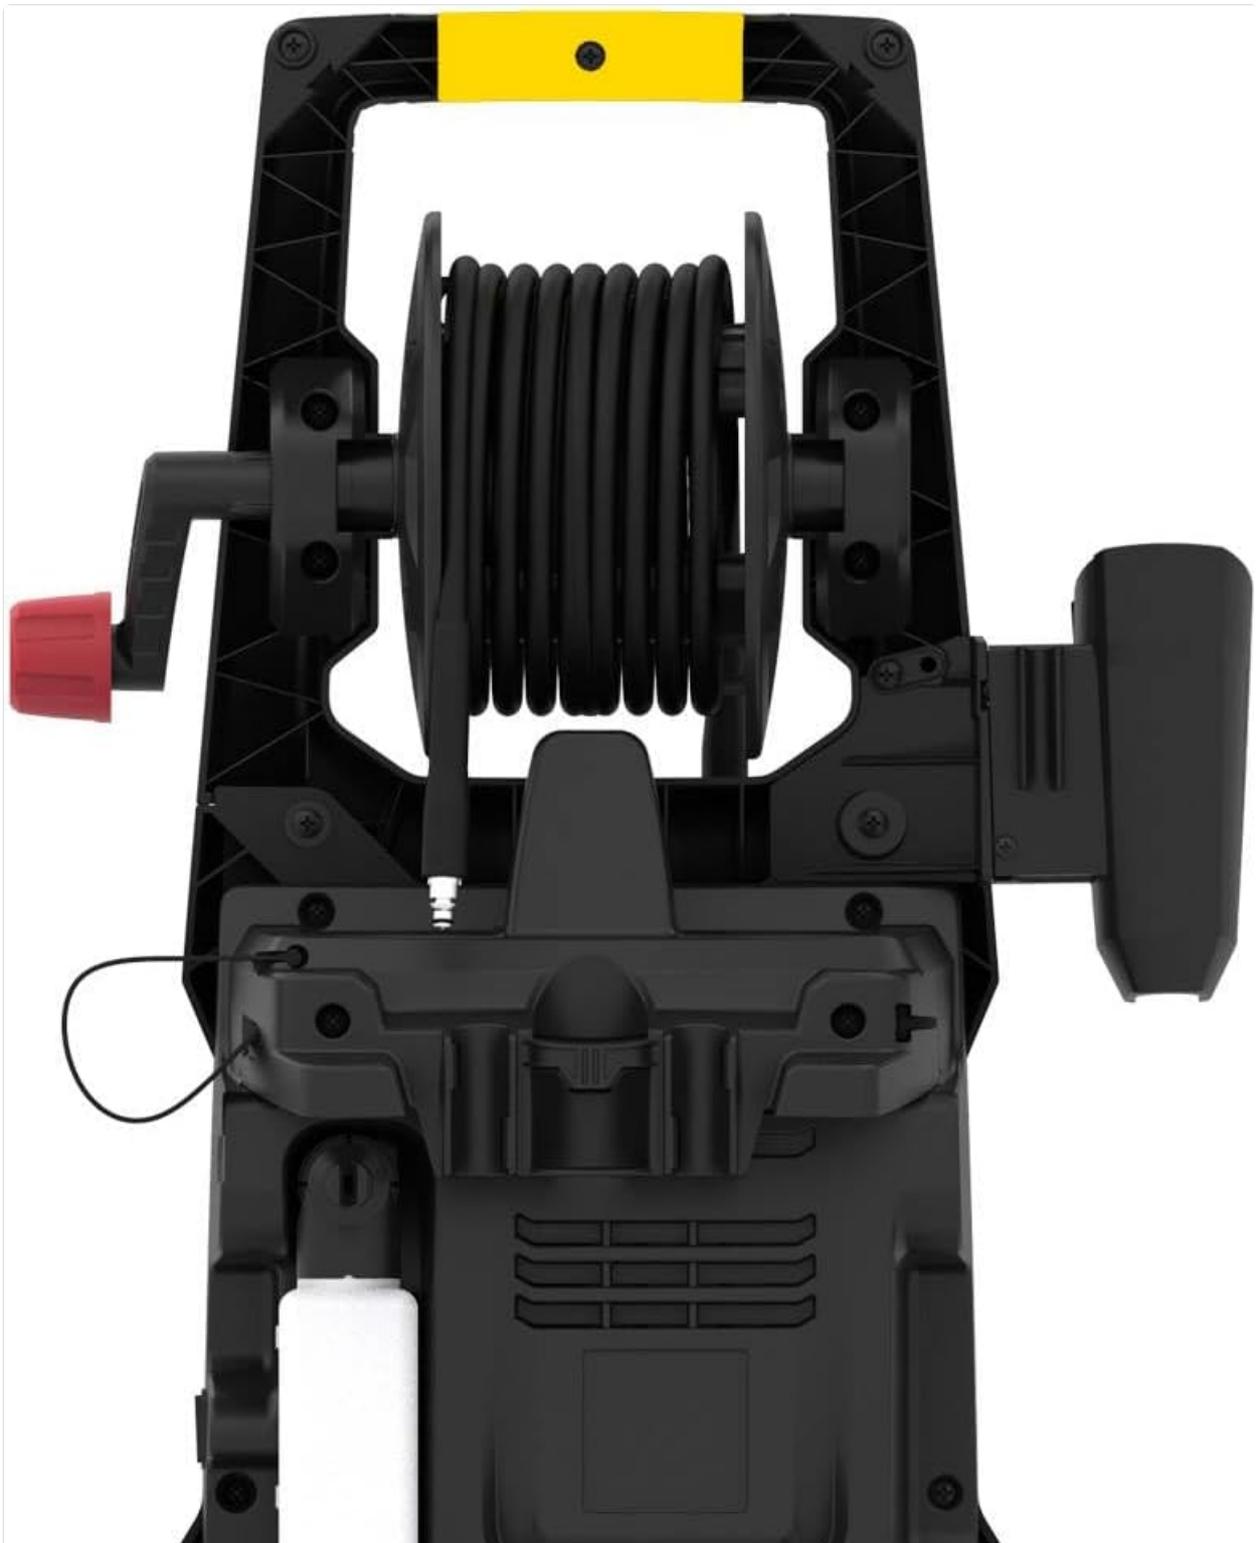




Image: Side view of the Stanley SXPW24B Pressure Washer, showing its compact design and wheels for easy transport.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	No power supply; ON/OFF switch off; Thermal overload activated.	Check power connection and outlet; Turn ON/OFF switch to ON; Allow unit to cool down for 30 minutes.
Low pressure or no pressure	Insufficient water supply; Air in pump; Clogged nozzle; Kinked hose.	Ensure water tap is fully open; Prime the pump (see Setup); Clean the nozzle; Straighten the hose.
Motor stops frequently	Total Stop System activating due to trigger release; Overheating.	This is normal operation for the Total Stop System; Allow unit to cool if continuously stopping without trigger release.
Water leaks	Loose connections; Damaged O-rings.	Tighten all connections; Inspect and replace damaged O-rings.

## SPECIFICATIONS

Feature	Specification
Model	SXPW24B
Brand	STANLEY

Feature	Specification
Power Consumption	2400 W (2.4 kW)
Max Pressure	170 bar
Max Flow Rate	500 l/h
Max Inlet Water Temperature	50°C
Hose Length	6 meters
Item Weight	11.1 kg
Product Dimensions (L x W x H)	28 x 25.3 x 70.5 cm
Special Features	Wheels, Static Hose Reel, Total Stop System
Color	Black and Yellow
Compliance	CE

## WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts, please refer to the warranty card included with your product or visit the official STANLEY website. Keep your proof of purchase for warranty claims.

Manufacturer: Annovi Reverberi spa