

iJoy

iJoy Disney Lilo and Stitch Bluetooth Shower Speaker User Manual

Model: Disney Shower Speaker (UPC: 810116719501)

1. INTRODUCTION

Thank you for choosing the iJoy Disney Lilo and Stitch Bluetooth Shower Speaker. This portable, water-resistant speaker is designed to enhance your shower or bath experience with high-quality audio and convenient hands-free calling. Its unique Stitch design and robust features make it a fun and functional addition to your daily routine. Please read this manual carefully before use to ensure proper operation and maintenance.

2. PACKAGE CONTENTS

- 1 x iJoy Disney Lilo and Stitch Bluetooth Shower Speaker
- 1 x Charging Cable (Micro-USB)

3. PRODUCT FEATURES

- **IPX4 Water Resistant:** Designed to withstand splashes and water, ensuring durability in shower environments.
- **Strong Suction Cup:** Easily attach the speaker to any smooth surface in your shower or bathroom for secure placement.
- **Extended Playtime:** Enjoy up to 5 hours of continuous music playback on a single charge.
- **Built-in Controls:** Intuitive touch controls for power, play/pause, skipping tracks, adjusting volume, and answering calls.
- **Built-in Microphone:** Allows for hands-free phone calls directly through the speaker.
- **Bluetooth Connectivity:** Connects wirelessly to your smartphone or tablet with a range of up to 30 feet.

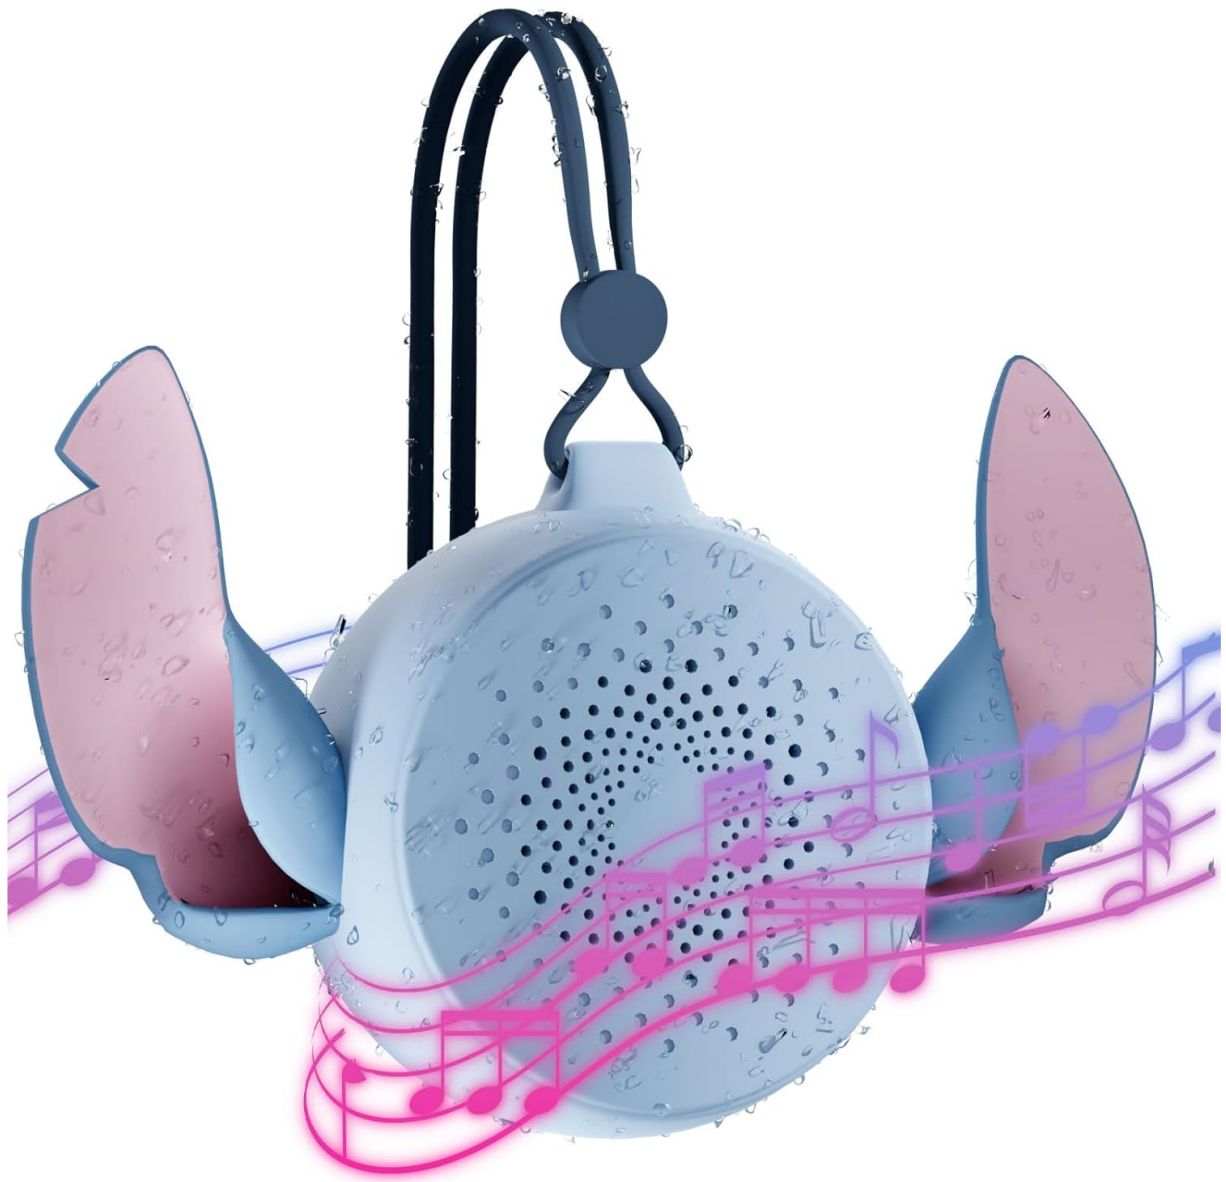


Figure 1: Front view of the iJoy Disney Lilo and Stitch Bluetooth Shower Speaker.

Suction Grip and Lanyard for Easy Hanging

Play your favorite music
in the shower



Figure 2: The speaker featuring its strong suction cup and lanyard for easy hanging on smooth surfaces.



Figure 3: Demonstrating the IPX4 splash-proof capability, resistant to water droplets and splashes.

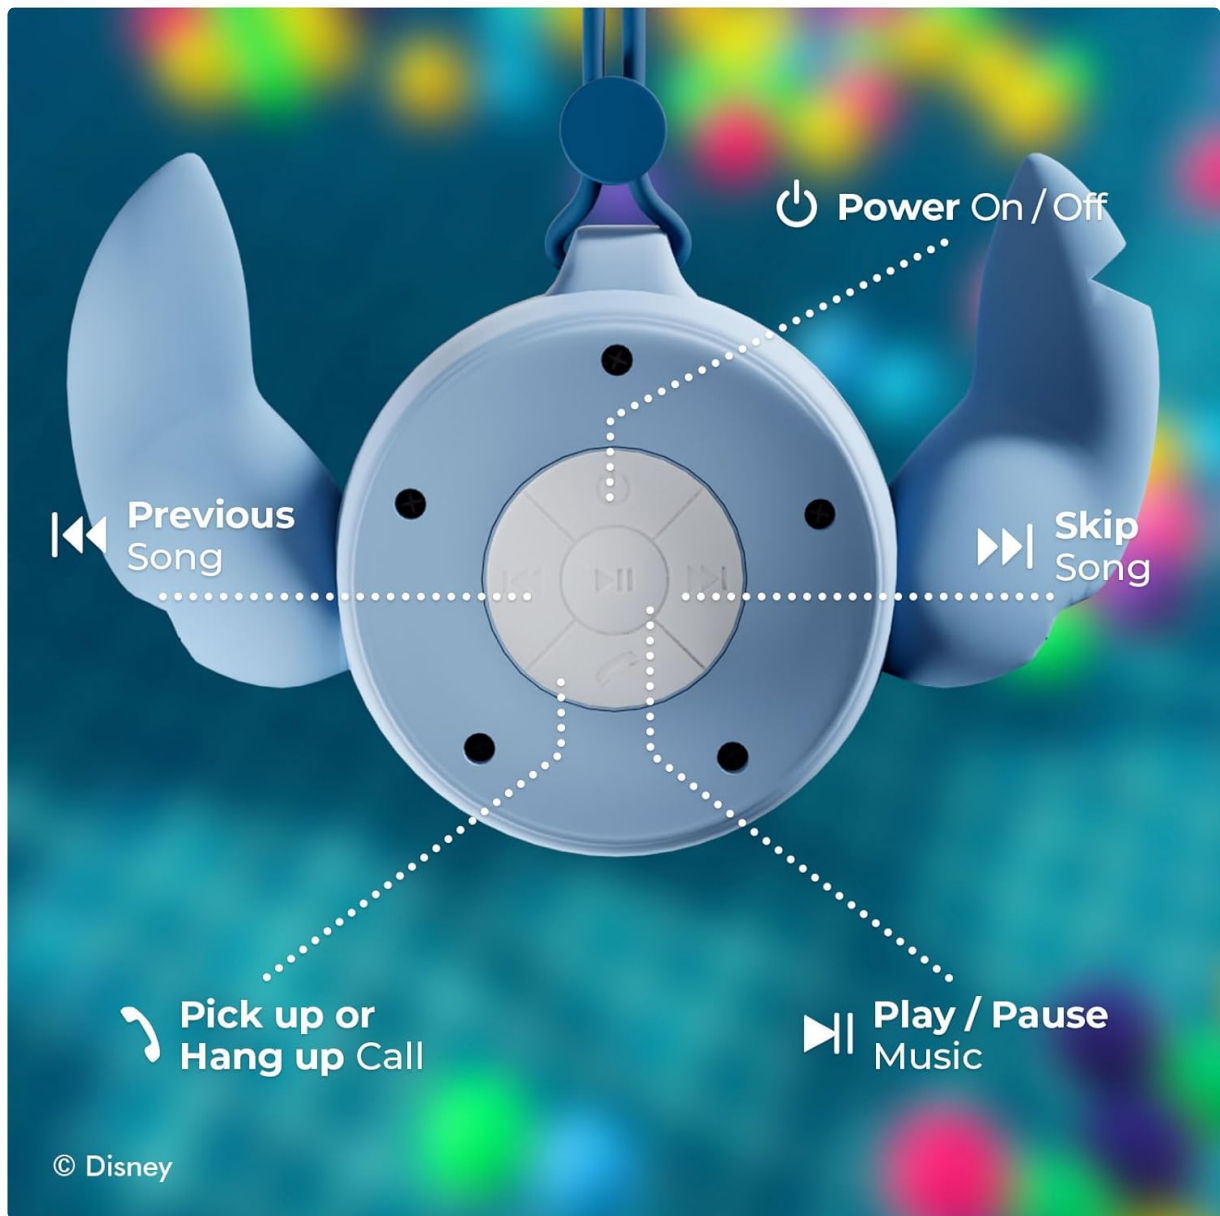


Figure 4: Overview of the speaker's control buttons: Power On/Off, Previous Song, Skip Song, Pick up or Hang up Call, and Play/Pause Music.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided Micro-USB charging cable to the charging port on the speaker (located on the side/bottom) and the other end to a USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

4.2 Bluetooth Pairing

1. Ensure the speaker is fully charged and powered off.
2. Press and hold the Power On/Off button on the speaker until you hear an audible prompt and the LED indicator light begins to flash, indicating it is in pairing mode.
3. On your smartphone or tablet, navigate to the Bluetooth settings.
4. Search for available devices. The speaker will appear as "Disney Speaker" in the list.
5. Select "Disney Speaker" to initiate the pairing process.
6. Once successfully paired, you will hear a confirmation tone, and the LED indicator light will stop flashing.

and remain solid.

The speaker will automatically attempt to reconnect to the last paired device when powered on, if within range.



Figure 5: The speaker is compatible with various Bluetooth-enabled devices, including smartphones, tablets, and laptops, with a transmission distance of 0-10 meters.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the Power On/Off button until the LED indicator lights up.
- **To Power Off:** Press and hold the Power On/Off button until the LED indicator turns off.

5.2 Music Playback

- **Play/Pause:** Press the Play/Pause button once to play or pause music.
- **Next Track:** Press the 'Skip Song' button (forward arrow) once to skip to the next track.
- **Previous Track:** Press the 'Previous Song' button (backward arrow) once to go to the previous track.
- **Volume Up:** Press the '+' button to increase volume.

- **Volume Down:** Press the '-' button to decrease volume.

5.3 Call Management

- **Answer/End Call:** Press the 'Pick up or Hang up Call' button (phone icon) once to answer an incoming call or end an ongoing call.
- **Reject Call:** Press and hold the 'Pick up or Hang up Call' button to reject an incoming call.

6. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Charging:** Always ensure the charging port cover is securely closed when not charging, especially in wet environments, to maintain water resistance.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.
- **Suction Cup Care:** For optimal suction, ensure the surface is clean, smooth, and dry before attaching the speaker.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with device.	Bluetooth is off on device; speaker not in pairing mode; device out of range.	Ensure Bluetooth is enabled on your device. Put speaker in pairing mode. Move device closer to speaker (within 30 ft).
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and connected device. Re-pair the speaker with your device.
Suction cup does not stick.	Surface is dirty, wet, or not smooth.	Clean and dry the surface thoroughly. Ensure the surface is smooth (e.g., tile, glass).

8. SPECIFICATIONS

- **Speaker Type:** Built-In
- **Special Features:** Waterproof, Built-In Microphone, Button Controls, Suction Cup
- **Recommended Uses:** For Smartphones or Tablets
- **Compatible Devices:** Smartphone, Tablet
- **Battery Life:** Up to 5 Hours
- **Product Dimensions:** 2"D x 5.5"W x 4.5"H
- **Item Weight:** 4 Ounces
- **Water Resistance Level:** IPX4 Water Resistant
- **Control Method:** Touch
- **Wireless Communication Technology:** Bluetooth
- **Power Source:** Battery Powered (Rechargeable via Micro-USB)

- **Bluetooth Range:** 30 Feet
- **Speaker Maximum Output Power:** 8 Watts
- **Mounting Type:** Suction

9. WARRANTY AND SUPPORT

This iJoy Disney Lilo and Stitch Bluetooth Shower Speaker comes with a Limited Warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official iJoy website.

If you encounter any issues or have questions not covered in this manual, please contact iJoy customer support for assistance. Contact information can typically be found on the product packaging or the official iJoy website.