

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Minolta](#) /
- › [Minolta MND65 Digital Camera User Manual](#)

Minolta MND65-WK-R

Minolta MND65 Digital Camera User Manual

Model: MND65-WK-R

1. INTRODUCTION

Thank you for choosing the Minolta MND65 Digital Camera. This compact camera is designed for capturing high-quality photos and videos with ease. It features a 56-megapixel sensor for still images, 4K Ultra HD video recording at 60 frames per second, an 18X digital zoom, and a unique dual-lens design including a dedicated selfie lens. Built-in Wi-Fi allows for convenient wireless file transfer. This manual provides detailed instructions to help you get the most out of your camera.

Included Accessories:

- Minolta MND65 Digital Camera
- 16GB Memory Card
- Lithium-Ion Battery
- USB Charging Cable
- Wrist Strap
- Protective Pouch
- Lens Cap & Keeper
- Screwdriver Kit (for faceplate swaps)
- 2 Replaceable Faceplates (Black and Red)

2. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure proper use and prevent damage to your camera or injury to yourself.

- Do not expose the camera to water or moisture. This camera is not water resistant.
- Avoid extreme temperatures. Do not leave the camera in direct sunlight or in very cold environments.
- Keep the camera away from strong magnetic fields.
- Do not attempt to disassemble or modify the camera. Repairs should only be performed by authorized service personnel.
- Use only the specified battery and charging cable.
- Keep out of reach of children.
- Clean the lens and screen with a soft, lint-free cloth.

3. SETUP

3.1 Battery Installation and Charging

The camera uses a rechargeable Lithium-Ion battery. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the Lithium-Ion battery, ensuring the contacts align correctly.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the provided USB charging cable. The charging indicator light will illuminate.
5. Charging is complete when the indicator light turns off.

3.2 Memory Card Installation

The camera supports a 16GB memory card (included). A memory card is required to store photos and videos.

1. Locate the memory card slot, usually near the battery compartment.
2. Insert the memory card with the metal contacts facing the correct direction (refer to the diagram inside the slot).
3. Push the card gently until it clicks into place. To remove, push the card again until it springs out.

3.3 Attaching the Wrist Strap

Attach the wrist strap to the designated loop on the camera body to prevent accidental drops.

3.4 Replacing Faceplates

The Minolta MND65 comes with replaceable faceplates to customize its appearance.

Customize Your Camera Instantly

Match Your mood, style, or outfit

Choose Your Camera Color



Black



Gray



White



Removable
Faceplates:
Teal
Purple
Red

Image: The Minolta MND65 camera with its standard white faceplate, accompanied by two additional faceplates in black and red, demonstrating the customization option.

1. Using the provided screwdriver, carefully remove the small screws securing the current faceplate.
2. Gently detach the faceplate from the camera body.
3. Align the desired new faceplate with the camera body and secure it with the screws. Do not overtighten.

4. OPERATING THE CAMERA

4.1 Power On/Off

Press and hold the Power button to turn the camera on or off. The 3.0" IPS LCD screen will activate.



Get ultra-detailed 56MP photos that preserve every texture, color, and moment with exceptional sharpness.

-  Keeps your photos crisp even when cropping or zooming in later
-  Captures vibrant colors and natural tones in any lighting
-  Perfect for travel, portraits, and everyday photography

Crisp 4K Video Every Time



Image: Rear view of the Minolta MND65 camera highlighting the 3.0-inch LCD screen, auto-focus capability, and built-in Wi-Fi with app control for wireless transfers.

4.2 Basic Photography (Still Images)

The camera captures 56-megapixel still images.



A portable, easy-to-use camera designed for creating on the go.



Capture More With Stunning Clarity



Image: Front view of the Minolta MND65 camera, illustrating its capabilities for 4K Ultra HD video at 60FPS, 56MP high-resolution stills, and 18X digital zoom.

1. **Select Mode:** Use the Mode button to select the desired shooting mode (e.g., Automatic, MND).
2. **Frame Your Shot:** Use the 3.0" LCD screen to compose your image.
3. **Focus:** The camera features Contrast Detection Auto Focus. Half-press the shutter button to focus.
4. **Zoom:** Use the zoom controls to adjust the 18X digital zoom.
5. **Capture:** Fully press the shutter button to take a photo.
6. **Flash:** Adjust flash settings (Auto, On, Off) via the menu.
7. **File Format:** Photos can be captured in JPEG or RAW format. This setting can be changed in the camera menu.

4.3 Video Recording

Record cinematic 4K Ultra HD video at 60 frames per second.

1. **Select Movie Mode:** Switch to Movie mode using the Mode button.
2. **Start Recording:** Press the Record button (usually marked with a red dot) to begin recording.

3. **Stop Recording:** Press the Record button again to stop.
4. **Video Format:** Videos are saved in MP4 format.

4.4 Selfie Mode (Dual-Lens Design)

The camera includes a dedicated front-facing selfie lens.

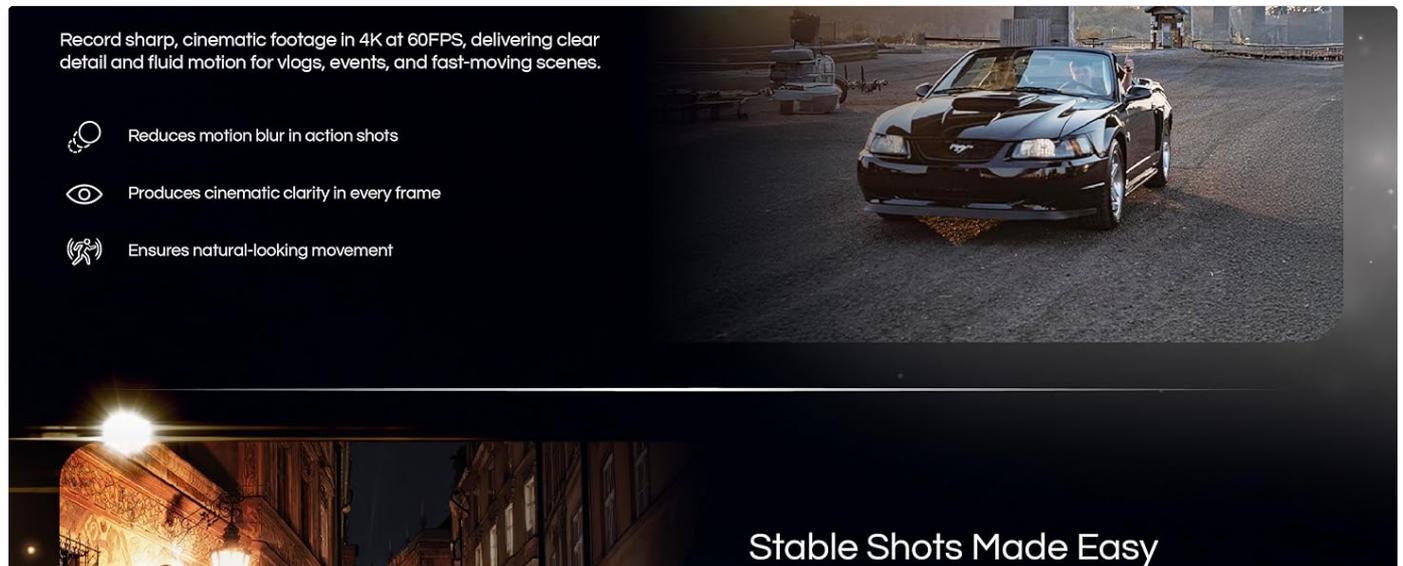


Image: A person holding the Minolta MND65 camera, demonstrating the use of its dedicated selfie lens for easy self-portraits.

To activate the selfie lens, rotate the main lens assembly or select the selfie mode option in the camera menu. The LCD screen will display the view from the front lens, allowing for easy framing of self-portraits or group selfies.

4.5 Wi-Fi Connectivity

Transfer photos and videos wirelessly to your smartphone or tablet.

1. **Enable Wi-Fi:** Access the camera's menu and enable Wi-Fi. The camera will broadcast a Wi-Fi network.
2. **Connect Device:** On your smartphone or tablet, connect to the camera's Wi-Fi network.
3. **Use App:** Download and install the official Minolta camera app (if available) to control the camera remotely and transfer files.

5. MAINTENANCE

5.1 Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Gently wipe in a circular motion. Avoid touching the lens with your fingers.
- **LCD Screen:** Use a soft, dry cloth to wipe the screen. For stubborn smudges, a screen cleaner designed for electronics can be used sparingly.
- **Camera Body:** Wipe with a soft, dry cloth. Do not use harsh chemicals or solvents.

5.2 Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing for an extended period, charge the battery to about 50% capacity.

5.3 Storage

When not in use, store the camera in its protective pouch in a dry, dust-free environment.

6. TROUBLESHOOTING

If you encounter issues with your Minolta MND65 camera, refer to the following common problems and solutions.

Problem	Possible Cause / Solution
Camera does not power on.	Battery is depleted. Charge the battery fully. Ensure battery is inserted correctly.
Images are blurry.	Lens may be dirty. Clean the lens. Ensure proper focus by half-pressing the shutter button. Check lighting conditions.
Cannot record video or take photos.	Memory card is full. Delete unnecessary files or insert a new card. Memory card is not inserted correctly.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the camera and your smart device. Check network settings on your device. Try restarting both devices.
LCD screen is blank or shows errors.	Restart the camera. Ensure the battery is charged. If the issue persists, contact customer support.

7. SPECIFICATIONS

Key technical specifications for the Minolta MND65 Digital Camera.

Feature	Detail
Model Name	MND65-WK-R
Photo Sensor Resolution	56 MP
Video Resolution	4K (2160p) at 60 FPS
Digital Zoom	18x
Screen Size	3 Inches (LCD)
Connectivity	Wi-Fi
Supported File Format	JPEG, RAW (Photos), MP4 (Video)
Image Stabilization	Digital
Focus Type	Auto Focus (Contrast Detection)
Battery Type	Lithium Ion
Flash Modes	Auto, On, Off
Color	Black - Red (with replaceable faceplates)
UPC	084438962598

8. WARRANTY INFORMATION

The Minolta MND65 Digital Camera comes with a Limited 1 Year Manufacturer Warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in the product packaging or visit the official Minolta website.

9. SUPPORT

For further assistance, technical support, or service inquiries, please contact Minolta customer support through their official website or the contact information provided in your product documentation.

You can also visit the [Minolta Store on Amazon](#) for additional product information and resources.