Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Mega Brands /
- > MEGA Pokémon Kanto Region Pokédex Building Set Instruction Manual HYM37

Mega Brands HYM37

MEGA Pokémon Kanto Region Pokédex Building Set Instruction Manual

Model: HYM37

1. PRODUCT OVERVIEW

The MEGA Pokémon Kanto Region Pokédex Building Set offers an engaging construction experience, culminating in a detailed replica of the iconic Kanto Region Pokédex. This set is designed for collectors and builders, featuring a functional light and five interchangeable lenticular cards of popular Pokémon.



Image 1.1: The fully assembled MEGA Pokémon Kanto Region Pokédex, showcasing its design and display capabilities.

2. PACKAGE CONTENTS

Please verify that all components listed below are present in your package before beginning assembly. If any parts are missing, contact customer support.

- Building bricks (322 pieces)
- Light brick component
- 5 Lenticular Pokémon cards (Pikachu, Bulbasaur, Charmander, Squirtle, Eevee)
- · Display stand components
- Printed instruction manual

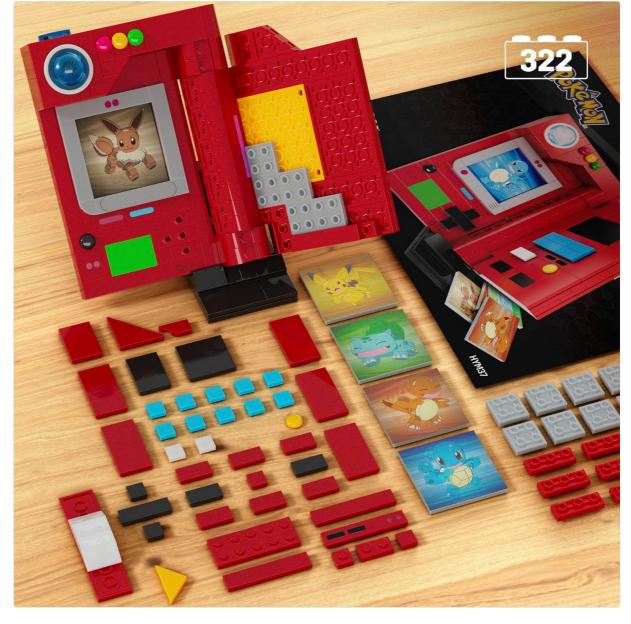


Image 2.1: Overview of all included parts, including the 322 building pieces and 5 lenticular cards.

3. ASSEMBLY INSTRUCTIONS

Follow the detailed, step-by-step instructions provided in the included printed manual. Careful attention to each step will ensure correct assembly and functionality.

- 1. Unpack all components and organize them by type or color as suggested in the manual.
- 2. Refer to the printed instruction manual for specific building steps and diagrams.
- 3. Connect the building bricks firmly, ensuring each piece is securely attached.
- 4. Integrate the light brick component at the designated step, ensuring proper orientation.
- 5. Assemble the display stand according to the instructions to support the finished Pokédex.

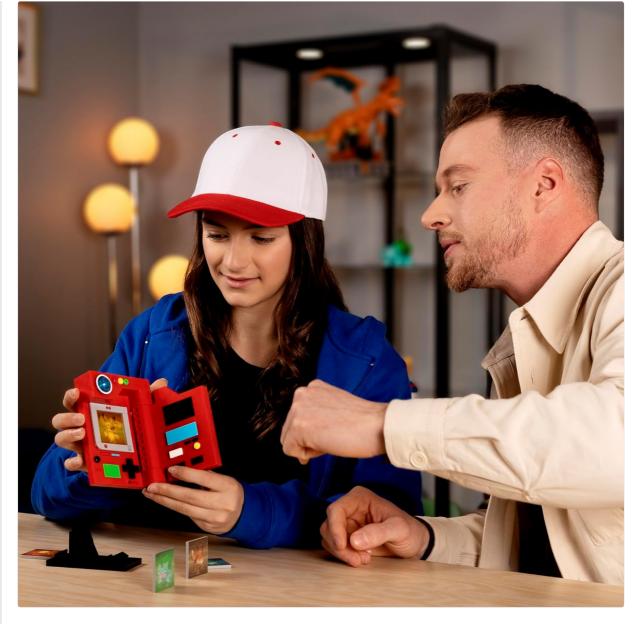


Image 3.1: An example of the assembly process, highlighting the use of the instruction manual.

4. OPERATING INSTRUCTIONS

4.1. Light Feature

The Pokédex includes a functional light feature that illuminates the screen area. To activate the light, locate the designated button on the top left side of the Pokédex and press it firmly.



Image 4.1: Activating the light feature by pressing the blue button.

4.2. Interchanging Lenticular Cards

The set includes five lenticular cards that can be inserted into the Pokédex screen to display different Pokémon. To change the card:

- 1. Gently slide the currently displayed lenticular card out of the screen slot.
- 2. Select your desired Pokémon lenticular card.
- 3. Carefully slide the new card into the screen slot until it is securely in place.

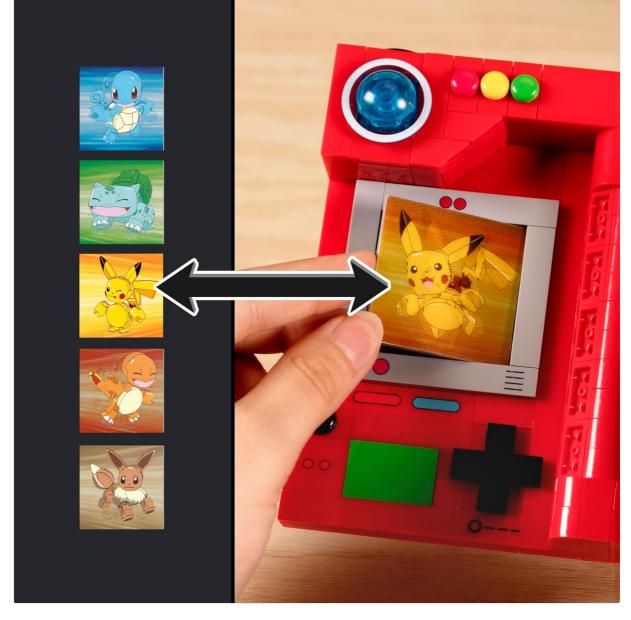


Image 4.2: Swapping lenticular cards to display different Pokémon.

5. CARE AND MAINTENANCE

- To clean the assembled model, gently wipe with a dry, soft cloth. Avoid using abrasive cleaners or solvents, which may damage the plastic or printed elements.
- Store the Pokédex in a cool, dry place away from direct sunlight to prevent discoloration or damage to the plastic components and lenticular cards.
- Ensure batteries for the light feature are replaced as needed. Refer to the specifications section for battery type.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Light feature does not activate.	Batteries are depleted or incorrectly installed.	Replace the 3 LR44 batteries. Ensure they are inserted with correct polarity as indicated in the assembly manual.

Issue	Possible Cause	Solution
Building bricks do not connect securely.	Incorrect piece placement or insufficient pressure during assembly.	Double-check the instruction manual for correct piece orientation. Apply firm, even pressure to connect pieces. If a piece is consistently problematic, ensure it is the correct part for that step.
Lenticular cards are difficult to insert or remove.	Misalignment or obstruction in the card slot.	Ensure the card slot is clear of any debris. Gently slide the card in or out, ensuring it is aligned properly. Avoid excessive force.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	HYM37
Product Dimensions	4.35 x 3.75 x 4.9 inches
Item Weight	1.2 pounds
Number of Pieces	322
Recommended Age	13 years and up
Batteries Required	3 LR44 batteries (for light feature)
Manufacturer	Mattel
Release Date	July 21, 2024

8. WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, replacement parts, or technical assistance, please refer to the contact details provided in the original product packaging. You may also visit the official Mega Brands website for support resources. Please retain your proof of purchase for any warranty claims.

© 2024 Mega Brands. All rights reserved. Pokémon © 2024 Pokémon / Nintendo / Creatures / GAME FREAK.