

- Manuals.plus /
- > [Inkbird](#) /
- > INKBIRDPLUS Reptile Humidifier Instruction Manual

Inkbird INKBIRDPLUS Reptile Humidifier

INKBIRDPLUS Reptile Humidifier Instruction Manual

Model: INKBIRDPLUS Reptile Humidifier

[Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. PRODUCT OVERVIEW

The INKBIRDPLUS Reptile Humidifier is designed to create a comfortable and peaceful environment for various reptiles, amphibians, and wet plants. It features a 3-liter capacity, silent ultrasonic operation, and adjustable mist output. The integrated design minimizes leaks, and the top-filling method simplifies refills.

Ultrasonic Reptile Humidifier

Create a comfortable and peaceful environment for your baby pets.



All-IN-ONE



3L
Water Tank



Security
Protection



Adjustable
Fog



Silent
Humidification



Durable



Image 1.1: INKBIRDPLUS Reptile Humidifier in use with a terrarium, highlighting its features.

INKBIRDPLUS REPTILE HUMIDIFIER



Ultra Quiet Operation



Stepless Fog Adjustment



Max Mist Volume 320ml/hour



Continuous Use for 12~15 hrs



Image 1.2: Key features of the INKBIRDPLUS Reptile Humidifier.

EXCELLENT INTEGRATED DESIGN

NO LEAK, NO MESS



Image 1.3: The integrated design of the humidifier prevents leaks and messes.

2. SETUP INSTRUCTIONS

2.1 Package Contents

Before beginning installation, ensure all components are present:

- Humidifier Unit (Water Tank and Base)
- Tank Cover
- Mist Maker Float
- Mist Hood
- Maifan Stones (pre-installed for water purification)
- Adjustable Fog Hose (2.2-6 feet / 0.67-1.83 meters)
- 2 Suction Cups



Image 2.1: Exploded view of humidifier components and accessories.

2.2 Assembly Steps

1. **Check Components:** Verify all parts and accessories are received.
2. **Install Mist Hood:** Place the mist hood onto the base of the humidifier.
3. **Add Water:** Fill the water tank from the top. Do not exceed the maximum water level (3L / 0.79 Gal). The optimal water level is 2.2L / 0.58 Gal.
4. **Connect Hose:** Attach the adjustable fog hose to the humidifier's mist outlet.
5. **Adjust Fog Output:** Use the slide switch on the front of the unit to set the desired fog output.

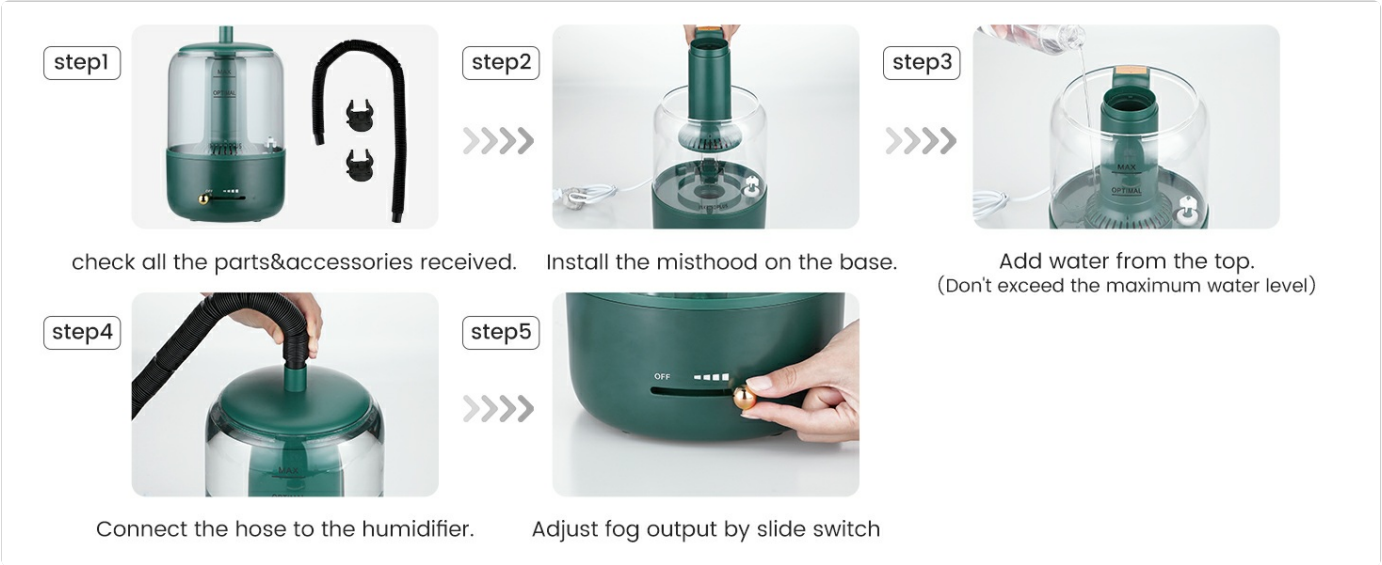


Image 2.2: Step-by-step visual guide for humidifier assembly.

CONVENIENT TOP-FILLING



Image 2.3: Demonstrating the convenient top-filling method and water level indicators.

2.3 Hose Installation Guidelines

Proper hose installation is crucial for continuous and smooth fog delivery. Avoid creating bends or dips in the hose where water can collect.

How to Install the Hose Correctly



The fog passes continuously and smoothly.



The fog will gather and turn into water, then clog the hose.

Image 2.4: Guide for correct hose installation to prevent water accumulation and clogging.

Use the provided suction cups to secure the hose in place, ensuring it remains elevated and free of kinks or downward loops.

3. OPERATION

3.1 Powering On/Off and Mist Adjustment

Plug the humidifier into a suitable power outlet (110 Volts AC). The unit is turned on and off, and the mist output is adjusted using the slide switch on the front panel. Slide the switch to the desired mist level, from minimum to maximum (up to 320 ml/hour).



Image 3.1: Mist output adjustment slide switch.

3.2 Dry Running Protection

The humidifier is equipped with an automatic dry running protection function. If the water level in the tank becomes too low or runs out, the unit will automatically shut off to prevent damage and ensure safety. Refill the water tank to resume operation.

3.3 Water Purification

The Maifan stones included with the humidifier help purify water, contributing to a healthier environment for your pets. Ensure these stones are present during operation.

3.4 Continuous Operation

With a full 3-liter tank, the humidifier can operate continuously for 12-15 hours, depending on the selected mist output level.

3.5 Integration with Humidity Controllers

For precise humidity control, the INKBIRDPLUS Reptile Humidifier can be used in conjunction with an external humidity controller, such as the INKBIRD IHC-200. This allows for automated humidification based on set parameters.



Image 3.2: Humidifier integrated with an external humidity controller for automated environmental management.

4. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your humidifier.

4.1 Cleaning the Water Tank

- Unplug the humidifier before cleaning.
- Remove the tank cover and mist hood.
- Empty any remaining water from the tank.
- Wipe the inside of the water tank with a soft cloth and mild detergent. Rinse thoroughly to remove all soap residue.
- For mineral buildup, use a solution of white vinegar and water. Let it soak for 15-20 minutes, then scrub gently and rinse well.
- Ensure all parts are completely dry before reassembling.

4.2 Cleaning the Mist Hood and Float

- Gently clean the mist hood and mist maker float with a soft brush or cloth.
- Rinse under running water.

4.3 Maifan Stones

The Maifan stones help purify water. Periodically rinse them under running water to remove any accumulated impurities. Replace them if they show significant wear or discoloration over time (replacement frequency depends on water quality and usage).

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No mist or low mist output	• No water in tank • Mist output set too low • Hose clogged or kinked • Mineral buildup on mist maker	• Refill water tank • Adjust mist output slider to a higher setting • Check hose for obstructions or improper installation (refer to Image 2.4) • Clean the mist maker and surrounding area
Water leakage	• Tank cover not properly sealed • Unit not on a flat surface • Damage to water tank	• Ensure tank cover is securely in place • Place humidifier on a stable, level surface • Contact customer support if tank is damaged
Unusual noise	• Low water level • Unit not on a flat surface • Foreign object in water tank	• Refill water tank • Ensure unit is on a stable, level surface • Unplug and inspect water tank for debris

6. SPECIFICATIONS

Feature	Detail
Brand	Inkbird
Model Name	INKBIRDPLUS Reptile Humidifier
Capacity	3 Litres
Operation Mode	Ultrasonic
Max Mist Output	320 ml/hour
Runtime	12-15 hours (on full tank)
Product Dimensions (D x W x H)	19.5D x 19.5W x 30.5H centimetres
Item Weight	1300 Grams
Voltage	110 Volts (AC)
Power Source	Corded Electric
Material	Acrylonitrile Butadiene Styrene
Special Features	Quiet operation, Dry Running Protection, Adjustable Mist Output, Integrated Design, Water Purification (Maifan Stones)

7. WARRANTY & SUPPORT

7.1 Warranty Information

This INKBIRDPLUS Reptile Humidifier comes with a **One-year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents,

unauthorized modifications, or improper maintenance.

7.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your INKBIRDPLUS Reptile Humidifier, please contact Inkbird customer support. Refer to the product packaging or the official Inkbird website for the most current contact information.

© 2026 Inkbird. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPL9CB5N>

More documents and user manuals: <https://manuals.plus/>