

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ingenuity](#) /

› [Ingenuity Sun Valley Canopy Portable Swing User Manual](#)

Ingenuity 16905

Ingenuity Sun Valley Canopy Portable Swing User Manual

Model: [16905](#)

Brand: [Ingenuity](#)

IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the Ingenuity Sun Valley Canopy Portable Swing. Keep this manual for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended. Always keep child in view while in swing.
- **WARNING:** Always use the restraint system. Ensure the 5-point harness is securely fastened and properly adjusted.
- **WARNING:** This product is intended for infants from 0 to 9 months, or up to 20 pounds (9 kg), whichever comes first. Discontinue use when child attempts to climb out or reaches the maximum weight/age limit.
- **WARNING:** Do not use the product if it is damaged or broken. Check for loose fasteners, worn material, or torn stitching before each use.
- **WARNING:** Batteries are not included. Use 4 C batteries. Ensure correct battery polarity. Do not mix old and new batteries.
- **WARNING:** Do not use near stairs, open flames, or heat sources.

PRODUCT OVERVIEW

The Ingenuity Sun Valley Canopy Portable Swing offers simplicity and versatile functionality, designed for comfort and entertainment on the go. It features a compact, lightweight, and foldable design for easy transport and storage.

- **Canopy:** A large, full canopy provides comfort and shade for your little one.
- **Toys:** Includes 2 take-along toys (1 crinkle sun and 1 plush rainbow) for engaging play.
- **Swing Speeds:** Offers 6 speed options to suit your baby's preference.
- **TrueSpeed Technology:** Equipped with cutting-edge weight-sensing technology to maintain consistent swing speed as your baby grows.

- **Recline Positions:** Features a 2-position reclining seat for optimal comfort.
- **Melodies:** Entertain your baby with a selection of 8 melodies.
- **Harness:** An adjustable 5-point harness ensures your baby is safely secured.



Figure 1: Front view of the Ingenuity Sun Valley Canopy Portable Swing.

ASSEMBLY INSTRUCTIONS

The Ingenuity Sun Valley Canopy Portable Swing is designed for straightforward assembly. Follow the detailed instructions provided in the manufacturer's user manual (PDF link available in the Warranty and Support section) for step-by-step guidance.

The swing's lightweight and foldable design allows for easy setup and takedown, making it convenient for transport and storage. Ensure all components click securely into place before placing your child in the swing.



Figure 2: The swing features a lightweight and foldable design for easy portability.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and features to provide the best experience for your baby.

Control Panel Functions:



Figure 3: The intuitive control panel for swing settings.

- **Power Button:** Press to turn the swing on or off.
- **Speed Adjustment (+/-):** Use the plus (+) and minus (-) buttons to select from 6 different swing speeds. The indicator lights will show the current speed setting.
- **Music Button:** Press to cycle through 8 soothing melodies. Press again to turn music off.
- **Timer Button:** Set a timer for the swing operation. Consult the full user manual for specific timer intervals.

Harness and Recline:

- **5-Point Safety Harness:** Always secure your baby using the adjustable 5-point harness. Ensure it is snug but not too tight. The harness straps can be adjusted to grow with your baby.
- **2-Position Recline:** Adjust the seat recline to one of two positions for your baby's comfort, whether they are awake and playing or resting.



Figure 4: The adjustable 5-point harness ensures baby's safety.

Official Product Video:

Your browser does not support the video tag.

Video 1: This official product video demonstrates the features and functionality of the Ingenuity Sun Valley Canopy Portable Swing, including its various settings and ease of use.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your swing.

- **Seat Pad:** The removable seat pad is machine-washable. Follow the care instructions on the fabric label for best results.
- **Frame:** Wipe the frame and plastic components with a damp cloth and mild soap. Do not use harsh abrasives or solvents.
- **Storage:** When not in use, fold the swing for compact storage in a dry, cool place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your swing, refer to the following common solutions:

Problem	Possible Cause / Solution
Swing not turning on or inconsistent operation.	Check battery installation and ensure correct polarity. Replace old or depleted batteries with new ones (4 C batteries required). Ensure all connections are secure and the swing is properly assembled.
Music not playing.	Press the music button to activate melodies. Check battery levels.
Swing appears wobbly.	Ensure the swing is placed on a flat, stable surface. Verify all frame connections are securely locked.

SPECIFICATIONS

Feature	Detail
Brand	Ingenuity
Model Number	16905
Product Dimensions (D x W x H)	28.74" x 22.64" x 26.77"
Item Weight	6.71 pounds
Material Composition	55% Metal, 35% Plastic, 10% Fabric
Power Source	4 C batteries (not included)
Age Range	0-9 months
Weight Limit	Up to 20 pounds
Care Instructions	Wipe seat pad with damp cloth.
Assembly Required	Yes
Is Portable	Yes

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Ingenuity website or the full user manual provided by the manufacturer.

A digital version of the user manual can be accessed here:[Ingenuity Sun Valley Canopy Portable Swing User Manual \(PDF\)](#)

For further assistance, please contact Ingenuity customer service through their official channels.