

Ingenuity 16854

Ingenuity Gas Relief and Anti-Colic Baby Bouncer Seat and Rocker

Model: 16854 | Brand: Ingenuity

IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the bouncer seat. Keep these instructions for future reference. Failure to follow these warnings and instructions could result in serious injury or death.

- **WARNING:** Never leave child unattended.
- **WARNING:** This bouncer is intended for infants from birth up to 6 months, or up to 20 pounds (9 kg), whichever comes first. Discontinue use when the child can sit up unaided or attempts to climb out.
- **WARNING:** Always use the restraint system. Ensure the 5-point harness is properly fastened and adjusted snugly around your child.
- **WARNING:** Never use this bouncer on an elevated surface (e.g., a table). Always use on the floor.
- **WARNING:** Do not move or lift the product with the child in it.
- **WARNING:** Do not use if any components are broken or missing.
- **WARNING:** Batteries are not included. Use 3 C batteries for the control pad.

WHAT'S INCLUDED

Your Ingenuity Happy Belly Bouncer Seat and Rocker package should contain the following components:

- Bouncer/Rocker Frame
- Plush Seat Pad with Infant Insert
- Detachable Toy Bar
- Cati the Zebra Character Toy
- Carry Bag



Image: The Ingenuity Happy Belly Bouncer Seat and Rocker, showcasing its design and components.

SETUP

Assembly

The Ingenuity Happy Belly Bouncer is designed for easy setup and portability. The frame folds flat for convenient storage and transport.



Image: A person adjusting the bouncer frame, demonstrating its convertible design.

Battery Installation

The GentleTouch control pad requires 3 C batteries (not included) to operate the melodies, nature sounds, vibrations, and belly massage features.

1. Locate the battery compartment on the underside of the control pad.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 C batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure with the screw.



Parent-activated belly massage plus melodies and vibration

Image: A hand interacting with the bouncer's control panel, indicating where batteries power the features.

Attaching the Toy Bar

The detachable toy bar with the Casi the Zebra toy can be easily attached to the bouncer frame. Ensure it clicks securely into place.



Image: A person demonstrating the attachment of the toy bar to the bouncer seat.

OPERATING INSTRUCTIONS

Bouncer to Rocker Conversion

This product seamlessly converts from a stationary bouncer to a rocking seat. To switch modes, adjust the position of the stabilizing feet at the base of the frame. Ensure the feet are either fully extended for rocking or retracted for stationary bouncing.

Your browser does not support the video tag.

Video: Demonstrates how to convert the Ingenuity Happy Belly Bouncer from bouncer mode to rocker mode.

GentleTouch Control Pad

The control pad located at the front of the bouncer allows you to activate various soothing features:

- **Power Button:** Turns the unit on/off.
- **Melodies & Nature Sounds:** Press the music note button to cycle through 20 different melodies and nature sounds.

- **Vibration:** Press the vibration button to activate gentle vibrations for soothing comfort.
- **Belly Massage:** Press the belly massage button to activate the integrated belly massage technology.

Your browser does not support the video tag.

Video: Illustrates the use of the GentleTouch control pad to activate melodies and vibration features.

Belly Massage Technology

The patent-pending belly massage technology provides a gentle, circular massage motion designed to help soothe baby and provide relief from discomfort. This feature is safely activated by a parent's push of a button and automatically turns off after 3 minutes of massage.



Image: A detailed view of the gentle fingertip-like massage rollers integrated into the safety harness.



Belly massage soothes baby's discomfort

Image: A baby comfortably seated in the bouncer, demonstrating the soothing effect of the belly massage.

Your browser does not support the video tag.

Video: A demonstration of the belly massage feature in action, highlighting its soothing motion.

Harness System

Always secure your child with the 5-point harness. Adjust the straps to ensure a snug and safe fit. The harness helps keep your baby comfortable and secure in the seat.



Image: A baby safely secured in the bouncer seat, showcasing the 5-point harness system.

CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and hygiene of your Ingenuity Happy Belly Bouncer.

- **Bolster:** Remove from frame. Machine wash with cold water on a gentle cycle. Do not use bleach. Tumble dry using low heat.
- **Frame:** Wipe the frame with a soft, clean cloth and mild soap.
- **Seat Pad/Toy Bar and Toys:** Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.

Storage

The bouncer folds flat for easy storage and comes with a carry bag for convenient transport.



Image: A person carrying the Ingenuity bouncer in its included travel bag, highlighting its portability and ease of storage.

Your browser does not support the video tag.

Video: Demonstrates the bouncer's ability to fold flat for compact storage and easy transport.

TROUBLESHOOTING

If you encounter any issues with your Ingenuity Happy Belly Bouncer, please refer to the following common solutions:

- **Unit Not Turning On:** Ensure 3 C batteries are correctly installed with proper polarity and are not depleted. Replace batteries if necessary.
- **Belly Massage Not Activating or Stopping:** The belly massage feature automatically turns off after 3 minutes. If it does not activate, check battery levels.
- **Buttons Unresponsive:** Ensure the control pad is clean and free of debris. If issues persist after checking batteries, contact customer support.
- **Bouncer Not Rocking:** Verify that the stabilizing feet are fully extended for rocking mode.

SPECIFICATIONS

Feature	Detail
Product Dimensions	27.56 x 17.75 x 17.32 inches (70.0 x 45.09 x 43.99 cm)
Item Weight	6.56 pounds (2.98 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Material Type	Fabric, Plastic
Material Composition	55% Metal, 28% Plastic, 17% Fabric
Batteries Required	3 C batteries (not included)
Care Instructions	Bolster: Machine wash cold, gentle cycle, no bleach, tumble dry low. Frame: Wipe with soft cloth and mild soap. Seat pad/Toy bar/Toys: Wipe clean with damp cloth and mild soap, air dry. Do not immerse in water.
Is Portable	Yes



Image: A visual representation of the bouncer's dimensions in inches and centimeters.





WARRANTY AND SUPPORT


For information regarding product warranty, returns, or additional support, please refer to the official Ingenuity website or contact their customer service directly.

Visit the Ingenuity Store: [Ingenuity Official Store](#)

© 2025 Ingenuity. All rights reserved.

Related Documents

<div><p>Happy Belly™ Rock-to-Bounce Massage Seat - Chambray</p><p>Happy Belly™ Rock-to-Bounce Massage Seat Assemble the bouncer according to the instructions. Happy Belly™ Bouncer is suitable for use with the Happy Belly™ Ingenuity Baby™ Rock-to-Bounce Massage Seat. Suckle massage Happy Belly™ Rock-to-Bounce Ingenuity Baby™</p></div>	<p>Ingenuity Happy Belly Rock-to-Bounce Massage Seat - Chambray User Manual</p> <p>User manual and safety guide for the Ingenuity Happy Belly Rock-to-Bounce Massage Seat in Chambray. Covers assembly, operation, care, and safety precautions.</p>
<div><p>InLighten Bouncer™ - Nate™</p><p>Bouncer - Assemble - Parent Bouncer - Assemble - Parent Ingenuity Baby™</p></div>	<p>Ingenuity InLighten Bouncer - Nate: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Ingenuity InLighten Bouncer in the Nate design. Includes safety warnings, assembly instructions, care guide, battery information, and control unit operation for parents.</p>
<div><p>Morrison™ Soothing Bouncer</p><p>Bouncer - Assemble - Parent Bouncer - Assemble - Parent Ingenuity Baby™</p></div>	<p>Ingenuity Morrison Soothing Bouncer User Manual</p> <p>Comprehensive user manual for the Ingenuity Morrison Soothing Bouncer, providing safety warnings, assembly instructions, care and cleaning guidelines, battery information, and usage instructions for vibration and music functions.</p>
<div><p>Every Season™ Rocking Seat - Wesley™</p><p>Bouncer - Assemble - Parent Bouncer - Assemble - Parent Ingenuity Baby™</p></div>	<p>Ingenuity Every Season Rocking Seat - Wesley: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Ingenuity Every Season Rocking Seat - Wesley. Includes detailed safety warnings, assembly instructions, care and cleaning guidelines, battery information, and music/vibration unit operation. Features multilingual support.</p>

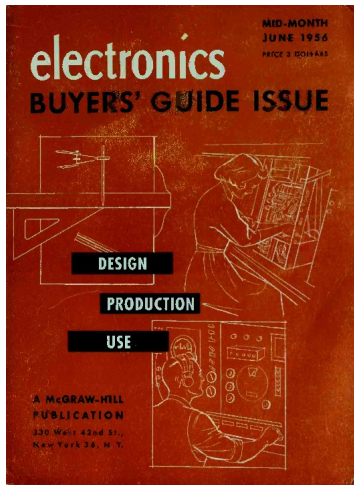

[\[pdf\]](#) Guide Buyer's Guide Catalog

Electronics Buyers Guide 1956 06 worldradiohistory Archive Buyer |||

BUYERS G MID -MONTH JUNE 1956 PRICE 3 DOLLARS E ISSUE USE A
McGRAW-HILL PUBLICATION 330 West 42nd ... nt Co., Inc., 2706 Third Wash.
Ave., Seattle 1, SIGBNroAoLkITyRnA2N3S, NFO. YR.MEARDCVO. P., G25.
16854.Coney Island Ave., SOUTHWESTERN Post Oak Rd., INDUSTRIAL
ELECTRONICS CO., 2831 P. O. Box 130...

lang:en **score:17** filesize: 150.32 M page_count: 1030 document date: 2017-06-02