

[manuals.plus](#) /› [NOHON](#) /› [NOHON MS15 Mag-Safe 5000mAh Wireless Power Bank User Manual](#)**NOHON MS15**

NOHON MS15 Mag-Safe 5000mAh Wireless Power Bank User Manual

Model: MS15 | Brand: NOHON

1. PRODUCT OVERVIEW

The NOHON MS15 Mag-Safe Wireless Power Bank is a compact and efficient portable charging solution designed for iPhone 12, 13, 14, and 15 series, and other compatible devices. Featuring a 5000mAh capacity, ultra-slim design, and 20W Power Delivery (PD) fast charging, it offers convenient wireless and wired charging capabilities.

Upgraded Wireless Magsafe Power Bank

For iphone 12-15 series



5000mAh Capacity



Aluminum Alloy Body



Slim Design

Figure 1: NOHON MS15 Mag-Safe Wireless Power Bank with iPhone.

2. PACKAGE CONTENTS

- NOHON MS15 Mag-Safe Wireless Power Bank
- USB-C Charging Cable
- User Manual

3. SETUP AND CHARGING THE POWER BANK

3.1 Initial Charge

Before first use, fully charge the NOHON MS15 Power Bank. Use the included USB-C cable and connect it to a compatible power adapter (not included).

3.2 Charging Indicators

The integrated LED indicators on the side of the power bank display the remaining battery capacity and charging status. Each light typically represents approximately 25% of the battery charge.

Safety Certificated



Figure 2: LED Power Indicator explanation.

4. OPERATING INSTRUCTIONS

4.1 Wireless Charging (Mag-Safe Compatible)

1. Ensure your device is Mag-Safe compatible (iPhone 12 series or newer) or has a magnetic phone case.
2. Align the NOHON power bank with the back of your iPhone. The magnets will automatically snap it into place, initiating wireless charging.
3. To stop charging, simply detach the power bank from your device.

Charge in Snap



Figure 3: Magnetic attachment for wireless charging.

4.2 Wired Charging (USB-C)

1. Connect one end of the USB-C cable to the power bank's USB-C port.
2. Connect the other end of the USB-C cable to your device's charging port.
3. Charging will begin automatically.

4.3 Simultaneous Charging

The NOHON MS15 supports charging two devices simultaneously: one wirelessly via Mag-Safe and another via the USB-C port.

Charging Two Devices Simultaneously



Figure 4: Charging two devices simultaneously.

4.4 Power On/Off

The power bank automatically activates charging when a device is connected wirelessly or via cable. To turn off the power bank, press the power button twice in quick succession.

5. KEY FEATURES

- **Ultra-Slim Design:** Measuring just 0.32 inches (8mm) in thickness, it's designed for easy portability.
- **5000mAh Capacity:** Provides ample power for daily use.
- **Magnetic Connection:** Ensures a secure and stable wireless charging link.
- **20W PD Fast Charging:** Delivers efficient wired charging speeds.
- **Simultaneous Charging:** Charge two devices at once (wireless + wired).
- **Intelligent Protection:** Built-in safeguards against over-current, over-voltage, and short-circuit.



Figure 5: Overview of NOHON MS15 features.


6. COMPATIBILITY

The NOHON MS15 Mag-Safe Wireless Power Bank is designed for universal compatibility with:

- **Mag-Safe Charging:** iPhone 12, 13, 14, and 15 series (including Pro Max models).
- **Wireless Charging:** Other Qi-enabled smartphones (requires a magnetic phone case for secure attachment).
- **Wired Charging:** Any device compatible with USB-C charging.

Note: For non-magnetic charging phones, a magnetic phone case is required to ensure a secure connection for wireless charging.

Compatible Phone Cases

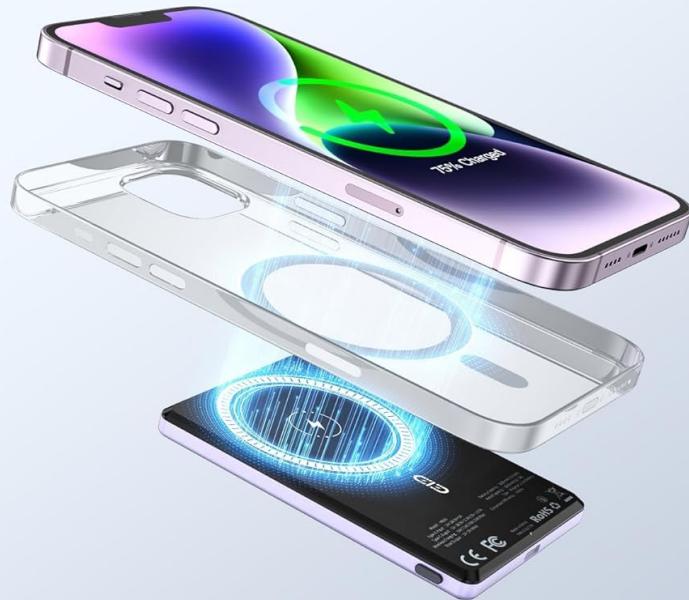

Charging with Magnetic Cases

Magnetic Cases



Non-magnetic Cases



NOTE: Phones with wireless charging function but no magnetic support suction. We recommend using a compatible Magsafe phone case for better connection and using experience.

Figure 6: Compatible phone cases for magnetic charging.

7. MAINTENANCE AND CARE

- Keep the power bank away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use.

8. TROUBLESHOOTING

8.1 Device Not Charging

- Ensure the power bank is sufficiently charged. Check the LED indicators.
- For wireless charging, verify proper alignment between the power bank and your device/magnetic case.
- For wired charging, check that the USB-C cable is securely connected to both the power bank and your device. Try a different cable if necessary.
- Remove any non-magnetic cases that may interfere with wireless charging.

8.2 Power Bank Overheating

- It is normal for the power bank to become slightly warm during charging.
- If it becomes excessively hot, discontinue use immediately and contact customer support.
- Ensure proper ventilation and avoid charging in direct sunlight or enclosed spaces.

9. SPECIFICATIONS

Feature	Detail
Model Number	MS15
Battery Capacity	5000mAh
Product Dimensions	4 x 2.5 x 0.32 inches
Item Weight	4.1 ounces
Wired Charging Output	PD 20W (USB Type C)
Wireless Charging Output	Up to 15W (for Android), 7.5W (for iOS)
Special Features	Fast Charging, Slim Design, Wireless Charging, Magnetic Attachment
Color	Violet Ash

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Product Overview of the NOHON Mag-Safe Power Bank. This video demonstrates the features and usage of the power bank, including its slim design and magnetic attachment.

11. WARRANTY AND SUPPORT

NOHON products typically come with a 12-month warranty. For any product inquiries, technical support, or warranty claims, please contact NOHON customer service through the retailer's platform or the official NOHON website. Please have your purchase details and model number (MS15) ready.