

[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Wicker Patio Lounger Set Instruction Manual

Outsunny CA862-011BK0231

Outsunny Wicker Patio Lounger Set

INSTRUCTION MANUAL

Model: CA862-011BK0231

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your Outsunny Wicker Patio Lounger Set. This set includes two reclining chaise loungers and one glass-top side table, designed for outdoor use.



Image 1.1: The Outsunny Wicker Patio Lounger Set, featuring two loungers and a side table.

Key Features:

- **Three-Piece Set:** Includes two reclining chairs and one side table with a tempered glass top.
- **Durable Construction:** Sturdy steel frame with powder-coated finish and weather-resistant PE rattan wicker.
- **Adjustable Reclining:** Backrests adjust to five different angles for customized comfort.
- **Portability:** Equipped with wheels for easy movement.
- **Comfortable Cushions:** Soft padded cushions and headrest pillows for enhanced relaxation.

2. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the steps carefully to ensure proper and safe setup. It is recommended to assemble the loungers and table on a soft, clean surface to prevent scratches.

Components Checklist:

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included hardware pack and component list.

Assembly Steps:

1. Unpack all components and lay them out. Identify all parts according to the assembly diagram.
2. Begin by attaching the main frame sections of the lounger. Ensure all bolts are finger-tight before fully tightening.
3. Attach the wheels to the designated end of the lounger frame.
4. Secure the reclining mechanism to the backrest and main frame.
5. Assemble the side table by attaching its legs to the tabletop frame.
6. Once all structural components are assembled, place the tempered glass onto the side table.
7. Finally, place the padded cushions and headrest pillows onto the loungers.

PE RATTAN WICKER



Image 2.1: Detailed dimensions of the lounger and side table, useful for assembly and placement.

Note: Some users have reported issues with holes not aligning during assembly. If you encounter this, gently adjust the components or loosen previously tightened bolts to allow for alignment before re-tightening.

3. OPERATING INSTRUCTIONS

Adjusting the Reclining Position:

The loungers feature a 5-level adjustable backrest. To change the reclining angle:

1. Slightly lift the backrest to disengage it from its current notch.
2. Adjust the backrest to your desired angle, ensuring it securely locks into one of the five available notches.
3. Confirm the backrest is stable before applying full weight.

EASY TO MOVE

2 wheels for quick moving



Patio



Balcony



Deck



Image 3.1: Illustration of the 5-level reclining positions for reading, relaxing, or laying down.

Moving the Loungers:

Each lounger is equipped with two wheels for easy portability.

- To move a lounger, slightly lift the end opposite the wheels.
- Roll the lounger to your desired location.
- Ensure the lounger is placed on a flat, stable surface before use.

COMFORTABLE CUSHION



Image 3.2: The integrated wheels on the lounge for convenient relocation.

4. MAINTENANCE AND CARE

Proper maintenance will extend the lifespan and appearance of your patio lounge set.

Cleaning Instructions:

- **Frame and Rattan:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Cushions:** The cushions have a water-repellent polyester cover for temporary cleaning. Spot clean with a mild soap and water solution. Allow to air dry completely before storing or reusing. Do not machine wash or tumble dry.
- **Glass Tabletop:** Clean with a standard glass cleaner and a soft cloth.



Image 4.1: Close-up of the comfortable cushion, highlighting its water-repellent properties for easy cleaning.

General Care:

- Store cushions indoors or in a waterproof storage box during inclement weather or prolonged periods of non-use to prevent fading and mildew.
- Periodically check all bolts and connections to ensure they remain tight. Re-tighten as necessary.
- While the PE rattan is weather-resistant, prolonged exposure to extreme weather conditions (e.g., heavy snow, intense sun) may affect its longevity. Consider using a furniture cover when not in use for extended periods.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your patio lounge set.

Common Issues and Solutions:

- **Cushions feel too thin or bars are felt:** The provided cushions are designed for comfort but may not offer maximum density. Consider adding additional padding or replacing with thicker cushions if desired.
- **Cushion seams letting go or color fading:** This can occur with prolonged exposure to sun and rain. Ensure cushions are stored indoors or covered when not in use. If seams are failing, professional repair or replacement cushions may be necessary.
- **Assembly holes not aligning:** Loosen all bolts on the section you are working on. Gently manipulate the pieces to align the holes, then insert all bolts before gradually tightening them in a crisscross pattern.
- **Lounger is difficult to move:** Ensure the wheels are free of debris. If the surface is uneven, adjust the lounger's position to allow the wheels to roll smoothly.

If you encounter an issue not listed here or require further assistance, please contact Outsunny customer support.

6. SPECIFICATIONS

Detailed specifications for the Outsunny Wicker Patio Lounger Set.

Attribute	Detail
Brand	Outsunny
Model Number	CA862-011BK0231
Colour	Black
Product Dimensions (Lounger)	78.7" W x 28.7" D x 40.6" H (200 x 73 x 103 cm)
Product Dimensions (Side Table)	15.7" W x 15.7" D x 15.7" H (40 x 40 x 40 cm)
Materials	Steel, PE Rattan, Polyester, Tempered Glass
Special Features	5-Level Recline, Wheels for Mobility
Item Weight	Approx. 20 kg (44 lbs)
Manufacturer	Aosom Canada
Product Care Instructions	Wipe Clean

7. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the purchase documentation or contact the retailer where the product was purchased. Outsunny products are manufactured by Aosom Canada.

Customer Support:

For technical support, missing parts, or warranty claims, please contact Aosom Canada directly. Contact information

can typically be found on their official website or through your purchase platform.

Aosom Canada:

Place of Business: Markham, Ontario, CA

Telephone: 1-416-792-6088