

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [mooas](#) /

› [mooas Standing Height Adjustable Flip Desk Clock \(MC-F2\) User Manual](#)

mooas MC-F2

mooas Standing Height Adjustable Flip Desk Clock (MC-F2) User Manual

Model: MC-F2 | Brand: mooas

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your mooas Standing Height Adjustable Flip Desk Clock. Please read these instructions carefully to ensure proper use and longevity of your product.

PRODUCT FEATURES

- Analog Flip Clock with Automatic Flipping: Displays time with a classic analog sentiment.
- Sleek and Slim Standing Desk Clock Design.
- Adjustable Stand: Allows for preferred height settings.
- Simple Time Setting: Easily adjust time by turning the dial.
- Intuitive and Highly Legible Flip Numbers.
- AM/PM Icon: Clearly distinguishes morning and afternoon hours.
- Battery Operated: Requires one D-type battery (not included).

PACKAGE CONTENTS

- Main Clock Body
- Stand Base
- Height-adjustable stand bar
- User Manual

SETUP

1. Battery Installation

The clock requires one D-type battery (not included). To install:

1. Locate the battery cover on the back of the clock's central column.
2. Rotate the cover counter-clockwise to open.
3. Insert one D-type battery, ensuring correct polarity (+/-).
4. Replace the battery cover and rotate clockwise to secure.



Image: Close-up view of the battery compartment, indicating where to insert the D-type battery.

2. Adjusting Height

The clock features an adjustable stand for two height options:

- **Low Position:** The clock sits closer to the base.
- **High Position:** Extend the stand bar for a taller display.




Image: Two clocks demonstrating the adjustable height feature, showing both low and high configurations.

OPERATING INSTRUCTIONS

1. Setting the Time

To set the correct time:

 1. Locate the time setting dial on the right side of the clock.
2. Turn the dial counter-clockwise to advance the minutes and hours.
3. Continue turning until the desired time is displayed. Note that you cannot turn the dial backward. If you pass the desired time, you must cycle through 12 hours to reach it again.



Your browser does not support the video tag.

Video: Official mooas video demonstrating the time setting process by turning the dial.

2. AM/PM Indicator

The clock features an AM/PM icon next to the hour display to help distinguish between morning and afternoon hours. This indicator changes automatically as the time progresses.

3. Reinserting Number Panels

If a number panel accidentally comes out of its groove, gently insert it back into the designated slot. Ensure it is properly seated to allow for smooth flipping.



Image: A hand demonstrating how to reinsert a number panel if it detaches from the clock mechanism.

MAINTENANCE

To keep your mooas Flip Desk Clock in optimal condition:

- Wipe the clock with a soft, dry cloth to remove dust.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.
- Ensure the clock is placed on a stable, flat surface to prevent accidental falls.
- Replace the D-type battery when the clock stops functioning or time becomes inaccurate.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not operating/displaying time	No battery or depleted battery.	Ensure a fresh D-type battery is correctly installed.
Time is inaccurate (running fast/slow)	Weak battery or mechanical issue.	Replace the battery. If the issue persists, contact customer support. Note that slight deviations may occur due to the mechanical nature.
Numbers not flipping smoothly	Obstructed mechanism or bent number panel.	Check for any obstructions. Ensure all number panels are correctly seated in their grooves and not bent. Avoid bending the small pins that guide the flips.

Problem	Possible Cause	Solution
Loud clicking sound	Normal operation for a mechanical flip clock.	The clicking sound is inherent to the mechanical design as the numbers flip. This is not a defect.

SPECIFICATIONS

Feature	Detail
Brand	mooas
Model Number	MC-F2
Color	Adjustable Black
Display Type	Analog
Style	Antique / Retro
Power Source	Battery Powered (1 D battery required, not included)
Product Dimensions	9.64"W x 6.92"H
Material	Plastic
Item Weight	2.55 pounds (1.16 Kilograms)
Operation Mode	Electrical

IMPORTANT SAFETY INFORMATION

- Keep out of reach of small children to prevent accidental damage or injury.
- Do not attempt to disassemble or modify the clock, as this may void the warranty and cause malfunction.
- Dispose of used batteries responsibly according to local regulations.