

SoliWood B0CPLX5NFM

SoliWood Kids Sandbox User Manual

Model: B0CPLX5NFM

Brand: SoliWood

1. INTRODUCTION

Thank you for choosing the SoliWood Kids Sandbox. This outdoor wooden sandpit is designed to provide a safe and engaging play environment for children, featuring an adjustable sun canopy and foldable bench seats for convenience and protection. Constructed from durable cedar wood, it offers long-lasting quality and weather resistance.

This manual provides essential information for the proper assembly, operation, maintenance, and troubleshooting of your sandbox. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Adult supervision is required at all times when children are using the sandbox.

- Ensure all parts are securely fastened before allowing children to play.
- Regularly inspect the sandbox for loose parts, splinters, or damage. Discontinue use if any damage is found and repair immediately.
- Do not allow children to climb on the canopy or benches when folded, as this may cause injury or damage to the product.
- Keep the play area clear of obstacles and ensure sufficient space around the sandbox.
- The sandbox is intended for outdoor use only.
- Recommended age for use: 3 years and up.
- This product is certified with Children Products' Standard: ASTM, F963, CPSIA.

3. PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or

damaged, please contact customer support.

Part	Description	Quantity
Wooden Panels	Pre-drilled cedar wood panels for sandbox frame and benches.	(Varies by design)
Canopy Frame	Wooden poles and connectors for canopy support.	(Varies by design)
Sun Canopy	Weather-resistant fabric canopy.	1
Fabric Liner	Non-woven fabric for sand containment.	1
Hardware Pack	Screws, bolts, nuts, and tools (e.g., Allen wrench).	1 set

Note: Specific quantities of wooden panels and canopy frame components may vary. Refer to the detailed assembly diagram included in the packaging for precise counts.

4. SETUP AND ASSEMBLY

Assembly typically takes 30-40 minutes with two adults. Follow these steps carefully.

4.1 Preparation

- Choose a flat, level outdoor surface for the sandbox.
- Unpack all components and lay them out, comparing them with the parts list.
- Gather necessary tools (usually included in the hardware pack, but a screwdriver might be helpful).

4.2 Assembly Steps

1. **Assemble the Base Frame:** Connect the main wooden side panels using the provided screws and pre-drilled holes. Ensure all connections are snug but do not overtighten.
2. **Install the Fabric Liner:** Once the base frame is assembled, place the fabric liner inside the sandbox area. This liner helps contain the sand and prevents it from mixing with the ground.
3. **Attach Bench Seats:** Secure the foldable bench seat panels to the sides of the sandbox frame. These benches are designed to fold inward to cover the sandpit.
4. **Construct the Canopy Frame:** Assemble the vertical support poles and horizontal bars for the canopy. Attach these to the designated points on the sandbox frame.
5. **Mount the Sun Canopy:** Slide the weather-resistant sun canopy onto the assembled canopy frame. Ensure it is properly aligned and secured.
6. **Final Check:** Double-check all screws and connections to ensure they are tight and secure.

ADJUSTABLE DESIGN

Keep Sunny and Rain Off



Angle Adjustable



Foldable Cover



Adjustable Knobs

Height Adjustable




Cover Use

Figure 1: Adjustable Design Features - Illustrates how the canopy angle and height can be adjusted, and how the benches fold to cover the sandbox.

Weather-resistant Cover

Enjoy the protection of the Sun or rain outdoors

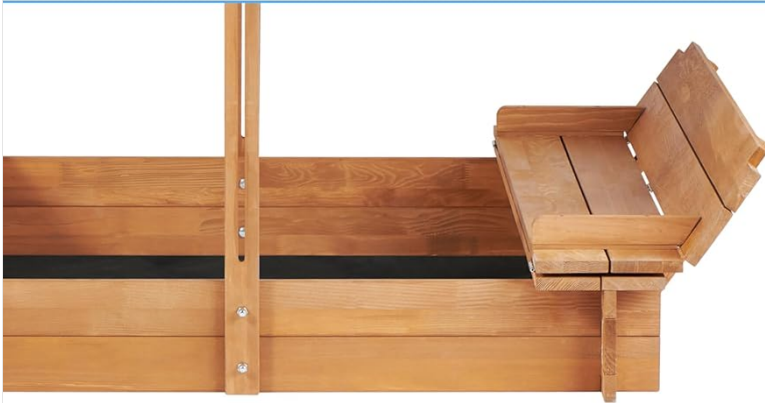

Fabric Bottom Liner

Prevent sand loss



2 Bench Seats

For 2-3 kids 3-10yrs



Figure 2: Key Components - Highlights the weather-resistant cover, the two bench seats, and the fabric bottom liner for sand containment.

5. OPERATING INSTRUCTIONS

5.1 Filling the Sandbox

- Once assembled, fill the sandbox with play sand (not included). Do not overfill; leave sufficient space for children to play comfortably without sand spilling over.

5.2 Using the Adjustable Sun Canopy

- The sun canopy can be adjusted for angle and height to provide optimal shade. Use the adjustable knobs on the canopy supports to loosen, adjust, and then tighten the canopy into the desired position.
- When not in use or during inclement weather, the canopy can be lowered completely to act as a protective cover for the sandpit.

5.3 Using the Foldable Bench Seats

- The two bench seats can be folded outwards to provide seating for children.
- To cover the sandbox, fold the bench seats inwards. They will meet in the middle, forming a protective lid that

helps keep out debris, animals, and rain.



Figure 3: Sandbox in Use - Depicts children enjoying the sandbox with the canopy extended for sun protection.

6. MAINTENANCE

- **Cleaning:** Wipe down wooden surfaces with a damp cloth as needed. Avoid harsh chemicals. The wood is treated with 100% Non-VOC Water-Based Painting.
- **Sand Care:** Regularly rake and aerate the sand to prevent compaction and promote drainage. Replace sand periodically or as needed.
- **Covering:** Always cover the sandbox with the folded benches or lowered canopy when not in use to protect the sand from weather, debris, and animals.
- **Inspection:** Periodically check all screws and fasteners for tightness. Tighten if necessary. Inspect wooden components for splinters, cracks, or signs of wear. Address any issues promptly to ensure safety.
- **Weather Protection:** While the cedar wood is weather-resistant, prolonged exposure to extreme weather conditions may affect its lifespan. Consider applying a wood sealant annually if desired, ensuring it is child-safe.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Sandbox feels unstable after assembly.	Loose fasteners or uneven ground.	Ensure all screws are tightened. Relocate the sandbox to a flat, level surface.
Canopy does not stay in position.	Adjustable knobs are not tightened sufficiently.	Tighten the adjustable knobs firmly after positioning the canopy.
Sand is escaping from the bottom.	Fabric liner is not properly installed or damaged.	Ensure the fabric liner covers the entire bottom area. If damaged, contact customer support for a replacement.
Wood appears discolored or worn.	Natural weathering or lack of protective sealant.	This is normal for outdoor wood. Consider applying a child-safe wood sealant annually to maintain appearance and prolong life.

8. SPECIFICATIONS

- **Product Dimensions:** 46.5" L x 46.5" W x 46.5" H (Overall Size)
- **Item Weight:** Approximately 48.9 pounds
- **Material:** Solid Cedar Wood
- **Coating:** 100% Non-VOC Water-Based Painting
- **Recommended Age:** 3 years and up
- **Certifications:** ASTM, F963, CPSIA
- **Manufacturer:** SOLIWOOD
- **Model Number (ASIN):** B0CPLX5NFM



Debris



Suitable Age
3+



Weather
Elements



Prevents entry
Of small animals



Figure 4: Product Dimensions - Provides a visual representation of the sandbox's measurements.

9. WARRANTY AND SUPPORT

SoliWood is committed to providing high-quality products. For any assembly assistance, missing parts, or product issues, please contact our customer support team.

- **Parts Replacement:** We offer a 90-day parts replacement solution for any defective or missing components.
- **Assembly Service:** Our team is available 24 hours a day, 7 days a week to assist with assembly questions.
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official SoliWood website for direct support.

For more information about SoliWood products, visit the official SoliWood Store: [SoliWood Store on Amazon](#).

