

ECONTROLLY AXD7532

ECONTROLLY AXD7532 Remote Control User Manual

For Pioneer AV Receivers: VSX-1125-K, VSX-60, VSX-819H, VSX-819HK

INTRODUCTION

This manual provides instructions for the ECONTROLLY AXD7532 remote control, designed for use with various Pioneer AV receiver models including VSX-1125-K, VSX-60, VSX-819H, and VSX-819HK. This remote control is engineered for immediate use without requiring any programming. Simply install batteries to begin operation.






Figure 1: Front view of the ECONTROLLY AXD7532 Remote Control, showing all buttons and their labels.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use. No additional programming is required.

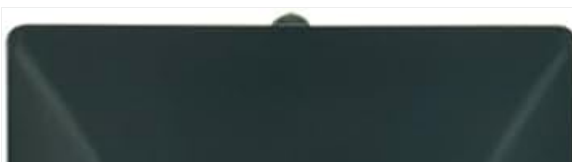



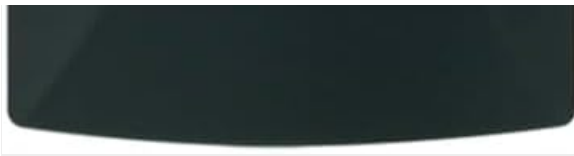


Figure 2: Rear view of the remote control, illustrating the battery compartment with the cover removed and space for two AAA batteries.

OPERATING INSTRUCTIONS

The ECONTROLLY AXD7532 remote control provides comprehensive control over compatible Pioneer AV receivers. Below is a general guide to its functions.

Key Functions Overview

Button/Section	Function
RECEIVER / ZONE 2 ON/OFF	Power on/off the main receiver and control Zone 2 power.
INPUT SELECT (BD, TV, DVR, CD, etc.)	Selects the desired input source for the receiver.
TV CONTROL (Input, CH+/-, VOL+/-)	Controls basic functions of a connected television.
VOL +/-	Adjusts the master volume level of the receiver.
MUTE	Mutes or unmutes the audio output.
Navigation Pad (Up, Down, Left, Right, ENTER)	Used for menu navigation and selection.
HOME MENU / SETUP	Accesses the receiver's main menu or setup options.
RETURN	Goes back to the previous menu or screen.
AUDIO PARAMETER / ADV SURR	Adjusts audio settings and selects advanced surround modes.
TUNER EDIT / MASTER VOLUME	Functions related to tuner editing and master volume control.
BASS +/- / TRE +/-	Adjusts bass and treble levels.
Number Pad (0-9, +10, ENTER)	Direct input for channels, tracks, or numerical settings.
DISPLAY / SLEEP	Controls display information and sleep timer functions.

For detailed functionality of each button, refer to your Pioneer AV receiver's specific user manual.

MAINTENANCE

- Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries.
- Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- Environmental Protection Material:** The remote is constructed from ABS environmental protection material, ensuring durability and a comfortable grip.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the AV receiver's infrared sensor.
 - Ensure the remote is pointed directly at the receiver.
- **No programming required:** This remote control is designed to work immediately with compatible Pioneer AV receivers upon battery installation. If it does not function, verify compatibility with your specific receiver model (VSX-1125-K, VSX-60, VSX-819H, VSX-819HK).
- **Short operating distance:** The remote control has a transmitting distance of approximately 8-10 meters (26-33 feet). If the range is significantly shorter, replace the batteries. Ensure there are no strong light sources or other infrared devices interfering with the signal.
- **Buttons not responding:** Ensure the remote is clean and free from debris that might obstruct button movement. If individual buttons are unresponsive, the remote may require replacement.

SPECIFICATIONS

Feature	Detail
Model Number	AXD7532
Brand	ECONTROLLY
Compatibility	Pioneer AV Receivers (AXD7532, AXD7533, VSX-1125-K, VSX-60, VSX-819H, VSX-819HK)
Power Source	2 x AAA Alkaline Batteries (not included)
Material	ABS Environmental Protection Material
Operating Distance	Approx. 8-10 meters (26-33 feet)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2.3 ounces
Special Feature	Ergonomic design, Soft Plastic Buttons, Sensitive Keys, Signal Stability

WARRANTY AND SUPPORT

For any questions regarding the ECONTROLLY AXD7532 remote control, please refer to the retailer or manufacturer's support channels. Specific warranty details may vary by region and point of purchase. Please retain your proof of purchase for any warranty claims.

This product is designed for compatibility with the listed Pioneer AV receiver models. For optimal performance, ensure your receiver is in good working condition and its infrared sensor is unobstructed.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question