

[Manuals.plus](#) /

› [ALLIMITY](#) /

› Allimity AH59-02196G Remote Control User Manual

ALLIMITY AH59-02196G

Allimity AH59-02196G Remote Control User Manual

For Samsung Home Cinema Soundbar Models: HW-C450, HW-C470, HW-C450/ZA, HW-C451, HW-C451/ZA

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Allimity AH59-02196G replacement remote control. This remote is designed to be compatible with specific Samsung Home Cinema Soundbar models, offering direct functionality without the need for programming.

SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover open, illustrating the correct placement for two AAA batteries.

Initial Use

No setup or programming is required. Once batteries are correctly installed, the remote control is ready for immediate use with compatible Samsung Home Cinema Soundbar models.

OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung Home Cinema Soundbar. Ensure there are no obstructions between the remote and the soundbar's sensor.



Image: Front view of the remote control, displaying the layout of all function buttons.

Button Functions

- **POWER (Orange Button):** Turns the soundbar on or off.
- **TV POWER (Yellow Button):** Controls the power of a connected television (if compatible).
- **MENU:** Accesses the soundbar's menu system.
- **TOOLS:** Provides quick access to common functions or settings.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current status or content.
- **VOL/CONTROL (+/-):** Adjusts the main volume level.
- **MUTE:** Mutes or unmutes the sound.

- **TV CH (Up/Down):** Changes TV channels (if controlling a compatible TV).
- **AUTO POWER:** Manages automatic power settings.
- **S/W LEVEL:** Adjusts subwoofer level.
- **DIMMER:** Adjusts the display brightness of the soundbar.
- **D/A INPUT:** Selects digital/analog input.
- **S.VOL:** Adjusts surround sound volume.
- **SOUND MODE:** Cycles through available sound modes (e.g., Standard, Music, Movie).
- **AV SYNC:** Adjusts audio-video synchronization.
- **DRC:** Activates or deactivates Dynamic Range Control.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA alkaline batteries are correctly installed.
 - Check for any obstructions between the remote control and the soundbar's sensor.
 - Verify that you are within the effective operating range and pointing the remote directly at the soundbar.
- **Limited functionality:**
 - Confirm that your soundbar model is listed as compatible (HW-C450, HW-C470, HW-C450/ZA, HW-C451, HW-C451/ZA).
 - Some functions may be specific to certain soundbar models or require specific settings on the soundbar itself. Refer to your soundbar's original manual for advanced features.

SPECIFICATIONS

Model Number	AH59-02196G
Compatible Devices	Samsung Home Cinema Soundbar (HW-C450, HW-C470, HW-C450/ZA, HW-C451, HW-C451/ZA)
Power Source	2 x AAA Alkaline Batteries (not included)

Dimensions	Approximately 5.9 x 1.9 x 0.5 inches (15 x 4.8 x 1.3 cm)
Item Weight	Approximately 1.9 ounces (54 grams)

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. Please refer to the seller or manufacturer for details regarding warranty coverage and customer support.

© 2023 Allimity. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question