

Hisense H45MOMK9

Hisense 45 Liter 1100 Watt Microwave Oven with Grill

Model: H45MOMK9

1. INTRODUCTION

Thank you for choosing the Hisense 45 Liter 1100 Watt Microwave Oven with Grill, model H45MOMK9. This appliance is designed to provide efficient and convenient cooking, reheating, and defrosting. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before using the appliance and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, burns, or injury to persons.

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- Do not attempt to tamper with or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Ensure the appliance is properly grounded.
- Always supervise children when the appliance is in use. This model includes a **Child Safety Lock** feature to prevent accidental operation by children.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Clean the oven regularly and remove any food deposits. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Only use utensils that are suitable for use in microwave ovens. Metal containers or utensils are not suitable for microwave cooking.
- The appliance operates on 220V. Ensure your power supply matches this requirement.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Hisense Microwave Oven.



Front view of the Hisense H45MOMK9 Microwave Oven, showcasing its sleek silver design and digital display.



Angled view of the microwave, highlighting its compact yet spacious design suitable for various kitchen setups.




Interior view of the microwave with the door open, showing the glass turntable and the spacious 45-liter capacity.



5 Microwave Power Levels



Close-up of the digital control panel and the microwave's interior, detailing the user interface and internal components.

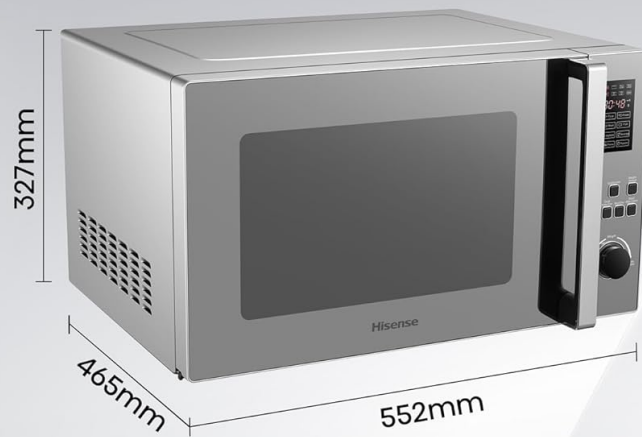

**Membrane
Digital Control**



**LED
Display**



**Defrost
Function**



**Child
Safety Lock**



**8 Auto-cooking
Menus**



**5 Microwave
Power Levels**

Diagram illustrating the 5 available microwave power levels, allowing for precise cooking control for various food types.

Hisense

Less Hassle More Taste

H45MOMK9



Overview of key features including Membrane Digital Control, LED Display, Defrost Function, Child Safety Lock, 8 Auto-cooking Menus, and 5 Microwave Power Levels.



Child Safety Lock



Graphic displaying the 8 convenient auto-cooking menus for popular dishes like Pizza, Steak, Vegetables, Pasta, Baked Potato, Popcorn, Milk Tea, and Roast Chicken Wings.



Defrost Function



Illustration of the Child Safety Lock feature, providing peace of mind by preventing unintended operation by children.

Membrane Digital Control



Visual representation of the Defrost Function, showing its effectiveness in preparing frozen foods for cooking.



Close-up of the Membrane Digital Control panel, demonstrating the intuitive interface for easy operation.

4. SETUP

Follow these steps to set up your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven. Ensure there is adequate ventilation around the appliance. Maintain a minimum clearance of 20 cm (7.9 inches) above the oven, 10 cm (3.9 inches) at the rear, and 5 cm (2 inches) on each side.
3. **Power Connection:** Plug the power cord into a standard 220V AC electrical outlet. Ensure the outlet is properly grounded.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a soft, damp cloth. Clean the glass turntable and roller ring with warm, soapy water.

5. OPERATING INSTRUCTIONS

Your Hisense microwave oven offers various cooking functions:

5.1 Basic Microwave Cooking

- **Setting Time:** Use the 'Time/Defrost' button or the 'Timer' dial to set the desired cooking time.
- **Setting Power Level:** Press the 'Microwave' button repeatedly to cycle through the 5 power levels (P10, P30, P50, P80, P100). P100 is full power.
- **Start Cooking:** Press the 'Start/+30Sec/Confirm' button to begin cooking.

5.2 Grill Function

The grill function is ideal for browning and crisping food. This model features a thermal grill for even cooking.

- Place food on the grill rack provided.
- Press the 'Grill/Combi' button to select the grill mode.
- Set the desired grilling time using the 'Timer' dial.
- Press 'Start/+30Sec/Confirm' to begin.

5.3 Combination Cooking

Combine microwave and grill functions for faster cooking with browning results.

- Press the 'Grill/Combi' button repeatedly to select the desired combination mode (e.g., C-1 for microwave + grill).
- Set the cooking time.
- Press 'Start/+30Sec/Confirm' to begin.

5.4 Defrost Function

The **Defrost Function** allows you to defrost food by weight or time.

- **Defrost by Weight:** Press the 'Weight/Defrost' button. Use the 'Weight' dial to select the food weight. The oven will automatically set the defrosting time.
- **Defrost by Time:** Press the 'Time/Defrost' button. Use the 'Timer' dial to set the defrosting time.
- Press 'Start/+30Sec/Confirm' to begin defrosting.

5.5 Auto-Cooking Menus

The oven features 8 pre-programmed auto-cooking menus for common foods. Simply select the menu and the oven will set the optimal cooking time and power level.

- Rotate the 'Auto Menu' dial to select the desired food category (e.g., Pizza, Steak, Vegetables, Pasta, Baked Potato, Popcorn, Milk Tea, Roast Chicken Wings).
- Press 'Start/+30Sec/Confirm' to begin cooking.

5.6 Child Safety Lock

To activate the Child Safety Lock, press and hold the 'Stop/Clear' button for 3 seconds. The lock indicator will appear on the display. To deactivate, press and hold the 'Stop/Clear' button again for 3 seconds.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Interior Cleaning:** The stainless steel interior is designed for easy cleaning. After each use, wipe the

interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent and a soft cloth, then wipe with a clean, damp cloth. Do not use abrasive cleaners or scouring pads.

- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly clean the door seal and adjacent parts with a soft, damp cloth to ensure proper sealing and prevent microwave leakage.
- Always unplug the oven from the power outlet before cleaning.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child Safety Lock activated.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker; Deactivate Child Safety Lock.
Food is not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and time as needed.
Light not working	Bulb is loose or burned out.	Contact qualified service personnel for bulb replacement.
Condensation inside oven door	Normal during cooking, especially with high moisture foods.	Wipe dry after use.
Microwave body electrifies (tingling sensation)	Grounding issue or internal electrical fault.	Immediately unplug the appliance. Do not use. Contact qualified service personnel for inspection and repair. This indicates a serious safety concern.

If the problem persists after attempting these solutions, please contact Hisense customer service or a qualified service technician. Do not attempt to repair the appliance yourself.

8. SPECIFICATIONS

Feature	Specification
Brand	Hisense
Model	H45MOMK9

Feature	Specification
Capacity	45 Liters
Microwave Power Output	1100 Watts
Power Consumption	900 Watts
Voltage	220 Volts
Installation Type	Freestanding
Material (Exterior)	Glass, Stainless Steel
Material (Interior)	Stainless Steel
Color	Silver
Product Dimensions (D x W x H)	45 cm x 63 cm x 35 cm (approximate, based on available data)
Item Weight	15 Kilograms
Special Features	Timer, Digital Control, Grill Function, Defrost Function, Child Safety Lock, 8 Auto-cooking Menus, 5 Microwave Power Levels
Included Components	Grill Rack

9. WARRANTY AND SUPPORT

Hisense products are manufactured to the highest quality standards. This product comes with a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty.

For technical support, service, or warranty claims, please contact Hisense customer service through their official website or the contact information provided in your product documentation. Always have your model number (H45MOMK9) and purchase details ready when contacting support.