

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hisense](#) /

› [Hisense H235RRE-WD Single Door Fridge with Water Dispenser User Manual](#)

Hisense H235RRE-WD

Hisense H235RRE-WD Single Door Fridge with Water Dispenser User Manual

Model: H235RRE-WD

[Introduction](#)

[Safety Information](#)

[Setup &](#)

[Installation](#)

[Operating](#)

[Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

Thank you for purchasing the Hisense H235RRE-WD Single Door Fridge with Water Dispenser. This manual provides important information regarding the installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.



Image 1.1: Front view of the Hisense H235RRE-WD Single Door Fridge with Water Dispenser.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is intended for household use only.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Unplug the appliance before cleaning or performing maintenance.
- Keep children away from packaging materials to prevent suffocation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. SETUP & INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Dispose of packaging responsibly. Check the appliance for any damage during transit. If damage is found, do not install or operate the appliance and contact your retailer.

3.2 Placement

Place the refrigerator on a firm, level surface away from direct sunlight, heat sources (e.g., stove, heater), and extreme cold. Ensure adequate air circulation around the appliance. Allow at least 10 cm (4 inches) of space at the back and sides for proper ventilation.



Image 3.1: Refrigerator dimensions and energy efficiency rating. Ensure sufficient clearance for ventilation.



Image 3.2: Detailed dimensions of the Hisense H235RRE-WD refrigerator: 1280mm height, 536.5mm depth, 519mm width.

3.3 Leveling

Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. A level appliance operates more efficiently and prevents door alignment issues.

3.4 Power Connection

Plug the appliance into a dedicated, properly grounded electrical outlet. Do not use extension cords or adapter plugs. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

3.5 Water Dispenser Initial Setup

Before first use, clean the water tank and dispenser components. Fill the water tank with potable water. Dispense a few glasses of water to flush out any air or manufacturing residues from the system.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator's temperature is controlled by a thermostat dial, typically located inside the fresh food

compartment. Turn the dial to adjust the cooling intensity. A higher number usually indicates a colder setting. Start with a medium setting and adjust as needed.



Image 4.1: Interior view highlighting the LED lighting and the temperature control dial near the Chiller Zone.

4.2 Water Dispenser Usage

To use the water dispenser, place a glass under the dispenser nozzle and press the lever. Ensure the internal water tank is filled. Refill the tank as needed by opening the lid and pouring in fresh, potable water.

4.3 Internal Features

- **Chiller Zone:** This compartment is designed for optimal freshness of specific items, such as dairy products or deli meats, requiring slightly colder temperatures than the main compartment.

Chill Zone



Image 4.2: The Chiller Zone provides a dedicated space for items requiring colder storage.



Image 4.3: A closer look at the Chiller Zone, ideal for preserving freshness.

- **Large Fresh Crisper:** Located at the bottom, this drawer helps maintain humidity levels to keep fruits and vegetables fresh for longer.

Large Fresh Crisper

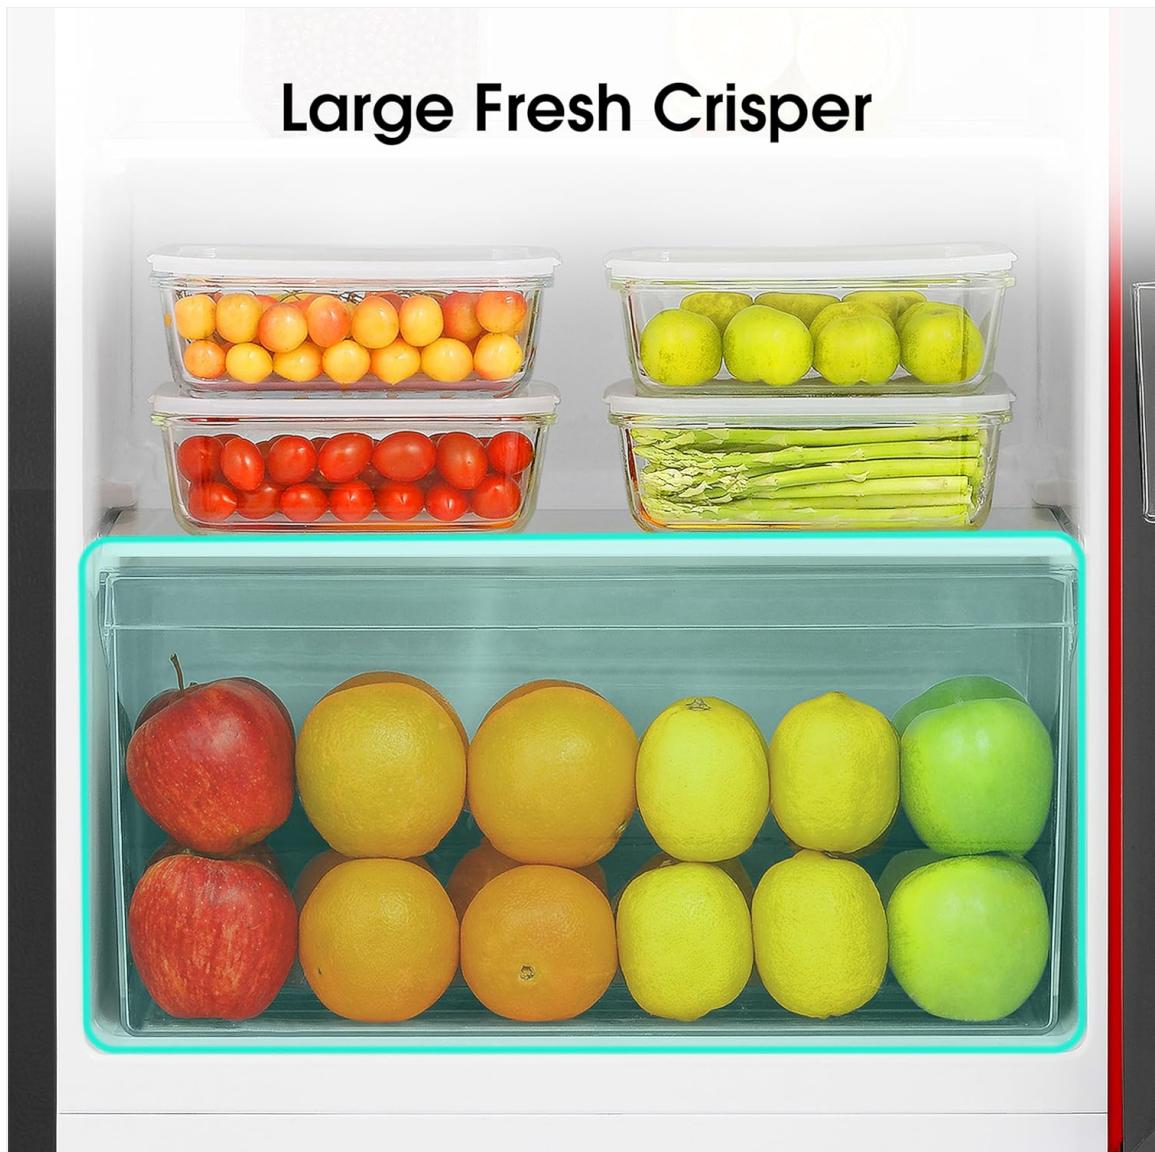


Image 4.4: The Large Fresh Crisper drawer designed for optimal storage of produce.

- **Safety Glass Shelves:** Adjustable shelves made of tempered glass for durability and easy cleaning.

Safety Tempered Glass Shelves

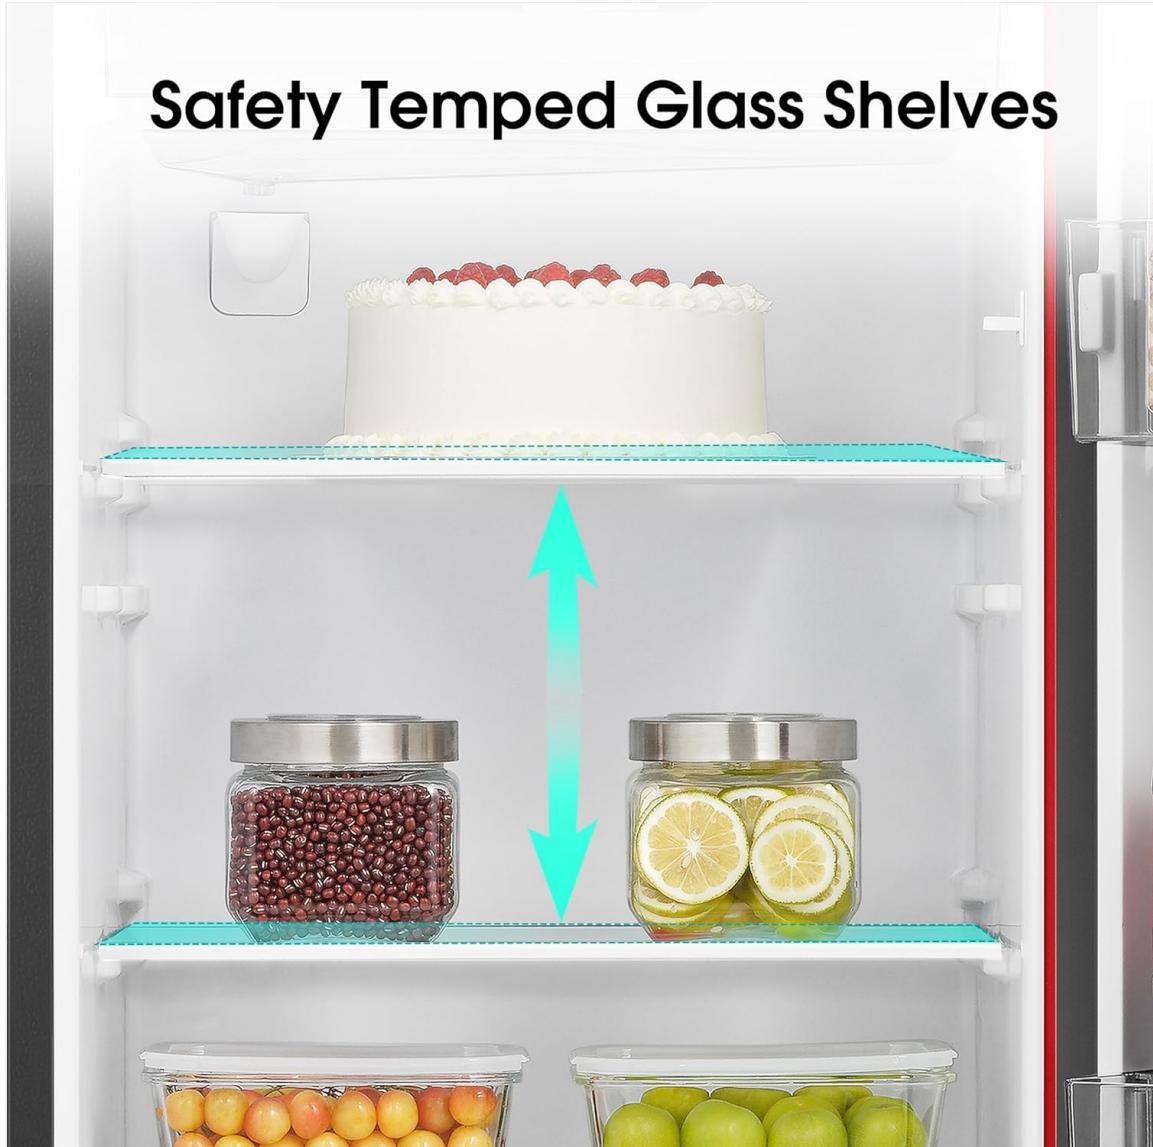


Image 4.5: Tempered glass shelves offer flexible storage and are easy to clean.

- **XXL Door Balcony:** Provides ample space for larger bottles and containers in the refrigerator door.
- **Recessed Handle:** Integrated handle design for a sleek appearance and easy opening.

Recessed Handle



Image 4.6: The recessed handle provides a clean look and ergonomic grip.

5. CARE & MAINTENANCE

5.1 Cleaning the Interior

Unplug the refrigerator before cleaning. Wash the interior surfaces, shelves, and drawers with a mild detergent and warm water solution. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners or harsh chemicals.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. For the water dispenser, clean the nozzle and tray regularly to prevent buildup. Ensure no water enters the electrical components.

5.3 Anti-Bacteria Door Seal

The door seal is designed with anti-bacterial properties. Regularly clean the door gasket with a damp cloth to ensure it remains free of food particles and maintains its sealing effectiveness. A clean seal helps prevent bacterial growth and ensures energy efficiency.

Anti-Bacteria Door Seal



Image 5.1: The Anti-Bacteria Door Seal helps maintain a hygienic environment inside the refrigerator.



Image 5.2: A detailed illustration of the anti-bacterial properties of the door seal.

5.4 Defrosting

This refrigerator may require manual defrosting if ice builds up significantly in the freezer compartment (if applicable) or on the cooling plate. Unplug the appliance, remove all food, and allow the ice to melt naturally. Do not use sharp objects to remove ice.

6. TROUBLESHOOTING

Before contacting service, review this section for common issues and their solutions.

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; power outage; circuit breaker tripped.	Check power cord connection; check household fuse/circuit breaker; ensure power outlet is functional.
Temperature is not cold enough.	Temperature control set too warm; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature control to a colder setting; avoid frequent door openings; allow warm food to cool before placing in fridge; ensure adequate space around appliance.
Unusual noises.	Appliance not level; objects vibrating against the refrigerator; normal operating sounds.	Level the appliance using the adjustable feet; ensure nothing is touching the back or sides; gurgling/hissing sounds are normal for refrigerant circulation.
Water dispenser not working.	Water tank empty; dispenser lever not pressed correctly.	Refill the water tank; ensure the lever is fully depressed.
Excessive ice buildup.	Door seal not tight; door opened too frequently; high humidity.	Check and clean door seal; avoid frequent door openings; manually defrost if necessary.

7. SPECIFICATIONS

Brand	Hisense
Model Number	H235RRE-WD
Capacity	177 Liters
Colour	Red
Package Dimensions (L x W x H)	126 x 51 x 51 cm
Item Weight	32.6 kg
Features	Water Dispenser, XXL Door Balcony, Anti-Bacteria Door Seal, Voltage Protection, Chiller Zone, Safety Glass Shelves, Large Fresh Crisper

Note: Specifications are subject to change without notice for product improvement.

8. WARRANTY & SUPPORT

8.1 Warranty Information

This Hisense appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or service inquiries, please contact Hisense customer support. Contact details can typically be found on the Hisense official website or in your warranty documentation.

