

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BEKO](#) /

› [Beko BLSA210M4SN Built-in Refrigerator User Manual](#)

BEKO BLSA210M4SN

Beko BLSA210M4SN Built-in Refrigerator User Manual

Model: BLSA210M4SN

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Beko BLSA210M4SN built-in refrigerator. Please read these instructions thoroughly before installation and use, and keep them for future reference. This appliance is designed for domestic use only.

SAFETY INFORMATION

General Safety:

- Ensure the appliance is unplugged before cleaning or maintenance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Electrical Safety:

- Connect the appliance to a grounded socket protected by a fuse.
- Do not use extension cords or multiple sockets.
- Ensure the power cord is not trapped or damaged during installation.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your refrigerator.

Unpacking

Remove all packaging materials, tapes, and protective films. Keep packaging materials out of reach of children. Inspect the appliance for any damage during transit.

Placement

- Install the refrigerator in a dry, well-ventilated room, away from direct sunlight and heat sources (e.g., oven, radiator).
- Ensure sufficient air circulation around the appliance.
- The appliance is designed for a 122 cm niche.
- Level the appliance using the adjustable feet to ensure proper door closing and operation.

Electrical Connection

Before plugging in, ensure the voltage and frequency indicated on the rating plate match your household power supply. Allow the refrigerator to stand upright for at least 4 hours before connecting it to the power supply to allow the refrigerant to settle.

Door Reversal

This refrigerator features a reversible door, allowing it to open from either the left or right side. Refer to the detailed diagrams in the separate installation guide for instructions on how to reverse the door swing. This process typically involves moving hinges and door stops.

Built-in Installation

The appliance is designed for built-in integration using a slide system. Follow the specific instructions provided in the separate installation template or guide for mounting the refrigerator into your kitchen cabinet niche. Ensure the appliance is securely fastened and aligned with the surrounding cabinetry.



Image 1: Exterior view of the Beko BLSA210M4SN built-in refrigerator, showing its sleek design ready for integration into kitchen cabinetry.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your refrigerator.

Initial Start-up

After connecting the appliance to power, allow it to run for several hours (e.g., 6-12 hours) before placing food inside. This allows the interior to reach the optimal temperature.

Temperature Control

The temperature inside the refrigerator is controlled by a thermostat. Adjust the thermostat dial to your desired setting. A medium setting is usually recommended for general use. Higher settings result in colder temperatures.

Food Storage Guidelines

- Store cooked foods and dairy products on upper shelves.
- Raw meat and fish should be stored in sealed containers on the lowest shelf to prevent dripping onto other foods.
- Fruits and vegetables should be stored in the crisper drawer.
- Do not place hot food directly into the refrigerator; allow it to cool to room temperature first.
- Ensure all food is covered to prevent drying out and odor transfer.



Image 2: Interior view of the Beko BLSA210M4SN refrigerator, showing adjustable glass shelves and a transparent crisper drawer for fresh produce.

Door Alarm

Your refrigerator is equipped with a door alarm feature. If the refrigerator door is left open for an extended period, an audible alarm will sound to alert you, helping to conserve energy and maintain internal temperature.



Image 3: Interior view of the Beko BLSA210M4SN refrigerator door, featuring multiple adjustable shelves for bottles, jars, and smaller items.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and hygiene.

Cleaning the Interior

- Unplug the appliance before cleaning.
- Clean the interior regularly with a solution of warm water and a mild, non-abrasive detergent.
- Wipe dry thoroughly to prevent mold and odors.
- Removable shelves and drawers can be washed separately.

Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth and a mild cleaner. Avoid abrasive cleaners or solvents that could damage the finish.

Defrosting

This refrigerator features static cooling. Frost may accumulate on the rear wall of the refrigerator compartment. This is normal. The frost will automatically defrost during the compressor's off cycle, and the water will evaporate. If a thick layer of ice builds up, manually defrost the appliance by unplugging it and allowing the ice to melt naturally. Do not use sharp objects to remove ice.

TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, plug loose, fuse blown.	Check power supply, plug, and fuse.
Temperature is not cold enough.	Thermostat setting too high, door opened frequently, warm food placed inside.	Adjust thermostat, minimize door openings, allow food to cool before storing.
Excessive noise.	Appliance not level, objects touching the back.	Level the appliance, ensure clearance from walls.
Water on the bottom of the refrigerator.	Drain hole blocked.	Clear the drain hole with a small, soft tool.
Door alarm sounds frequently.	Door not closing properly, door left open too long.	Ensure door is fully closed, check for obstructions, reduce door open time.

SPECIFICATIONS


Key technical details of the Beko BLSA210M4SN refrigerator:

- **Model Number:** BLSA210M4SN
- **Brand:** Beko
- **Configuration:** Single Door Refrigerator
- **Total Net Capacity:** 198 Liters
- **Installation Type:** Built-in (Slide System)
- **Niche Height:** 122 cm
- **Cooling System:** Static Cooling
- **Defrost System:** Automatic (refrigerator compartment)
- **Door:** Reversible
- **Special Features:** Door Alarm
- **Color:** White
- **Noise Level:** 35 dB
- **Product Dimensions (D x W x H):** 54.5 x 54.5 x 121.5 cm
- **Energy Consumption:** 100 kWh/annum



Beko


BLSA210M4SN 7520220026

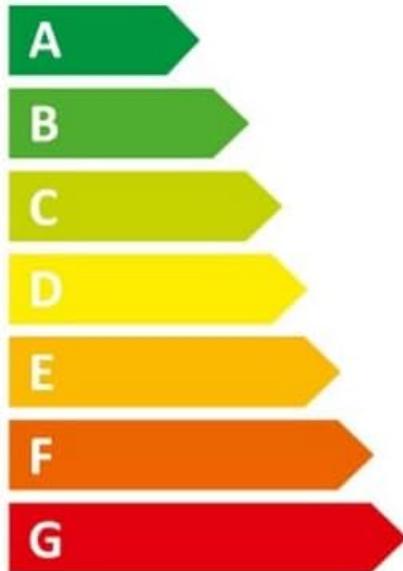

100 kWh/annum



198 L

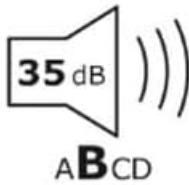

2019/2016

Image 4: Energy label for the Beko BLSA210M4SN refrigerator, indicating an energy efficiency class E, 100 kWh/annum consumption, 198 L capacity, and 35 dB noise level.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Beko website. Keep your purchase receipt as proof of purchase for warranty claims. Do not attempt to repair the appliance yourself; contact authorized service personnel for assistance.

For further assistance, you may contact Beko customer service through their official channels, typically found on their website or in the documentation provided with your product.

© 2023 Beko. All rights reserved. Information in this manual is subject to change without notice.