

Bluey 17669

Bluey Celebration Home Playset Instruction Manual

Model: 17669

1. INTRODUCTION

The Bluey Celebration Home Playset brings the joy of Bluey's world to life, offering an immersive play experience for children aged 3 and above. This portable, two-story playset is designed for imaginative roleplay and storytelling, featuring interactive elements and a variety of accessories to enhance playtime.

The playset includes an exclusive 2.5-inch Bluey party figure, complete with a festive party hat, and 11 pieces of furniture and accessories. Its durable design and built-in carry handle make it ideal for on-the-go fun.

2. WHAT'S IN THE BOX

- 1 x Bluey Celebration Home Playset
- 1 x Exclusive 2.5-inch Bluey Figure (with party hat)
- 11 x Removable Furniture and Accessories (e.g., beds, dining table with chairs, fridge, oven with Duck Cake, toilet, bathtub)
- 1 x Sticker Sheet (party-themed)

3. SETUP

3.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect all pieces for any damage. Ensure all listed items in the 'What's in the Box' section are present.

3.2 Playset Assembly

The Bluey Celebration Home Playset requires no complex assembly. The house unfolds to reveal its interior rooms. Simply unlatch the side hook to open the house for play.

The playset features a foldable design for easy storage and portability. To open, unlatch the pink hook on the side of the house. To close, fold the two halves together and secure the hook.



Image: Bluey Celebration Home Playset in its compact, closed form.

3.3 Accessory Placement

Place the 11 removable furniture pieces and accessories within the playset's various rooms as desired. The sticker sheet can be used to further customize the house with party-themed decorations.

A promotional graphic for the Bluey Celebration Home Playset. It features three circular images: a woman and child holding a Bluey plushie, a toy truck labeled 'VEHICLES', and a toy house labeled 'FIGURES'. The text 'RECREATE' is prominently displayed in the center, with the tagline 'THE MOST MEMORABLE MOMENTS FROM THE SHOW WITH THESE ADORABLE TOYS!' below it.

Image: The playset with its various accessories, including beds, chairs, and a table, ready for placement.

4. OPERATING INSTRUCTIONS

4.1 Interactive Sounds and Lights

The playset features interactive sounds and lights. Locate the activation button, often depicted as an octopus or similar icon, within the house's interior (typically in the upper floor). Press this button to activate various phrases, sounds, and songs from the Bluey show, accompanied by flashing lights.



Image: Interior of the playset, highlighting the interactive sound and light button on the upper level.

4.2 Play Features

- **Open/Close House:** The house can be opened to reveal a two-story interior with multiple rooms, and closed for compact storage.
- **Movable Accessories:** Arrange the 11 furniture pieces and accessories in different rooms to create various play scenarios.
- **Bluey Figure:** Use the exclusive 2.5-inch Bluey figure to act out scenes from the show or create new adventures.
- **Outdoor Balcony:** A pop-down balcony area is available on the side of the house for additional

play space.

5. MAINTENANCE

5.1 Cleaning

To clean the playset and accessories, wipe them with a damp cloth and mild soap. Do not immerse electronic components in water. Ensure all parts are dry before storing or resuming play.

5.2 Storage

When not in use, fold the playset into its compact form and secure the side latch. Store all accessories inside the closed house or in a designated container to prevent loss.

6. TROUBLESHOOTING

6.1 No Sound or Lights

- Check if the power switch for the sound and light features is in the 'ON' position.
- Ensure batteries are correctly installed and are not depleted. Replace batteries if necessary.

6.2 Difficulty Folding/Unfolding

- Ensure no accessories are obstructing the folding mechanism. Remove all loose items before attempting to fold or unfold the house.
- Verify the side latch is fully disengaged when opening and securely fastened when closing.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Bluey
Model Number	17669
UPC	630996176696
Age Range Description	Youth (36 to 180 months)
Included Components	1 Playset, 1 Figure, 11 Accessories, 1 Sticker Sheet
Is Assembly Required	No
Item Dimensions	4.94 x 17.5 x 11.32 inches

Item Weight	1.21 Pounds
Number of Pieces	11 (accessories)
Color	Multicolor
Theme	Cartoon
Material Type	PCB, Polypropylene, Poly (Vinyl Chloride) Copolymer, Acrylonitrile-Butadiene-Styrene Copolymer, Paper

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Bluey brand website. Keep your purchase receipt as proof of purchase.

9. SAFETY INFORMATION

CHOKING HAZARD: Small parts. Not for children under 3 years. Adult supervision is recommended during play, especially with younger children, to ensure all small parts are handled appropriately.