

[Manuals.plus](#) /

› [Smartby](#) /

› Smartby Universal Replacement Remote for TCL Google TV (Model: For TCL-Google-TV-Remote)

Smartby For TCL-Google-TV-Remote

Smartby Universal Replacement Remote for TCL Google TV

Model: For TCL-Google-TV-Remote

INTRODUCTION

This manual provides instructions for the Smartby Universal Replacement Remote Control, designed for TCL Google TV and TCL Android TV models. It is compatible with various TCL Mini-LED, QLED, 4K UHD Smart TVs, including models such as 75R646, 65R646, 55R646, 75S546, 65S546, 55S546, 50S546, 43S446, 50S446, 55S446, 65S446, 75S446, 85S446, and all TCL Q6/Q7/QM8/S3/S4 Series. This remote offers a comfortable design and easy-to-use buttons, serving as a direct replacement.

Note: This remote control does not include voice control functionality.



Universal for All TCL Android Smart TV Remote

RC802V FNR1

RC802V FNR2

RC902V FMR1

RC902N FMR1

And more...

Image: The Smartby Universal Replacement Remote, highlighting its compatibility with various TCL Android Smart TV remote models.

SETUP INSTRUCTIONS

The Smartby Universal Replacement Remote is designed for immediate use without complex setup procedures. No programming or pairing is required.

1. **Insert Batteries:** Open the battery compartment on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
2. **Ready to Use:** Once batteries are installed, the remote is ready to operate your compatible TCL Google TV or Android TV.

No Setup Required



Image: The remote control in a home setting, emphasizing its plug-and-play functionality.

OPERATING INSTRUCTIONS

This remote utilizes infrared (IR) technology for a stable connection, allowing control from a distance of up to 30 feet. Ensure a clear line of sight between the remote and your TV's IR receiver for optimal performance.

Key Functions:

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Directional Buttons & OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down (P+/P-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Settings Button:** Opens the TV's settings menu.
- **Input/Source Button:** Switches between different input sources (HDMI, AV, etc.).
- **Shortcut Keys:** Six dedicated shortcut keys provide quick access to popular streaming applications like Netflix, YouTube, and others.



Image: The remote control, illustrating its infrared technology for reliable operation.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always use new AAA batteries and dispose of old batteries responsibly.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote is unresponsive or works intermittently.	• Low or dead batteries. • Obstruction between remote and TV. • Remote not pointed directly at TV's IR sensor. • TV's IR sensor is blocked.	• Replace batteries with new ones. • Ensure a clear line of sight to the TV. • Point the remote directly at the TV's IR sensor. • Check if anything is blocking the TV's IR sensor.
Remote has short operating range.	• Weak batteries. • Interference from strong light sources (e.g., direct sunlight).	• Replace batteries. • Try operating the remote in different lighting conditions.
Specific buttons do not work.	• Button malfunction. • Compatibility issue with a specific TV function.	• Ensure the remote is compatible with your specific TV model. • Contact customer support if multiple solutions fail.

SPECIFICATIONS

- **Brand:** Smartby
- **Model Number:** For TCL-Google-TV-Remote
- **Compatibility:** Universal replacement for TCL Google TV, TCL Android TV, TCL LED FHD HDR UHD QLED 4K Smart TVs (e.g., 75R646, 65R646, 55R646, 75S546, 65S546, 55S546, 50S546, 43S446, 50S446, 55S446, 65S446, 75S446, 85S446, and all TCL Q6/Q7/QM8/S3/S4 Series).
- **Technology:** Infrared (IR)
- **Operating Range:** Up to 30 feet (approx. 9 meters)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Features:** 6 shortcut keys, ergonomic design, no programming required.
- **Color:** Black
- **Product Dimensions:** 8 x 1.5 x 0.5 inches (20.3 x 3.8 x 1.3 cm)
- **Item Weight:** 2.08 ounces (59 grams)



Image: Multiple views of the remote control, detailing its design.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's return policy or contact the seller directly through the platform where the product was purchased. The standard return policy for this item is 30 days for refund/replacement.

Seller: [Genuine Parts Center](#)