

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price Laugh & Learn Learning Kitchen Playset \(Model HYN83\) Instruction Manual](#)

Fisher-Price HYN83

Fisher-Price Laugh & Learn Learning Kitchen Playset

MODEL: HYN83

Introduction

The Fisher-Price Laugh & Learn Learning Kitchen Playset is designed to provide engaging and educational pretend play experiences for babies and toddlers. This interactive playset features two sides of play, multiple learning modes, and various accessories to stimulate development through exploration and imaginative activities.

Safety Information

- Always supervise children during play.
- Ensure all parts are securely assembled before use.
- Keep small parts away from children under 3 years to prevent choking hazards.
- Do not immerse the electronic components in water. Clean with a damp cloth only.
- Dispose of batteries properly. Do not mix old and new batteries or different types of batteries.

What's in the Box

- 1 Laugh & Learn Learning Kitchen Playset (assembly required)
- 5 Role-play accessories (3 food shapes, 1 pot, 1 spoon)
- 3 AA batteries (included)

Setup

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Assembly:** The playset requires minor assembly. Follow the visual instructions provided in the packaging to connect the two main kitchen sections. Ensure all connections are secure.
3. **Battery Installation:** The playset comes with 3 AA batteries. Locate the battery compartment, usually on the underside or back of the main unit. Use a Phillips head screwdriver to open the compartment,

insert the batteries observing polarity (+/-), and close the compartment securely.

Operating Instructions

The Learning Kitchen Playset offers four interactive play settings: Learning, Bilingual (English & Spanish), Music, and Imagination. Use the selector switch to choose your desired mode.



Image: The Fisher-Price Laugh & Learn Learning Kitchen Playset, showing its compact, folded design with a smiling refrigerator on one side and a kitchen counter with a sink, stove, and oven on the other. Several play food accessories are in the foreground.

- **Power Switch:** Locate the ON/OFF switch, typically on the side or back of the main unit, to power the playset.
- **Mode Selector:** A switch or button allows selection between Learning, Bilingual, Music, and Imagination modes. Each mode activates different sounds, songs, and phrases.
- **Interactive Elements:**
 - **Light Switch:** Flip the light switch to activate lights and sounds.
 - **Oven & Refrigerator Doors:** Open and close the doors to hear phrases and sounds related to food and cooking.
 - **Roller Bar:** Spin the roller bar for additional sounds and motor skill development.
 - **Flip Pages:** Turn the pages on the playset to discover new images and corresponding sounds/phrases.
 - **Shape Sorter:** Insert the included food shapes into the correct slots on the refrigerator door to learn about shapes and colors.

Interactive Features



Image: A young child sitting on the floor, happily engaging with the Fisher-Price Learning Kitchen Playset. The image highlights the recommended age range of 6-36 months, emphasizing its suitability for early developmental stages.

The playset is designed to engage children aged 6 months to 3 years with a variety of learning opportunities:

- **Educational Content:** Over 75 songs, tunes, sounds, and phrases teach the alphabet, numbers, colors, shapes, and more.
- **Bilingual Learning:** Offers content in both English and Spanish to introduce early language skills.
- **Fine Motor Skills:** Activities like flipping switches, opening doors, and sorting shapes help strengthen fine motor skills and hand-eye coordination.
- **Cause & Effect:** Children learn about cause and effect through interactive responses to their actions.
- **Imaginative Play:** Encourages early pretend play, allowing children to mimic cooking and household activities.



75+ songs, sounds & phrases teach ABCs, 123s & more

Image: A close-up of the Fisher-Price Learning Kitchen Playset, showing a child's hand interacting with the ON/OFF light switch. The image highlights the feature of 75+ songs, sounds, and phrases that teach ABCs, 123s, and more.



2 sides of play including shape-sorting fun

Image: A child's hand placing a red cylindrical shape into a green shape-sorting slot on the refrigerator side of the Fisher-Price Learning Kitchen Playset. The image emphasizes the two sides of play, including shape-sorting fun.



Comes with 5 role-play pieces

Image: A top-down view of the five role-play accessories included with the Fisher-Price Learning Kitchen Playset: a green carrot, a red spice shaker, a white milk carton, a yellow spoon, and a red pot.



Image: The back view of the Fisher-Price Learning Kitchen Playset, showing the interior of the oven and refrigerator. The refrigerator door is open, revealing shelves with images of food items and shape-sorting slots. The five play accessories are scattered in front.

Maintenance

- **Cleaning:** Wipe the playset surfaces with a soft, damp cloth. Do not use abrasive cleaners or immerse the electronic parts in water.
- **Storage:** The playset folds for convenient storage. Ensure it is clean and dry before storing in a cool, dry place away from direct sunlight.
- **Battery Replacement:** If sounds or lights become faint or stop working, replace the batteries. Refer to the 'Setup' section for battery installation instructions.

Troubleshooting

Problem	Possible Cause	Solution
No sound or lights	Batteries are low or incorrectly installed.	Check battery polarity and replace with fresh AA batteries. Ensure the ON/OFF switch is in the 'ON' position.
Intermittent sound/lights	Loose battery connection or low battery power.	Ensure batteries are securely in place. Replace batteries if necessary.

Problem	Possible Cause	Solution
Playset does not respond to interaction	Incorrect mode selected or electronic malfunction.	Verify the mode selector switch is set to a desired play mode (Learning, Bilingual, Music, Imagination). If the issue persists after checking batteries, contact customer support.

Specifications

- **Product Dimensions:** 9 x 9 x 12.01 inches
- **Item Weight:** 4.7 pounds
- **Model Number:** HYN83
- **Manufacturer Recommended Age:** 6 months - 3 years
- **Batteries:** 3 AA batteries (included)
- **Manufacturer:** Fisher-Price
- **Release Date:** June 15, 2024

Warranty and Support

For warranty information or customer support, please refer to the official Fisher-Price website or contact their customer service department. Specific warranty details are typically provided with the product packaging or available online.

You can visit the Fisher-Price Store for additional product information and support:[Fisher-Price Store](#)