

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Recliner Massage Armchair Dark Grey Fabric User Manual

vidaXL 372416

vidaXL Recliner Massage Armchair

Model: 372416

INTRODUCTION

This user manual provides essential information for the safe and efficient use of your vidaXL Recliner Massage Armchair. Please read this manual thoroughly before assembly and operation, and retain it for future reference.



Image: The vidaXL Recliner Massage Armchair, dark grey fabric, positioned in a modern living room next to a floor lamp and a small side table.

SAFETY INSTRUCTIONS

- Ensure all components are present and undamaged before assembly.
- Do not use the product if any parts are missing or damaged.
- Keep children and pets away during assembly.
- Place the armchair on a flat, stable surface.
- Do not exceed the maximum weight capacity of 110 kg (242.5 lbs).
- Disconnect the USB power source for the massage function when not in use or during cleaning.
- Avoid spilling liquids on the fabric or electrical components.
- Do not attempt to modify or repair the armchair yourself. Contact customer support for assistance.

COMPONENTS AND PARTS

Before beginning assembly, verify that all parts are included in the packaging. While a detailed parts list is not provided, the main components typically include:

- Chair base and frame
- Backrest
- Seat cushion
- Armrests (often integrated or attachable)
- Legs/Feet
- Massage unit with remote control and USB cable
- Assembly hardware (screws, bolts, washers, Allen key)



Image: Front view of the recliner, showing the seat, backrest, and armrests. This image helps identify the main upholstered components.

SETUP AND ASSEMBLY

Assembly is required for this armchair. Follow these general steps for proper setup. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Attach Legs/Feet:** Securely attach the legs or feet to the chair base using the provided hardware. Ensure they are tightened firmly.
3. **Assemble Base:** If the base comes in multiple parts, connect them according to the instructions, ensuring all connections are stable.
4. **Attach Backrest:** Slide or bolt the backrest onto the seat base. Listen for a click or ensure bolts are securely fastened.
5. **Connect Armrests:** If separate, attach the armrests to the main frame.
6. **Connect Massage Unit:** Locate the USB cable for the massage function, usually found in a side pocket or attached to the chair. Connect it to a certified 5V DC USB power source (not included).
7. **Final Check:** Once assembled, gently rock the chair to ensure all connections are secure and the chair is stable.



Image: Rear view of the recliner, showing the back of the chair and the lower legs. This view can be helpful during assembly to ensure proper alignment of components.

OPERATING INSTRUCTIONS

Manual Recline Function

The armchair features a manual recline mechanism. To recline:

- Locate the handle on the right side of the armchair.
- Pull the handle to release the locking mechanism.
- Lean back to adjust the backrest and footrest to your desired position. The chair allows for a maximum recline of 135 degrees.
- To return to the upright position, pull the handle again and push forward with your body weight.



Image: A sequence of illustrations showing the armchair transitioning from an upright position to a fully reclined position, demonstrating the manual recline function.

Vibration Massage Function

The armchair is equipped with a 6-point vibration massage system. To use the massage function:

- Ensure the USB cable is connected to a certified 5V DC USB power source (not included).
- Use the included remote control to select different massage programs and intensity levels.
- The 6 massage points are strategically located to provide targeted vibration massage.



Image: The recliner with purple circles indicating the six vibration massage points on the backrest, lumbar, and seat areas.

Convenient Features

The armchair includes practical features for enhanced comfort:

- **Cup Holders:** Two integrated cup holders are located on the armrests for your beverages.
- **Side Pocket:** A convenient side pocket is available for storing the remote control or other small essentials.



Image: A close-up view of the armchair's armrest, clearly showing the integrated cup holder and the side storage pocket with the massage remote control inside.

CARE AND MAINTENANCE

Proper care will extend the life of your armchair:

- **Fabric Cleaning:** For general cleaning, use a soft brush or vacuum cleaner with an upholstery attachment to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner, testing on an inconspicuous area first.
- **Frame and Mechanism:** Periodically check all bolts and screws to ensure they are tight. Re-tighten if necessary. Do not lubricate the recline mechanism unless specifically instructed by the manufacturer.
- **Electrical Components:** Keep the USB cable and remote control dry. Do not immerse them in water.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Mechanism obstruction or loose connections.	Check for any objects obstructing the mechanism. Ensure all assembly bolts are tightened.
Massage function not working.	USB power not connected or faulty remote.	Ensure the USB cable is securely connected to a working 5V DC USB power source. Check remote control batteries if applicable (though typically USB powered).
Chair feels unstable.	Loose legs or frame connections.	Re-tighten all screws and bolts, especially those connecting the legs and main frame.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Color	Dark Grey
Material	Fabric (100% polyester), Metal, Plywood
Filling Material	Foam, Polypropylene fiber
Dimensions (Sitting Position)	77 x 94.5 x 100 cm (W x D x H) / 30.3 x 37.2 x 39.4 inches
Dimensions (Reclined Position)	77 x 149.5 x 78 cm (W x D x H) / 30.3 x 58.9 x 30.7 inches
Seat Width	50 cm (19.7 inches)
Seat Depth	58 cm (22.8 inches)
Seat Height from Ground	42-44 cm (16.5-17.3 inches)
Armrest Height from Ground	55.5 cm (21.9 inches)
Recline Angle	Up to 135 degrees
Massage Type	6-point vibration massage (no heating)
Input Voltage	5V DC
Input Current	2A
Maximum Load Capacity	110 kg (242.5 lbs)
Assembly Required	Yes
Model Number	372416

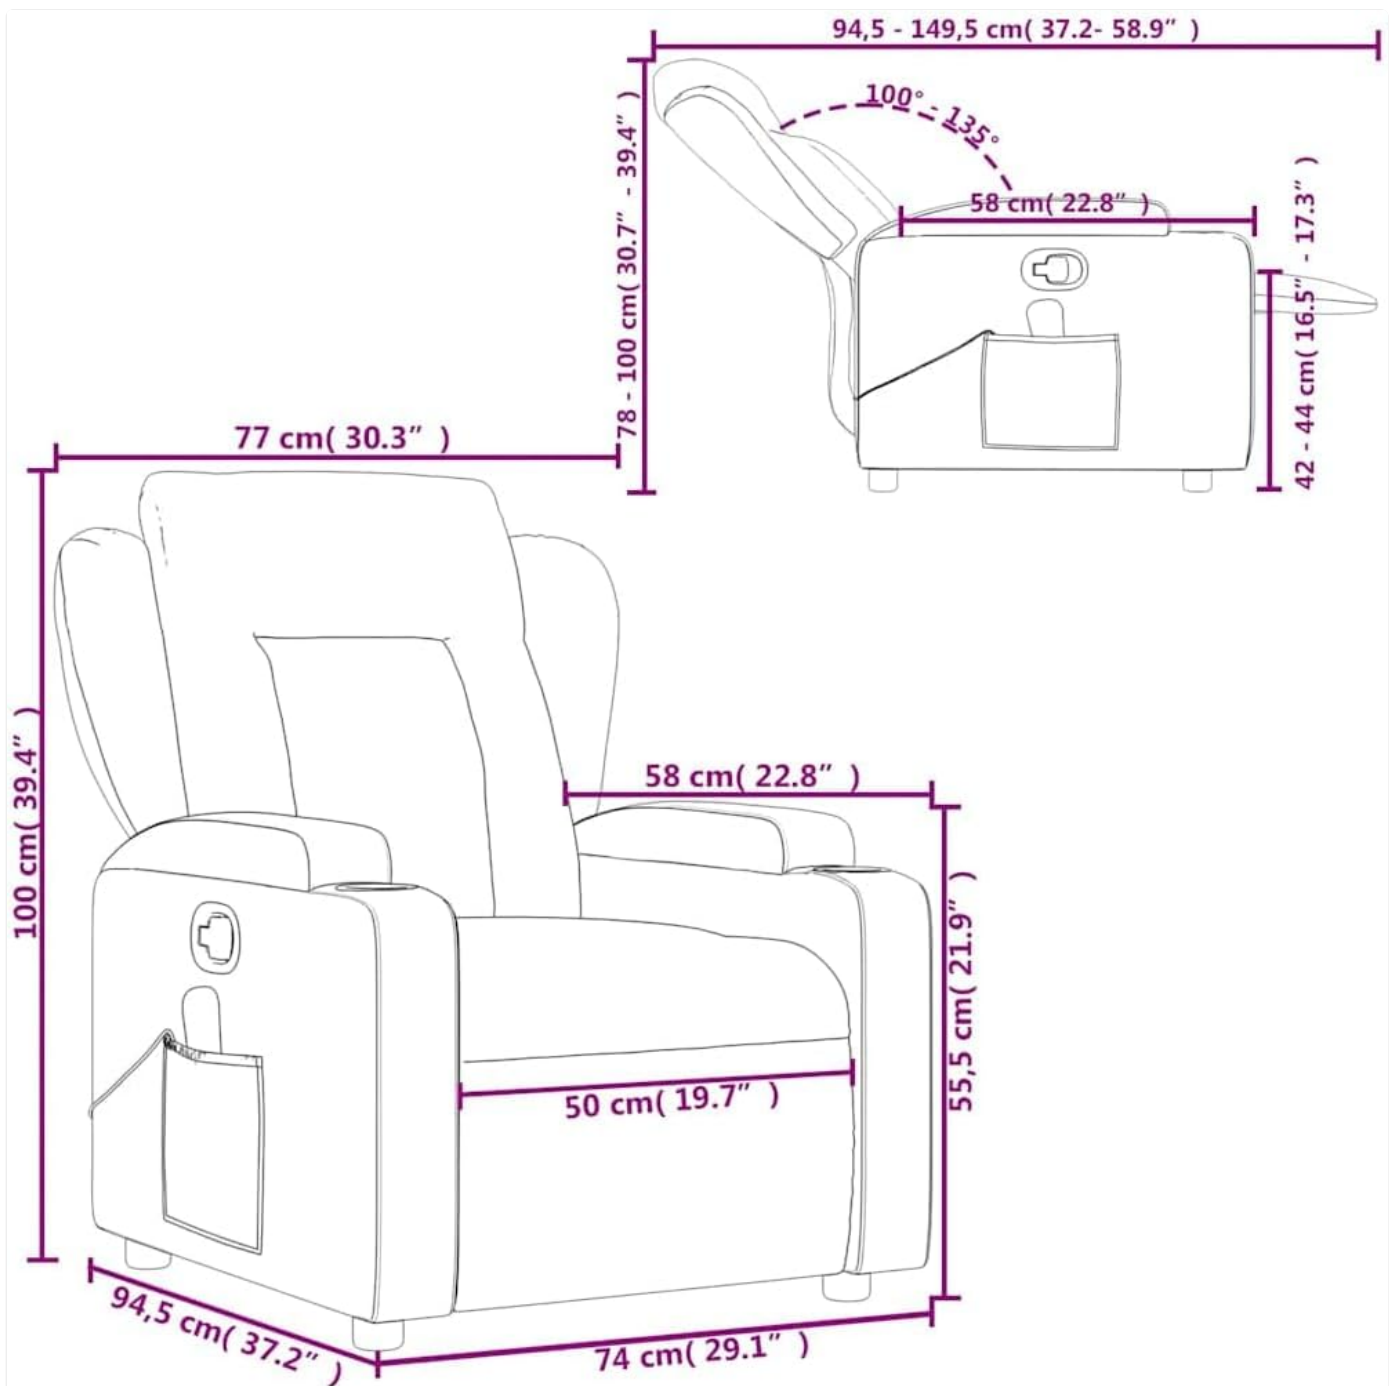


Image: A technical drawing of the armchair with all key dimensions labeled in centimeters and inches, showing both upright and reclined states.

WARRANTY INFORMATION

Specific warranty details are not provided in this manual. Please refer to your purchase documentation or the retailer's website for information regarding warranty coverage and terms. Typically, products come with a limited manufacturer's warranty covering defects in materials and workmanship.

CUSTOMER SUPPORT

For any questions, missing parts, or issues not covered in this manual, please contact vidaXL customer support. You can usually find contact information on the vidaXL official website or through the retailer where you purchased the product. Please have your model number (372416) and purchase details ready when contacting support.

