

[manuals.plus](#) /

› [eo](#) /

› [eo Digital Alarm Clock ED-014 User Manual](#)

eo ED-014

eo Digital Alarm Clock with Phone Stand & Pen Holder User Manual

Model: ED-014

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your eo Digital Alarm Clock, model ED-014. This multifunctional device integrates a digital alarm clock with a clear LED display, a convenient phone stand, and dual pen holders, designed to enhance your desktop organization.



The eo Digital Alarm Clock, showcasing its integrated phone stand, pen holder, and clear LED display.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- eo Digital Alarm Clock Unit (Model ED-014)
- USB-C Power Cable
- User Manual (This document)

3. PRODUCT OVERVIEW

The eo Digital Alarm Clock features a split-front design with a large mirror-finish LED display. It includes an elevated smartphone stand and dual pen holders for organizational convenience.

Key Features:

- Digital Alarm Clock with Snooze function
- LED Mirror Finish Display for clear visibility
- USB-C Powered operation
- Raised Smartphone Stand with charging cable gap
- Dual Pen Holders

- Temporal Memory function (requires CR2032 battery, not included)
- Front-facing control buttons



Dual Slot Pen Holder



Digital Alarm Clock



This image highlights the clock's key features: a dedicated smartphone stand for charging, dual pen holders for organization, and the digital alarm clock display showing time and date.



Details the CR2032 battery compartment for temporal memory, the adjustable kickstand, the elevated phone stand design, and the accessible front-facing control buttons.

4. SETUP

4.1 Power Connection

1. Connect the provided USB-C cable to the USB-C port located at the back of the alarm clock.
2. Plug the other end of the USB-C cable into a compatible 5V USB power adapter (not included).
3. The display will illuminate, indicating the clock is powered on.

4.2 Temporal Memory Battery Installation (Optional)

To retain time settings during a power outage, install a CR2032 lithium cell battery (not included).

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one CR2032 battery with the positive (+) side facing up.
4. Close the battery compartment cover securely.

5. OPERATING INSTRUCTIONS

The clock features four control buttons located on the front panel: **MODE**, **AL** (Alarm), **UP**, and **DOWN**, and **SNZ** (Snooze).



Illustrates the process of setting two alarms with snooze, the large mirror-finish LED display, and the USB-C port for power.

5.1 Setting Time and Date

1. In normal time display mode, press and hold the **MODE** button for 3 seconds to enter time setting mode. The hour digits will flash.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **MODE** again to move to minute setting. Use **UP** and **DOWN** to adjust minutes.
4. Press **MODE** again to set the year (YY). Use **UP** and **DOWN** to adjust.
5. Press **MODE** again to set the month (MM). Use **UP** and **DOWN** to adjust.
6. Press **MODE** again to set the day (DD). Use **UP** and **DOWN** to adjust.
7. Press **MODE** one more time to exit setting mode, or wait 10 seconds for it to exit automatically.

5.2 12/24 Hour Format

In normal time display mode, press the **UP** button to switch between 12-hour and 24-hour formats.

5.3 Setting Alarms (Dual Alarms)

1. In normal time display mode, press the **AL** button once to view Alarm 1 (A1). Press **AL** again to view Alarm 2 (A2).
2. While viewing A1 or A2, press and hold the **AL** button for 3 seconds to enter alarm setting mode. The hour digits will flash.
3. Use the **UP** and **DOWN** buttons to adjust the alarm hour.
4. Press **AL** again to move to minute setting. Use **UP** and **DOWN** to adjust minutes.
5. Press **AL** again to enable/disable the alarm. Use **UP** or **DOWN** to select ON or OFF.
6. Press **AL** one more time to exit setting mode, or wait 10 seconds for it to exit automatically.

5.4 Snooze Function

- When an alarm sounds, press the **SNZ** button to activate the snooze function. The alarm will pause and sound again after a few minutes (default snooze duration).
- To turn off the alarm completely, press any other button (**MODE**, **AL**, **UP**, **DOWN**) when the alarm is sounding or during the snooze period.

5.5 Using the Phone Stand

The elevated smartphone stand is designed to hold your phone securely. A built-in gap allows for hassle-free charging while your phone is docked.

5.6 Using the Pen Holders

The clock features dual pen holders on each side. These grooves are suitable for storing pens, pencils, or other small desk accessories.

6. MAINTENANCE

6.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or display.

6.2 Battery Replacement (Temporal Memory)

If the clock loses time settings frequently after power disconnection, the CR2032 temporal memory battery may need replacement. Follow the instructions in Section 4.2 to replace the battery.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Clock display is off or flickering.	No power or unstable power connection.	Ensure the USB-C cable is securely connected and the power adapter is functioning correctly. Try a different USB port or adapter.
Time/Date resets after power disconnection.	CR2032 temporal memory battery is missing or depleted.	Install or replace the CR2032 battery (see Section 4.2).

Issue	Possible Cause	Solution
Alarm does not sound.	Alarm is not enabled or set incorrectly.	Verify that the alarm is set to ON and the time is correct (see Section 5.3).
Buttons are unresponsive.	Temporary software glitch.	Disconnect the power cable for a few seconds, then reconnect it to reset the device.

8. SPECIFICATIONS



A visual representation of the eo Digital Alarm Clock's dimensions: 180mm length, 130mm height, and 20mm width.

Feature	Detail
Brand	eo
Model Number	ED-014
Color	White

Feature	Detail
Product Dimensions	13 x 3.81 x 18 cm (approx. 180mm x 130mm x 20mm)
Item Weight	300 g
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Corded Electric (USB-C, 5V)
Display Type	Digital LED
Time Format	12H/24H
Alarm	Dual Alarms with Snooze Function
Special Features	Alarm, Calendar Display, Illuminated, Large Display, Pen Stand, Elevated Smartphone Holder, Temporal Memory (CR2032)

9. WARRANTY AND SUPPORT

The eo Digital Alarm Clock (Model ED-014) comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. For warranty claims, technical support, or any inquiries regarding your product, please refer to the manufacturer's official website or contact their customer service department through the retailer where the product was purchased.