

- Manuals.plus /
- > GYMAX /
- > GYMAX Mobile Magnetic Whiteboard User Manual, 60x90cm

GYMAX 60x90cm

GYMAX Mobile Magnetic Whiteboard User Manual

Model: 60x90cm

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your GYMAX Mobile Magnetic Whiteboard. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

SAFETY INSTRUCTIONS

- Ensure all parts are securely fastened during assembly and before use.
- Do not overload the whiteboard or accessory tray.
- Keep small accessories (magnets, marker caps) away from young children to prevent choking hazards.
- Use only dry-erase markers on the whiteboard surface.
- Lock the wheels when the whiteboard is in a stationary position to prevent accidental movement.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Mobile Whiteboard Frame
- 1 x Double-sided Whiteboard Panel
- 4 x Lockable Caster Wheels
- 1 x Accessory Tray
- 1 x Set of Assembly Hardware
- 1 x Set of Accessories (markers, eraser, magnets - specific quantities may vary by model)
- 1 x Instruction Manual



Image: A detailed diagram illustrating the dimensions of the 60x90cm whiteboard and a visual representation of the included accessories: 6 black markers, 1 board eraser, and 12 magnets.

SETUP AND ASSEMBLY

Assembly is straightforward. Follow the numbered instructions provided in the included manual. Ensure all connections are tight for stability.

1. Unpack all components and verify against the package contents list.
2. Attach the caster wheels to the base of the frame. Ensure they are securely tightened.
3. Assemble the vertical support poles and connect them to the base.
4. Mount the whiteboard panel onto the frame, ensuring it can rotate freely.
5. Attach the accessory tray to the designated position on the frame.
6. Confirm all screws and fasteners are secure before use.



Smooth



Quiet



Lockable




Thoughtful Details



Whiteboard Stopper



ABS Corner Protector

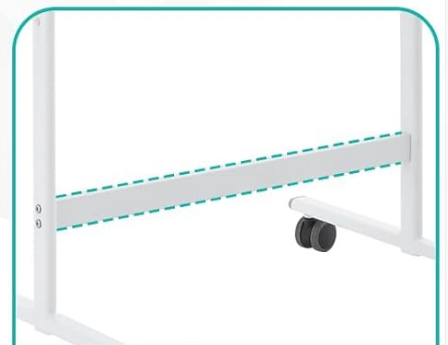

Reinforced Aluminum Alloy Frame

Image: Close-up views of the whiteboard's thoughtful details, including the whiteboard stopper, ABS corner protectors for safety, the reinforced aluminum alloy frame for durability, and the 360-degree rotating lockable caster wheels for mobility and stability.

OPERATING INSTRUCTIONS

Writing and Erasing

Use only dry-erase markers on the whiteboard surface. To erase, use the provided board eraser or a soft, dry cloth. For stubborn marks, a specialized whiteboard cleaner can be used.

Smooth to Write & Easy to Erase



Front Side with Storage Tray



**360° Rotatable
Double-sided Whiteboard**

Image: A close-up of the whiteboard surface demonstrating smooth writing and easy erasing. An inset graphic illustrates the 360-degree rotatable double-sided whiteboard feature, highlighting its versatility.

Height Adjustment

The whiteboard's height can be adjusted to suit various users, from children to adults, whether seated or standing. Locate the height adjustment mechanisms on the vertical poles, unlock them, set the desired height, and re-lock securely.

2-Level Height Adjustment

Suitable for children & adults



Image: A visual representation of the whiteboard's 2-level height adjustment feature, showing a child using it at 151cm and an adult at 178cm, indicating its suitability for various users.

Board Rotation

This whiteboard features a double-sided design. To rotate the board, unlock the rotation mechanism (typically a button or lever near the board's pivot point), carefully flip the board to the desired side, and then re-lock the mechanism to secure it in place.

Mobility and Stability

The whiteboard is equipped with four universal caster wheels for easy movement. To move the whiteboard, unlock all four wheels. To keep the whiteboard stationary, engage the locks on all four wheels.

MAINTENANCE

Cleaning the Whiteboard Surface

- Regularly clean the whiteboard surface with a dry-erase eraser after each use.

- For a deeper clean or to remove ghosting, use a specialized whiteboard cleaning spray and a soft cloth.
- Avoid abrasive cleaners or materials that could damage the surface.

Frame and Wheels

- Wipe the metal frame with a damp cloth to remove dust.
- Periodically check the wheels for any debris that might hinder movement and clean as necessary.
- Ensure all screws and bolts remain tight. Tighten if any looseness is detected.

TROUBLESHOOTING

- **Issue: Whiteboard is unstable.**
Solution: Ensure all assembly screws are tightened. Check that the height adjustment mechanisms are securely locked. Verify that the caster wheels are locked when the board is stationary.
- **Issue: Difficulty erasing marks.**
Solution: Confirm that only dry-erase markers are being used. Use the provided eraser or a clean, soft cloth. For stubborn marks, apply a whiteboard cleaning spray. Avoid using permanent markers.
- **Issue: Wheels are not rolling smoothly.**
Solution: Check for any debris (hair, dust) caught in the wheels and remove it. Ensure the wheel locks are disengaged when attempting to move the board.

SPECIFICATIONS

Brand	GYMAX
Model	60x90cm
Dimensions (Whiteboard Panel)	60 x 90 cm
Adjustable Height	Yes (e.g., 151cm to 178cm)
Material	Metal, ABS, Aluminum
Features	Double-sided, Magnetic, 360° Rotatable, Lockable Caster Wheels, Accessory Tray
Recommended Use	School, Office, Presentations

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, GYMAX, or your retailer. Retain your proof of purchase for any warranty claims.

You can visit the [GYMAX Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPPBPM25>

More documents and user manuals: <https://manuals.plus/>