

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY Remote Control Instruction Manual for Saba TV Models LD40CHD105, S4035R, LD22WDV105, SBC32FH, LD40CHS1051ES, LD40CHD1050, LE40PV15T2, S4015R, LE40PV14-S4015R, S4025R, LED40AHD1051E(T)

ALLIMITY MM-SAB002-NP

ALLIMITY Remote Control Instruction Manual

Model: MM-SAB002-NP

1. INTRODUCTION

Thank you for choosing the ALLIMITY Remote Control. This remote is designed as a direct replacement for various Saba TV models, offering full functionality without the need for complex programming or setup. Its ergonomic design ensures comfortable handling and reliable performance.

This manual provides essential information on how to set up, operate, and maintain your new remote control.

2. SETUP AND BATTERY INSTALLATION

The ALLIMITY remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2.1: Battery compartment with cover removed, showing battery orientation.

Once batteries are installed, the remote is ready for use with compatible Saba TV models without any additional programming.

3. OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original Saba TV remote. Below is a general overview of common buttons and their functions.



Figure 3.1: Front view of the ALLIMITY Remote Control.

- **Power Button (●):** Turns the TV on or off.
- **Source Button:** Selects input sources (e.g., HDMI, AV, USB).
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes TV channels sequentially.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates menus and confirms selections.

- **Menu Button:** Accesses the TV's main menu.
- **Exit Button:** Exits current menu or on-screen display.
- **Info Button:** Displays information about the current program or input.
- **EPG Button:** Accesses the Electronic Program Guide.
- **Subtitle Button:** Toggles subtitles on or off.
- **DVB Button:** Switches to Digital Video Broadcasting mode.
- **Colored Buttons (Red, Green, Yellow, Blue):** Perform specific functions depending on the TV's menu or application.

Point the remote control directly at the TV's infrared receiver for optimal performance. Ensure there are no obstructions between the remote and the TV.

4. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, high temperatures, humidity, or water.

5. TROUBLESHOOTING

If you experience issues with your ALLIMITY remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Limited range or intermittent response:**
 - Replace batteries. Weak batteries can reduce the remote's effective range.
 - Ensure the TV's infrared sensor is clean and not blocked.
- **Certain buttons not working:**
 - This remote is designed to be compatible with a range of Saba TV models. While it covers most common functions, some specific buttons might not be supported by all TV models. Refer to your TV's original manual for specific button functionalities.
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris that might be causing interference.

If the problem persists after trying these steps, please contact your retailer for further assistance.

6. SPECIFICATIONS

Brand	ALLIMITY
Model Number	MM-SAB002-NP
Color	Black
Connectivity Technology	Infrared
Special Features	No programming required, Ergonomic
Compatible Devices	Saba TV models: LD40CHD105, LED40TD1051E(T), S4035R, LD22WDV105, LED40TD1050E(T), SBC32FH, LD40CHS1051ES, Ld40chd1050, LE40PV15T2, S4015R, LE40PV14-S4015R, S4025R, LED40AHD1051E(T)
Maximum Range	10 Meters
Item Weight	59 Grams

© 2024 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPPBPXLY>

More documents and user manuals: <https://manuals.plus/>