

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY Remote Control Replacement Instruction Manual for OK. TV Models](#)

ALLIMITY MM-40E2A12B-NP

ALLIMITY Remote Control Replacement Instruction Manual

Model: MM-40E2A12B-NP

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, model MM-40E2A12B-NP. This remote is designed to be a direct replacement for various OK. TV models, offering full functionality without the need for programming or complex setup. Please read this manual thoroughly to ensure proper use and longevity of your remote control.

1.1 Product Overview

The ALLIMITY Replacement Remote Control is an ergonomically designed, lightweight device providing stable and long-distance remote control performance. It replicates all functions of your original remote for compatible OK. TV models.

1.2 Package Contents

- 1 x ALLIMITY Replacement Remote Control (Model: MM-40E2A12B-NP)

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.







Figure 1: Back view of the remote control, illustrating the location of the battery compartment for installation.

2.2 Initial Use

This ALLIMITY replacement remote control is designed for immediate use with compatible OK. TV models. No programming or complex installation is required. Once batteries are installed, point the remote towards your television and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the button layout and their corresponding functions:





Figure 2: Front view of the ALLIMITY remote control, displaying all functional buttons.

3.1 Basic Functions

- **Power (Red Button):** Turns the television on or off.
- **Mute (Speaker with X):** Mutes or unmutes the television audio.
- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **VOL +/-:** Adjusts the volume level up or down.
- **P ^/v (Channel Up/Down):** Changes the television channel sequentially.

3.2 Navigation and Menu Controls

- **Directional Arrows (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections or opens the channel list.
- **HOME:** Accesses the television's smart home screen or main menu.
- **MENU:** Opens the television's settings menu.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Closes the current menu or application.

3.3 Special Functions

- **NETFLIX (Red Button):** Direct access to the Netflix application.
- **LIST:** Displays a list of available channels or recordings.
- **INFO:** Shows information about the current program or input.
- **GUIDE:** Opens the Electronic Program Guide (EPG).
- **SOURCE:** Selects the input source (e.g., HDMI 1, AV).

- **REVEAL:** Functionality may vary by TV model, often related to teletext or hidden information.
- **INDEX:** Functionality may vary by TV model, often related to teletext index.
- **HOLD:** Functionality may vary by TV model, often related to teletext.
- **SUBTITLE:** Toggles subtitles on or off.
- **Play/Pause (||):** Controls media playback.
- **Fast Forward (>>):** Fast forwards media playback.
- **Rewind (<<):** Rewinds media playback.
- **Colored Buttons (R, G, Y, B):** Red, Green, Yellow, Blue buttons for specific functions within menus or applications (e.g., teletext, interactive services).
- **TEXT:** Accesses teletext services.
- **FAV:** Accesses favorite channels list.
- **AD:** Audio Description toggle.
- **I/II:** Switches between audio channels or languages.

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent potential leakage and damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your ALLIMITY Replacement Remote Control, refer to the following common problems and solutions:

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective operating range (typically up to 10 meters).
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
 - Test other buttons to determine if it's an isolated button issue or a general remote problem.

- **Remote range is reduced:**

- This often indicates low battery power; replace the batteries.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

If the problem persists after attempting these solutions, please refer to the support information provided by your product retailer.

6. SPECIFICATIONS

Feature	Specification
Brand	ALLIMITY
Model Number	MM-40E2A12B-NP
Connectivity Technology	Infrared
Maximum Range	10 Meters
Controller Type	Button Control
Number of Buttons	3 (This seems incorrect based on image, likely refers to main control buttons or a misinterpretation of data. The remote has many buttons.)
Batteries Required	2 x AAA (not included)
Special Features	Lightweight
Product Dimensions	17 x 5 x 1 cm
Item Weight	59 Grams

7. COMPATIBLE MODELS

This ALLIMITY Replacement Remote Control is compatible with the following OK. TV models:

- ODL 43662UN-TIB
- 40E2A12B
- ODL 40750FS-TB
- ODL 40662FN-TIB
- ODL 43661UN-TIB
- ODL 32662HN-TIB
- 32E2A12B
- OLE-24661HN-DIB
- ODL-40661FN-TIB

- ODL-55661UN-TIB
- ODL-32652H-TB
- ODL-50661UN-TIB
- ODL-50662UN-TIB
- ODL-40652F-TB
- ODL-32750HS-TB
- ODL-32661HN-TIB
- ODL-321963FM

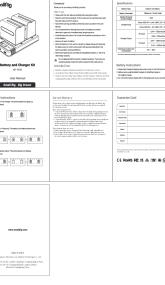
To confirm compatibility, compare your original remote control or your TV's model number (found on a label on the back of the device) with the list above.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact your product retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - MM-40E2A12B-NP

 <p>LifestyleGarden AMBER Collection Assembly Instructions</p> <p>Assembly instructions and product overview for the LifestyleGarden AMBER collection of outdoor furniture, including parts list and step-by-step assembly guide.</p>	
 <p>SCS EM Eye ESD Event Meter: Installation, Operation, and Maintenance Guide</p> <p>Comprehensive guide for the SCS EM Eye ESD Event Meter (Model 770715), covering installation, operation, features, troubleshooting, and specifications. Detects and measures ESD events for CDM, HBM, and MM models.</p>	
 <p>Traveler Guitar TB-4P User Guide</p> <p>Comprehensive user guide for the Traveler Guitar TB-4P, covering setup, electronics, stringing, tuning, care, and warranty information.</p>	

	<p><u>NEC Multi Screen Tool</u> -</p> <p>NEC Multi Screen Tool NEC NP-PA600</p>
	<p><u>ENEON 4-Channel Battery Charger for SONY NP-F Series - User Manual</u></p> <p>This user manual provides essential information for the ENEON 4-channel battery charger, designed for SONY NP-F series batteries. It includes product overview, specifications, operating and storage conditions, precautions, and safety warnings.</p>
	<p><u>SmallRig NP-F970 Battery and Charger Kit User Manual</u></p> <p>User manual for the SmallRig NP-F970 Battery and Charger Kit, providing detailed information on specifications, warnings, intended use, charging instructions, and warranty service.</p>