

[Manuals.plus](#) /

› [HOFSTEIN](#) /

› HOFSTEIN LED Ceiling Light Sofo Instruction Manual

HOFSTEIN 4058383730768

HOFSTEIN LED Ceiling Light Sofo Instruction Manual

Model: 4058383730768

INTRODUCTION

Thank you for choosing the HOFSTEIN LED Ceiling Light Sofo. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before beginning installation and retain them for future reference.

hofstein®

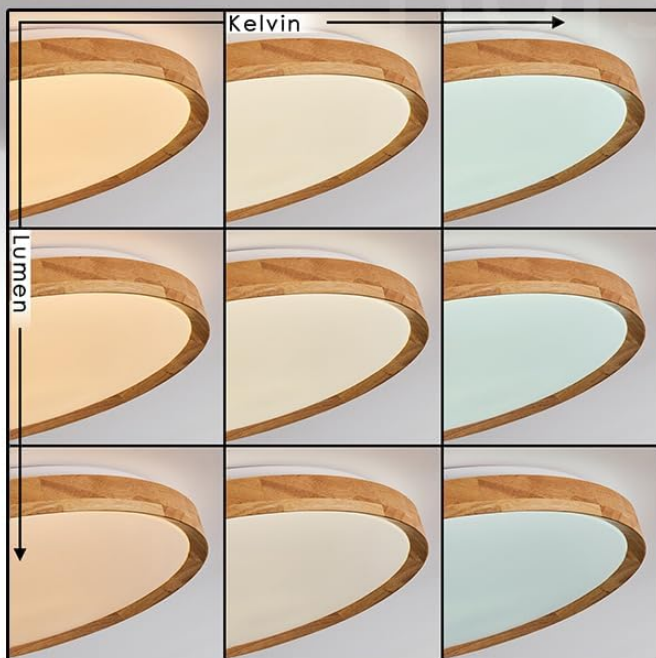


Image: The HOFSTEIN LED Ceiling Light Sofo, featuring a round design with a natural wood-look frame and a white light diffuser, installed on a ceiling.

SETUP AND INSTALLATION

Important Safety Information: Installation must be performed by a qualified electrician in accordance with local wiring regulations. Ensure the main power supply is switched off at the circuit breaker before commencing any electrical work.

Package Contents:

- 1x HOFSTEIN LED Ceiling Light Sofo fixture
- 1x Remote control
- Mounting hardware (screws, wall plugs)
- Instruction manual

Installation Steps:

1. **Preparation:** Switch off the main power supply to the installation area.
2. **Mounting Bracket:** Attach the mounting bracket to the ceiling using the provided screws and wall plugs. Ensure the

bracket is securely fastened.

3. **Electrical Connection:** Connect the household electrical wires to the terminal block on the light fixture. Ensure correct polarity (Live, Neutral, Earth).
4. **Secure Fixture:** Carefully attach the light fixture to the mounting bracket, ensuring all wires are safely tucked away and not pinched.
5. **Final Check:** Verify all connections are secure and the fixture is firmly mounted.
6. **Power On:** Restore power to the circuit.



Image: Dimensional diagram of the ceiling light, illustrating its overall size and the internal structure for wiring connections.

hofstein®



Image: Underside view of the light fixture, highlighting the central mounting area and electrical terminals for installation.

OPERATING INSTRUCTIONS

The HOFSTEIN LED Ceiling Light Sofo is operated using the included remote control. Ensure the remote control has working batteries installed.

Remote Control Functions:

- **ON/OFF:** Press to turn the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light intensity (4100 lumens maximum).
- **Color Temperature Adjustment:** Use the 'K+' and 'K-' buttons to change the color temperature from warm white (3000 Kelvin) to cool white (6000 Kelvin).
- **Preset Modes:** Some remotes may include preset buttons for specific brightness or color temperature settings.



Image: Visual representation of the light's dimming and color temperature adjustment capabilities, ranging from warm to cool white and various brightness levels, controlled by the remote.

MAINTENANCE

The HOFSTEIN LED Ceiling Light Sofo requires minimal maintenance. Always ensure the power is disconnected before cleaning.

- **Cleaning:** Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **LEDs:** The integrated LED light source is not replaceable. Do not attempt to open the sealed LED module.
- **Remote Control:** Replace batteries as needed (typically 2x AAA, not specified in data, but common).



Image: Detailed view of the light's construction, showing the bamboo-look frame and the smooth white plastic diffuser, emphasizing areas to clean gently.

TROUBLESHOOTING

If you experience issues with your HOFSTEIN LED Ceiling Light Sofo, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Remote control batteries are dead.	Check circuit breaker. Verify wiring connections (ensure power is off). Replace remote control batteries.
Light flickers or dims unexpectedly.	Unstable power supply. Loose connection.	Consult a qualified electrician to check household wiring. Check wiring connections (ensure power is off).

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly inserted. Remote is too far from the fixture.	Replace batteries and ensure correct polarity. Operate the remote control within close proximity to the light.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand:	HOFSTEIN
Model Number:	4058383730768
Product Type:	LED Ceiling Light
Dimensions:	Diameter: 50 cm (19.7 inches), Height: 7 cm (2.8 inches)
Material:	Metal (fixture), Bamboo-look / Plastic (shade)
Color:	White / Natural (frame)
Light Source:	Integrated LED (1 light source)
Power Consumption:	36 Watts
Luminous Flux:	4100 Lumens
Color Temperature:	3000-6000 Kelvin (Dimmable)
Voltage:	230 Volts
Protection Class:	IP20 (Suitable for indoor use only)
Special Features:	Dimmable via remote control (included)
Energy Efficiency Class:	F
Country of Origin:	China



Image: EU Energy Efficiency Label, indicating class F for this product.

WARRANTY INFORMATION

Specific warranty details are not provided in the product data. Please refer to the retailer's purchase terms and conditions or contact HOFSTEIN customer service for warranty information.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries regarding your HOFSTEIN LED Ceiling Light

Sofo, please contact HOFSTEIN customer support or your point of purchase.
You can often find contact information on the manufacturer's official website or through the retailer where the product was purchased.
Manufacturer: Hofstein
Brand Store Link: [HOFSTEIN Amazon Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question