

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HOOBRO](#) /

› [HOOBRO Computer Desk with Power Outlet and Hooks - Instruction Manual](#)

HOOBRO BC40UDN01-BF40UDN01

HOOBRO Computer Desk Instruction Manual

Model: BC40UDN01-BF40UDN01 | Brand: HOOBRO

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your new HOOBRO Computer Desk. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: The HOOBRO Computer Desk, featuring a spacious top, integrated power outlet, and side hooks.

2. SAFETY INFORMATION

- Always follow assembly instructions carefully. Incorrect assembly can lead to instability and injury.
- Do not overload the desk. Refer to specifications for weight capacity.
- Keep small parts away from children during assembly to prevent choking hazards.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as needed.
- Place the desk on a level surface to prevent tipping. Use the adjustable feet to stabilize if necessary.
- Do not stand or sit on the desk.

3. PACKAGE CONTENTS

Before assembly, verify that all components listed below are present. If any parts are missing or damaged, please contact customer support.

- Desk Top Panels

- Metal Frame Components (Legs, Support Bars)
- Integrated Power Outlet Unit (with 2 AC outlets and 2 USB ports)
- 3 x Side Hooks
- Adjustable Feet
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the HOOBRO Computer Desk is designed to be straightforward. Each part is clearly labeled to assist you. It is recommended to assemble the desk with at least one person.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Attach the metal frame components according to the diagrams in the included detailed instructions. Ensure all connections are finger-tightened initially.
3. **Attach Desk Top:** Secure the desk top panels to the assembled metal frame using the provided hardware.
4. **Install Power Outlet:** Mount the integrated power outlet unit to the designated area on the desk frame.
5. **Attach Hooks:** Secure the 3 side hooks to the side of the desk frame.
6. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the desk legs.
7. **Final Tightening:** Once all parts are in place, use the provided Allen wrench to securely tighten all screws and bolts. Do not overtighten.
8. **Level the Desk:** Place the desk in its desired location. Adjust the feet by rotating them until the desk is stable and level on your floor.



Figure 2: Desk dimensions for planning your space. Width: 31.5", Depth: 15.7", Height: 30.3".

5. OPERATING INSTRUCTIONS

5.1 Integrated Power Outlet

The HOOBRO Computer Desk is equipped with a convenient power outlet unit to power your electronic devices directly from your workspace.

- **AC Outlets:** The unit includes two 120V/12A AC outlets for standard electronics like monitors, lamps, or laptops.
- **USB Ports:** Two 5V/2A USB ports are provided for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** Connect the desk's 4.9-foot power cord to a wall outlet.

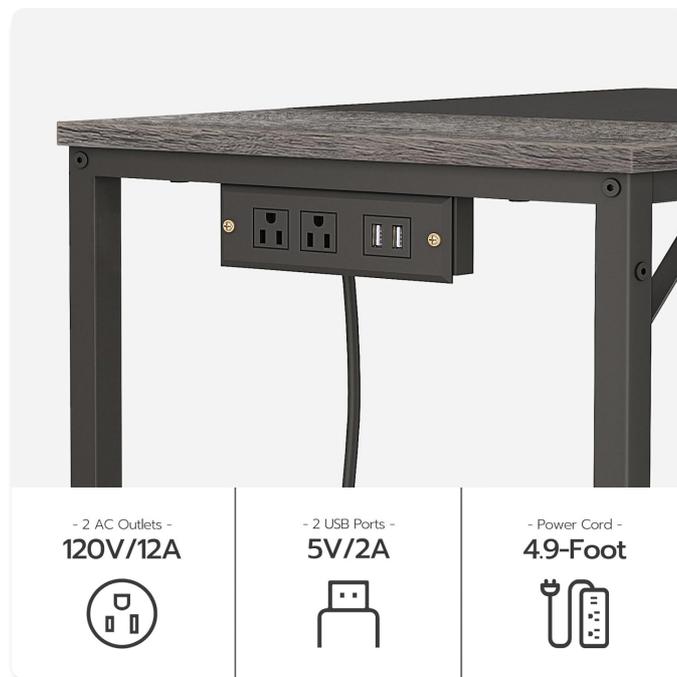


Figure 3: Detail of the integrated power outlet with 2 AC outlets and 2 USB ports.

5.2 Side Hooks

The three integrated side hooks provide additional storage and organization for your personal items.

- Use the hooks to hang headphones, small bags, keys, or other accessories to keep your desktop clear and organized.



Figure 4: The three side hooks offer convenient storage for headphones, keys, and other small items.

6. MAINTENANCE

To ensure the longevity and appearance of your HOOBRO Computer Desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desk surfaces with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.

- **Spills:** Clean up spills immediately to prevent damage to the desk surface.
- **Heat and Moisture:** Avoid placing hot items directly on the desk surface. Use coasters for drinks to prevent water rings.
- **Fasteners:** Periodically check all screws and bolts and re-tighten them if they have loosened over time.

7. TROUBLESHOOTING

7.1 Desk Wobbles

- **Check Level Surface:** Ensure the desk is placed on a flat, even floor.
- **Adjust Feet:** The desk is equipped with adjustable feet. Rotate the feet at the bottom of each leg to raise or lower them until the desk is stable and does not wobble.
- **Tighten Screws:** Verify that all assembly screws and bolts are securely tightened. Loose fasteners can cause instability.

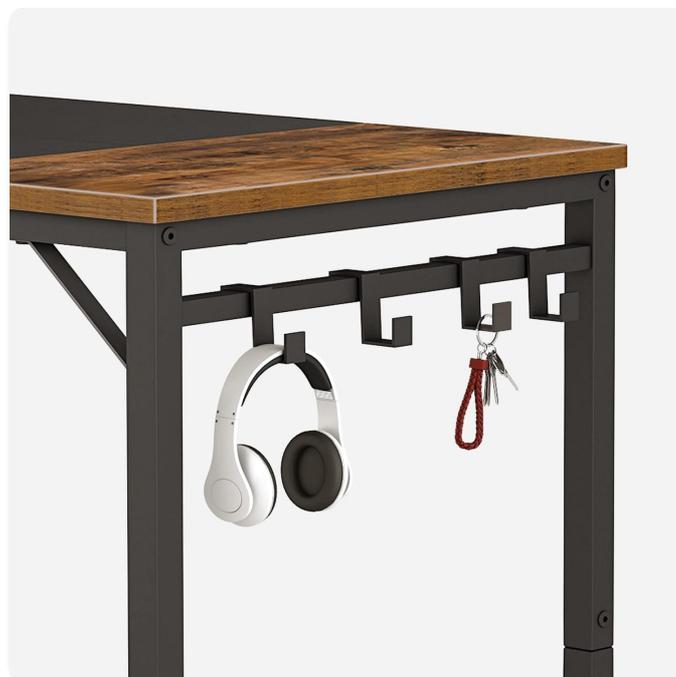


Figure 5: Adjustable floor protectors allow for leveling the desk on uneven surfaces.

7.2 Power Outlet Not Working

- **Check Wall Outlet:** Ensure the desk's power cord is securely plugged into a functioning wall outlet. Test the wall outlet with another device.
- **Check Desk Connection:** Verify that the power outlet unit is properly connected to the desk's internal wiring (if applicable, refer to assembly steps).
- **Overload:** Avoid plugging in too many high-power devices simultaneously, which could trip a circuit breaker in your home.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	HOOBRO
Model Name	BC40UDN01-BF40UDN01
Desk Design	Computer Desk
Dimensions (W x D x H)	31.5" x 15.7" x 30.3" (80cm x 40cm x 77cm)
Top Material Type	Engineered Wood
Base Material	Metal
Color	Charcoal Gray, Rustic Brown, Black
Special Feature	Adjustable Feet, Integrated Power Outlet, 3 Hooks
Power Outlet	2 x AC Outlets (120V/12A), 2 x USB Ports (5V/2A)
Power Cord Length	4.9 feet
Assembly Required	Yes
Recommended People for Assembly	1
Product Care Instructions	Wipe with Dry Cloth

9. WARRANTY INFORMATION

This HOOBRO Computer Desk comes with a limited warranty. Please refer to the warranty card included in your package or contact customer support for specific details regarding coverage and duration.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your HOOBRO Computer Desk, please do not hesitate to contact our customer support team. For the quickest service, please have your model number (BC40UDN01-BF40UDN01) and purchase information ready. For support, please visit the official HOOBRO website or refer to your purchase documentation for contact details.