

[Manuals.plus](#) /

› [Fotopro](#) /

› Fotopro Mini Flexible Extendable Tripod with Extension Pole RM-67+GA-2 User Manual

Fotopro RM-67+GA-2

Fotopro Mini Flexible Extendable Tripod with Extension Pole

Model: RM-67+GA-2

INTRODUCTION

Thank you for choosing the Fotopro Mini Flexible Extendable Tripod with Extension Pole. This versatile and portable tripod is designed to provide stable support for your cameras and smartphones in various shooting environments. Please read this manual carefully to ensure proper use and optimal performance of your device.

PRODUCT FEATURES

- **Retractable Aluminum Pole & Flexible Legs:** Constructed from durable aluminum alloy, the extension pole adjusts from 46 cm (18.11 inches) to 66 cm (25.9 inches). The flexible legs allow for secure wrapping around objects or stable placement on uneven surfaces.
- **360° Swivel Ball Head & Detachable Phone Clip:** The 360-degree rotating ball head enables multi-angle shooting. The detachable phone clip supports devices from 65mm to 95mm wide, allowing easy switching between landscape and portrait modes, and can also function as a standalone phone stand.
- **Wide Compatibility:** Features a universal 1/4-inch screw thread for mounting mobile phones, digital cameras, and sports cameras. An additional 6.35mm threaded hole allows for expansion with LED lights or microphones.
- **Wireless Remote Control:** Includes a wireless remote compatible with Android and iOS devices, providing a quick-response snapshot function up to 10 meters (32.8 feet) away.
- **Compact and Portable Design:** Weighing 370 grams and measuring 46 cm (18.11 inches) when folded, this mini tripod is designed for easy transport in a bag or backpack.

" Capture the beauty
of your life. "

2004-2023
19 years, we focus on what you need.




The flexible legs feature high elastic adhesive and a high-strength aluminum core for enhanced stability.

Extendable Aluminum Pole

638_{mm}

Tie rod upgrade
Thickened and reinforced!

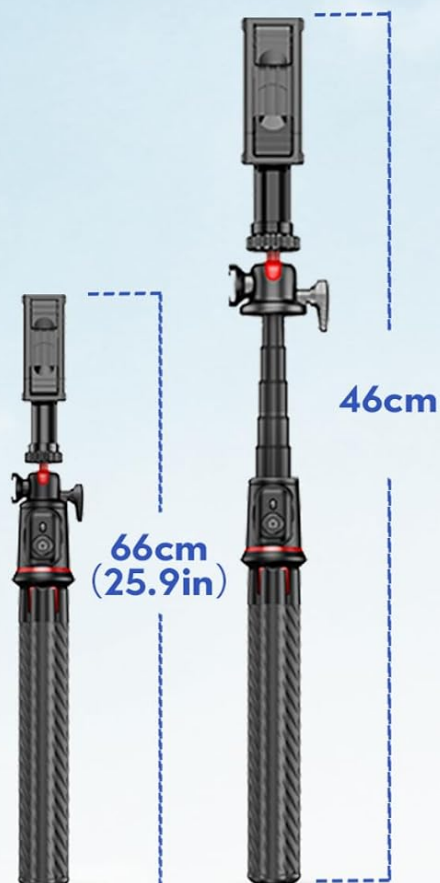

SETUP GUIDE

1. Attaching Your Device:

- For Smartphones: Attach the detachable phone clip to the 1/4-inch screw on the ball head. Secure your smartphone within the clip (compatible with 65-95mm width).
- For Cameras: Directly screw your camera onto the 1/4-inch screw thread on the ball head. Ensure it is tightened securely.
- For Action Cameras: An adapter (not included) may be required to mount action cameras to the 1/4-inch screw.

2. **Adjusting the Ball Head:** Loosen the side knob on the ball head to adjust the angle. Tighten the knob to secure your device in the desired position. The ball head allows for 360-degree rotation.


3. **Extending the Pole:** Gently pull the extension pole upwards to extend it to your desired height, up to 66 cm. Ensure all sections are locked firmly in place before use.

4. **Positioning the Flexible Legs:** Bend the flexible legs to wrap around objects like poles or branches, or splay them out to create a stable base on flat or uneven surfaces. The rubberized coating provides grip and protects surfaces.

5. Pairing the Wireless Remote:

- Turn on the remote control using the on/off switch.
- On your smartphone, enable Bluetooth and search for "Selfie" or a similar device name.
- Pair with the remote. The indicator light on the remote will turn off once successfully paired.

360° Detachable Ball Head

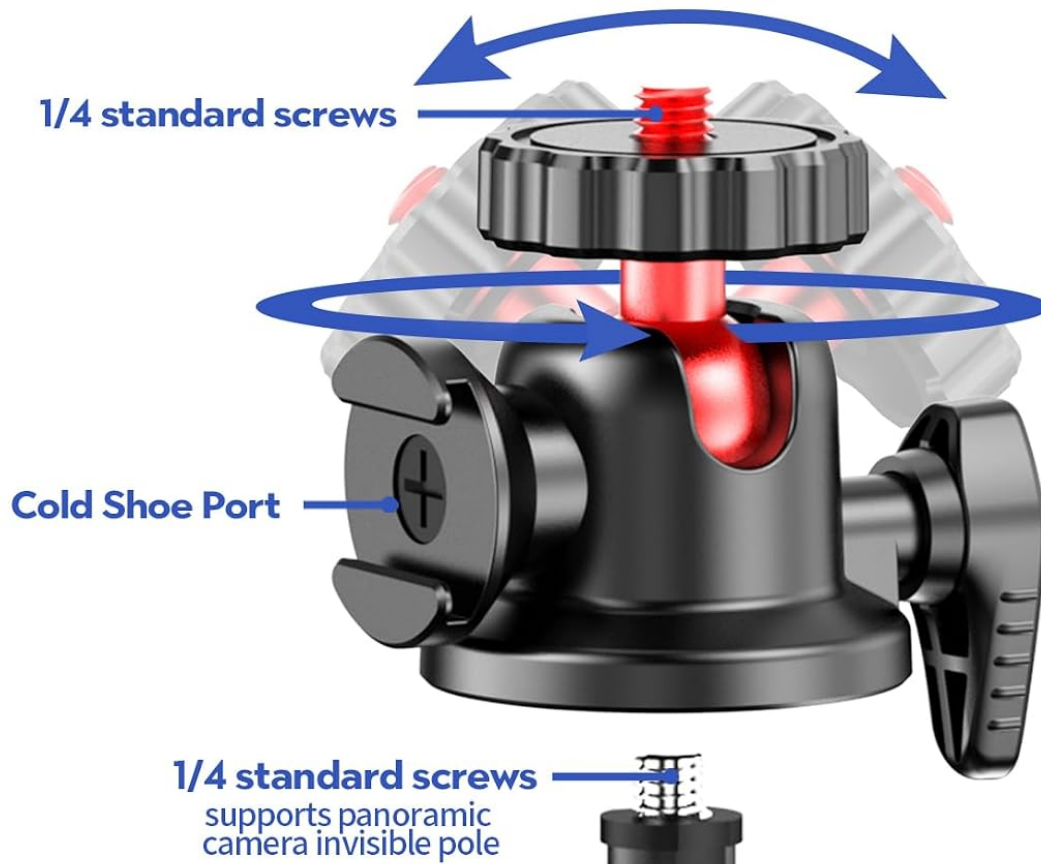

Detachable head (GoPro adapter sold separately)



Cold Boot Expansion



The 360° detachable ball head offers versatile mounting options and angle adjustments.

Detachable Phone Clip



Open the phone clip to use as a phone holder

The detachable phone clip can be used to secure your smartphone or as a standalone phone holder.

OPERATING INSTRUCTIONS

- **Using as a Selfie Stick:** Hold the tripod by its legs or the extended pole. Use the wireless remote to capture photos or start/stop video recording.
- **Using as a Tripod:** Place the tripod on a stable surface. Adjust the legs and pole to achieve the desired height and angle. Use the wireless remote for hands-free operation.
- **Creative Mounting:** Wrap the flexible legs around suitable objects (e.g., railings, tree branches) to secure your device for unique perspectives. Ensure the legs are tightly wrapped and the device is balanced.
- **Cold Shoe Port:** Utilize the cold shoe port on the ball head to attach accessories such as external microphones or LED lights (accessories sold separately).

Multi-scenario Application

Traveling Selfie




Outdoor Photo Shoot



Home Live



Selfie Vlogging

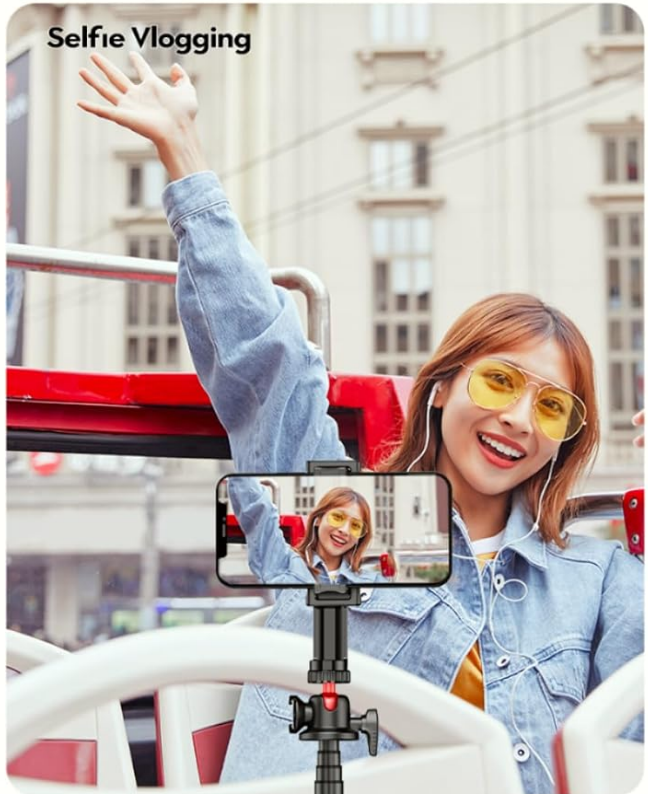

Cycling Record



The tripod supports multiple scenarios, from travel selfies to outdoor shoots and vlogging.

Wireless Remote Control



(When the remote control is turned on, pls search for "Selfie" on your phone to match. And the light will go off when the pairing is successful)

The wireless remote control allows for convenient hands-free operation from a distance.

MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is clean and dry before storage.
- **Battery Replacement (Remote):** The remote control uses a CR2032 battery. To replace, open the battery compartment on the remote, insert a new CR2032 battery with the correct polarity, and close the compartment.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Do not overtighten.

TROUBLESHOOTING

Problem	Solution
Remote control not pairing.	◦ Ensure the remote is turned on. ◦ Check if the remote's battery (CR2032) needs replacement. ◦ Make sure Bluetooth is enabled on your smartphone and search for "Selfie". ◦ Move closer to the remote (within 10 meters).
Tripod feels unstable.	◦ Ensure all pole sections are fully extended and locked. ◦ Verify that the ball head is securely tightened after adjusting the angle. ◦ When wrapping legs, ensure they are tightly secured around the object and the device is balanced. ◦ Avoid placing heavy devices on the tripod when legs are in an unstable configuration.
Phone clip not holding device securely.	◦ Ensure your phone's width is within the 65-95mm range. ◦ Remove any bulky phone cases that might prevent a secure grip.

SPECIFICATIONS

Feature	Detail
Brand	Fotopro
Model Name	RM-67+GA-2
Model Number	PTTRRM28HYAABK
Material	Aluminum
Color	Black
Product Dimensions (L x W x H) (folded)	5.8 x 5.8 x 45.2 cm
Item Weight	370 grams
Minimum Height (folded)	46 cm (18.11 inches)
Maximum Height (extended)	66 cm (25.9 inches)
Tripod Head Type	Ball Head
Compatible Devices	Camera, Smartphone
Special Feature	Lightweight, Flexible Legs
Remote Control Battery	1 x CR2032 (included)
UPC	782279217999

WARRANTY AND SUPPORT

Fotopro products are manufactured with high-quality standards. For any questions, technical support, or warranty inquiries, please contact Fotopro customer service through their official website or the retailer where you purchased the

product.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CPPFY4ZB>

More documents and user manuals: <https://manuals.plus/>