



Manuals.plus /

› Elektorot /

› Elektorot Professional Electric Nail File Set Instruction Manual

Elektorot 01

Elektorot Professional Electric Nail File Set

Model: 01

[Overview](#) [Package Contents](#) [Features](#) [Safety Information](#) [Setup](#) [Operation](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. OVERVIEW

The Elektorot Professional Electric Nail File Set is designed for comprehensive hand and foot care. This versatile tool allows for trimming, grinding, and polishing of natural and thick nails, as well as effective removal of cuticles, calluses, dead skin, and corns. Its cordless and rechargeable design ensures convenience and portability for home use.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Electric Nail Filer Device
- 9 High-Quality Attachments (various types for filing, buffing, callus removal, etc.)
- 30pcs Coarse Sandpaper (for specific attachments)
- Dust Shield
- Type-C Charging Cable
- User Manual (this document)

DESIGN FOR LOVE

Say goodbye to thick toenail



Image: The Eletrot Electric Nail File Set, showcasing the main device and its various attachments and accessories in their packaging.

3. PRODUCT FEATURES

- **Professional Manicure and Pedicure:** Designed for comprehensive hand and foot care, suitable for natural and thick nails.
- **Rechargeable and Cordless:** Equipped with a 2000 mAh battery, providing over 3 hours of continuous cordless operation on a full charge.
- **Powerful and Efficient:** Features an upgraded motor for effective performance, low vibration, and efficient heat dissipation.
- **9 Speed Modes:** Adjustable speeds from 1980-4080 U/min ($\pm 15\%$) to suit various nail care needs.
- **Dual Rotation Directions:** Supports both forward and reverse rotation for ease of use and versatility.
- **Integrated LED Light:** Provides illumination for precise nail filing and detailed work.
- **Stall Protection:** For speeds 3-9, the device features stall protection. If stalled, the screen flashes and alarms. If the stall is not released within 10 seconds, the device will automatically shut down. Releasing the jam within 10 seconds allows normal operation to resume.

4. SAFETY INFORMATION

- Always use eye protection to prevent injury from flying debris or dust during operation.
- Exercise caution when handling hot or moving parts to avoid burns or injury.
- Keep the device out of reach of children.
- Do not immerse the device in water or use it in wet conditions.
- Ensure the device is fully charged before first use to optimize battery life.

5. SETUP

5.1 Charging the Device

1. Connect the provided Type-C charging cable to the charging port on the device.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. Allow approximately 4 hours for a full charge. The battery indicator lights will show charging progress and full charge status. A full charge provides over 3 hours of operation.

5.2 Attaching/Changing Bits

1. Ensure the device is turned off before attaching or removing any bits.
2. Select the desired attachment for your specific nail care task.
3. Gently insert the shaft of the attachment into the opening at the top of the device until it is securely in place.
4. To remove, gently pull the attachment straight out.

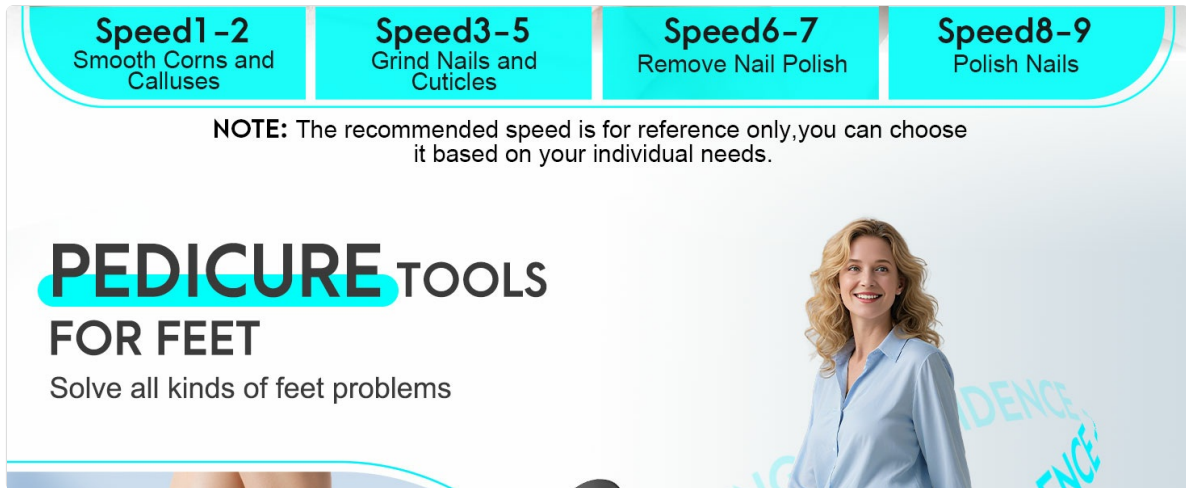


Image: The Elektorot Electric Nail File device shown with its various interchangeable bits, illustrating the different shapes and sizes for diverse applications.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Adjustment

1. Press the power button to turn the device on. It will start at the lowest speed setting.
2. Press the speed adjustment button to cycle through the 9 available speed modes (1980-4080 U/min).
3. Press the power button again to turn the device off.

6.2 Rotation Direction

- The device supports both forward and reverse rotation. Use the rotation direction button to switch between modes as needed for optimal control and comfort.

6.3 Using the LED Light

- Press the light button to activate the integrated LED light for enhanced visibility during use. Press again to turn it off.

6.4 Application Guide for Attachments

- **For Smoothing Corns and Calluses:** Use speeds 1-2 with appropriate coarse sandpaper attachments.
- **For Grinding Nails and Cuticles:** Use speeds 3-5 with finer grinding bits.
- **For Removing Nail Art/Gel:** Use speeds 6-7 with specialized removal bits.
- **For Buffing and Polishing Nails:** Use speeds 8-9 with buffing attachments for a smooth, shiny finish.



Image: A close-up of the Eletorot Electric Nail File in use, demonstrating its effectiveness in grinding a toenail.

Your browser does not support the video tag.

Video: A demonstration of the Eletorot electric nail file, showing how to turn it on, adjust speeds, and use the integrated light. It also highlights the various attachments included in the kit.

7. MAINTENANCE

7.1 Cleaning

- After each use, turn off the device and remove the attachment.
- Use a soft, dry cloth to wipe down the device and attachments.
- The dust shield helps contain debris; clean it regularly.
- Do not use harsh chemicals or abrasive cleaners.

7.2 Storage

- Store the device and its attachments in a cool, dry place, away from direct sunlight and moisture.
- Keep all components organized in their original packaging or a suitable storage case to prevent loss or damage.

8. TROUBLESHOOTING

8.1 Stall Protection Activation

- If the device stalls at speeds 3-9, the screen will flash and an alarm will sound. This indicates that the motor is encountering resistance.
- Immediately remove the device from the contact surface.
- If the stall is released within 10 seconds, the device will resume normal operation.
- If the stall persists for more than 10 seconds, the device will automatically shut down to prevent damage. Turn it off and then on again to reset.
- Consider reducing the speed setting or applying less pressure during use to avoid repeated stalls.

8.2 Device Not Turning On

- Ensure the device is fully charged. Connect it to the Type-C charging cable and allow sufficient time to charge.
- Verify that the power button is being pressed correctly.

8.3 Attachments Not Functioning Properly

- Check that the attachment is securely inserted into the device.
- Ensure the attachment is clean and free from debris that might impede its rotation.
- If an attachment is worn or damaged, replace it with a new one.

9. SPECIFICATIONS

Feature	Detail
Model Number	01
Product Dimensions	6.2 x 1.55 x 1.37 inches
Weight	10.58 ounces
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2000 mAh
Battery Average Life	3+ Hours (on full charge)
Charging Time	Approx. 4 Hours
Power Source	Battery Powered
Voltage	3.7 Volts
Maximum Rotational Speed	4200 RPM
Speed Modes	9 (1980-4080 U/min \pm 15%)
Rotation Direction	Forward and Reverse
Special Features	Integrated LED Light, Dust Shield, Stall Protection

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Elektor website. Keep your purchase receipt as proof of purchase for any warranty claims.