



[Manuals.plus](#) /

› [VEWINGL](#) /

› VEWINGL Cube Productivity Timer F4 User Manual

## VEWINGL F4

# VEWINGL Cube Productivity Timer F4 User Manual

Model: F4 | Brand: VEWINGL

### 1. INTRODUCTION

The VEWINGL Cube Productivity Timer Model F4 is a versatile time management tool designed to enhance focus and efficiency. It features preset countdowns, custom timing options, and multiple alarm modes to suit various environments and tasks. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



*Figure 1: The VEWINGL Cube Productivity Timer in Black, displaying '05 00' for 5 minutes.*

## **2. SETUP**

### **2.1 Charging the Device**

The timer is equipped with a durable lithium battery and a USB-C charging port. Before initial use, fully charge the device. A USB-C cable is included for convenience.

- Connect the provided USB-C cable to the charging port on the timer.
- Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, computer USB port).
- The timer can be used while charging.

- Initial charge time: Approximately 4 hours.
- Subsequent charge time: Approximately 2 hours.



Figure 2: The timer's USB-C charging port, indicating low power consumption and long battery life.

## 2.2 Power On/Off and Mode Selection

The timer features a switch on the back for power and mode selection.

- **OFF:** Powers off the device.
- **1 (Gravity Mode):** Activates the gravity sensor mode for preset times.
- **2 (Manual Mode):** Activates manual countdown and stopwatch modes.

## 2.3 Alarm Settings

Adjust the alarm type and volume using the buttons on the back of the timer.

- **Mute/Vibrate:** Press the 'S' button to cycle through silent, vibrate, and sound alarm options.
- **Volume Levels:** Use the 'V' button to adjust sound volume between Level 1 (Quietly 70-80dB) and Level 2 (Loud 90-100dB).

## Small and exquisite, with many functions



Figure 3: Detailed view of the timer's control buttons and USB-C port.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Gravity Mode (Preset Timers)

In Gravity Mode (switch set to '1'), the timer starts automatically when a numbered side is facing up.

- **Activate:** Ensure the power switch is set to '1'.
- **Select Time:** Place the timer with the desired preset time (5, 10, 30, or 60 minutes) facing upwards. The countdown will begin immediately.
- **Pause/Resume:** To pause the timer, flip it so no numbered side is facing directly up (e.g., on its side). To resume, place the same numbered side facing up again.
- **Alarm:** Once the countdown reaches zero, the selected alarm (silent, vibrate, or sound) will activate.



Figure 4: Illustration of selecting preset times and pausing the timer in Gravity Mode.

### 3.2 Manual Mode (Custom Countdown & Stopwatch)

In Manual Mode (switch set to '2'), you can set custom countdowns or use the stopwatch function.

- **Activate:** Ensure the power switch is set to '2'. The display will show '00 00'.
- **Set Custom Countdown:** Use the 'M' button to set minutes (00-99) and the 'S' button to set seconds (00-59). Press the 'ST/SP' button to start the countdown.
- **Stopwatch (Count Up):** From '00 00', press the 'ST/SP' button to start counting up.
- **Pause/Resume:** Press the 'ST/SP' button to pause or resume the active timer.
- **Reset:** To reset the timer to '00 00', press and hold the 'ST/SP' button for a few seconds while the timer is paused.

## 4. MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge when the battery indicator is low.
- **Storage:** Store the timer in a cool, dry place when not in use.

## 5. TROUBLESHOOTING

- **Timer not starting in Gravity Mode:** Ensure the power switch is set to '1' and the desired numbered side is clearly facing upwards on a flat surface.
- **Display not working:** Check battery level and charge the device. If the issue persists, try resetting the device by turning it off and on.
- **Alarm not sounding/vibrating:** Verify the alarm settings using the 'S' button on the back. Adjust volume with the 'V' button if using sound mode.
- **Buttons unresponsive:** Ensure the device is powered on. If unresponsive, try charging or resetting the device.

## 6. SPECIFICATIONS

Feature	Detail
Product Model	F4
Timing Range	Display minutes & seconds
Battery Capacity	500mAh
Product Size	1.73"D x 1.7"W x 1.7"H (44mm x 44mm x 46mm)
Item Weight	1.6 ounces (47.5 g)
Shell Material	Plastic (ABS)
Charging Port	USB Type-C
Working Endurance	6-8 months (normal use)
Gravity Mode Timers	5, 10, 30, 60 minutes
Manual Mode Max Time	99 minutes 59 seconds
Alarm Volume	Quietly 70-80dB, Loud 90-100dB



*Figure 5: Visual representation of product dimensions and key parameters.*

## 7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your VEWINGL Cube Productivity Timer, please contact VEWINGL customer service through the retailer's platform or the official VEWINGL website. Please retain your proof of purchase for warranty claims.