



Manuals.plus /

› CAMOLO /

› CAMOLO Foldable Camera L Bracket Mount Instruction Manual

CAMOLO L bracket

CAMOLO Foldable Camera L Bracket Mount Instruction Manual

Model: L bracket

INTRODUCTION

The CAMOLO Foldable Camera L Bracket Mount is designed to enhance your photography and videography experience by providing versatile mounting options for DSLR and mirrorless cameras. This L-bracket allows for quick transitions between horizontal and vertical shooting orientations without adjusting the tripod head, and offers multiple attachment points for accessories. Its foldable design ensures portability and convenient storage.

PRODUCT OVERVIEW

Familiarize yourself with the components of your CAMOLO L Bracket Mount.



Figure 1: Key components of the CAMOLO Foldable Camera L Bracket. This image highlights features such as the 1/4" screw hole, anti-slip mat, 1/4" standard locking screw, QD sling swivels hole, cold shoe, and anti-slip safety nail.

- **Foldable Design:** The side plate for Arca-Swiss can be quickly folded onto the bottom via a press button for horizontal shooting.
- **Universal Plate:** Equipped with a short Arca-Swiss standard screw-knob quick release plate and a long L-shaped quick release plate.
- **Cold Shoe & QD Hole:** Integrated cold shoe for accessories like monitors, microphones, and LED lights. QD hole for quick attachment of shoulder or wrist straps.
- **Standard 1/4" Screw:** Allows mounting on various tripod heads and gimbal stabilizers.
- **Anti-slip Features:** Rubber pads on the longer plate and anti-slip safety nails protect the camera and enhance stability.

SETUP AND INSTALLATION

Follow these steps to properly set up and install your L bracket.

Unfolding the L Bracket

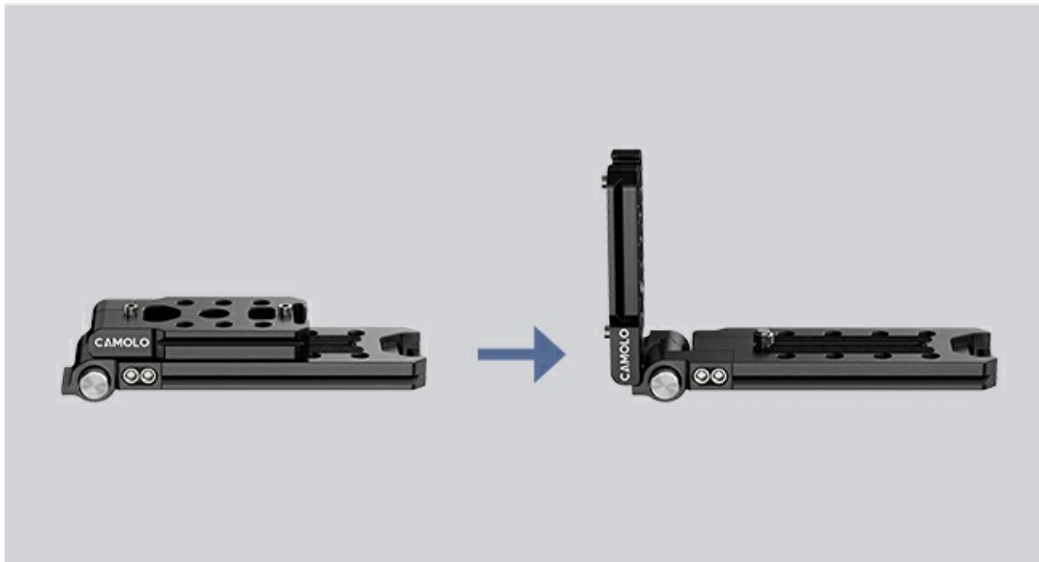


Figure 2: Press the release button to unfold the L bracket from its compact storage position to the L-shape configuration for use.

1. Locate the folding press button on the side of the L bracket.
2. Press the button firmly to release the locking mechanism.
3. Unfold the vertical plate until it forms a 90-degree angle with the base plate. Ensure it locks securely into place.

Attaching to Your Camera

Your browser does not support the video tag.

Video 1: This video demonstrates the installation of the L bracket onto a camera, showing both horizontal and vertical mounting options, and accessory attachment.

1. Align the 1/4" standard screw on the L bracket's base plate with the tripod mount hole on the bottom of your camera.
2. Tighten the screw securely using the integrated knob or a coin, ensuring the camera is firmly attached to the bracket.
3. Verify that the anti-slip mats are properly positioned between the camera and the bracket to prevent movement and scratches.

OPERATING INSTRUCTIONS

Horizontal and Vertical Shooting

Use vertically and horizontally

Note: Only L bracket included



Figure 3: The L bracket allows for seamless switching between horizontal and vertical camera orientations on a tripod.

The L bracket is compatible with Arca-Swiss standard tripod heads. To switch between horizontal and vertical orientations:

- For **horizontal shooting**, attach the camera (with L bracket) to the tripod head using the base plate.
- For **vertical shooting**, detach the camera from the tripod head, rotate it 90 degrees, and attach it using the vertical side plate of the L bracket.

Attaching Accessories



QD hole can be installed with gun sling.



Cold Shoe can attach with LED light, microphone ect.

Figure 4: The L bracket features a cold shoe for attaching LED lights or microphones, and a QD hole for quick-release straps.

- **Cold Shoe:** Slide compatible accessories such as LED lights, microphones, or small monitors into the cold shoe mount located on the vertical plate.
- **QD Hole:** For quick attachment of a QD shoulder strap or wrist strap, press the QD button on your strap and insert it into the QD hole on the L bracket.
- **1/4" Screw Holes:** Utilize the multiple 1/4" screw holes on the bracket to attach additional accessories or mounting arms.

Portability

PORTABLE & FOLDABLE DESIGN

No matter open or folded, the size is compact and portable
145g (5.1oz) is lighter than a smartphone



Figure 5: The L bracket's compact folded dimensions (123mm / 4.84 inches folded height) make it highly portable, comparable to a smartphone.

The foldable design allows the L bracket to be easily stored and transported. When folded, its dimensions are approximately 18 cm (l) x 4 cm (w) x 4 cm (h), and it weighs only 158.7 grams (5.6 ounces).

MAINTENANCE

- **Cleaning:** Wipe the L bracket with a soft, dry cloth to remove dust and debris. Avoid using harsh chemicals or abrasive materials.
- **Screw Tightness:** Periodically check all screws, especially the camera attachment screw, to ensure they remain tight. Loose screws can lead to instability.
- **Storage:** When not in use, fold the L bracket to its compact form and store it in a dry, clean place to prevent damage.

TROUBLESHOOTING

Issue	Possible Cause	Solution
L bracket feels loose or wobbly when unfolded.	The folding mechanism may not be fully engaged or has developed slight play.	Ensure the folding button is fully released and the vertical plate is securely locked. If play persists, inspect the hinge for any debris or damage.
Camera attachment screw loosens frequently.	Insufficient tightening or vibration during use.	Ensure the screw is tightened firmly. Periodically check and re-tighten as needed.
L bracket blocks camera battery compartment.	Camera model specific design or incorrect positioning.	The L bracket is designed to allow battery access for many cameras. If blocked, you may need to temporarily remove the L bracket to change the battery. Ensure the bracket is positioned as far as possible from the battery door when attaching.
Vertical plate does not align perfectly at 90 degrees.	Manufacturing tolerance or slight misalignment.	While designed for precise alignment, minor deviations might occur. For critical applications, verify alignment before shooting. This may not affect general stability.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Open)	5.31 x 2.17 x 0.98 inches (13.5 x 5.5 x 2.5 cm)
Folded Size	18 cm (l) x 4 cm (w) x 4 cm (h)
Item Weight	5.6 ounces (158.7 grams)
Material	Aluminum Alloy
Mounting Interface	Arca-Swiss Standard, 1/4" Screw
Accessory Mounts	Cold Shoe, QD Hole, Multiple 1/4" Screw Holes
Compatibility	Most DSLR and Mirrorless Cameras (e.g., Canon, Nikon, Sony, Panasonic)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service. Keep your purchase receipt for any warranty claims.

