

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VINABTY](#) /

› VINABTY Replacement Remote Control User Manual for TREVI LTV 4008 Smart TV (Model MB2199)

## VINABTY MB2199

# VINABTY Replacement Remote Control User Manual

Model: MB2199 for TREVI LTV 4008 Smart TV

## 1. INTRODUCTION

---

This manual provides instructions for the VINABTY MB2199 replacement remote control, designed for use with TREVI LTV 4008 Smart TVs. This remote offers a dedicated replacement solution, ensuring full compatibility and ease of use without the need for complex programming.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct insertion of two AAA 1.5V batteries.

## 2.2 Initial Use

No programming or configuration is required for this replacement remote control. Once the batteries are correctly installed, the remote is ready for immediate use with your TREVI LTV 4008 Smart TV.

## 3. OPERATING INSTRUCTIONS

---

The VINABTY MB2199 remote control features an ergonomic design for comfortable handling and intuitive button layout for easy operation of your television. The transmission distance is approximately 10 meters.





Image: Front view of the VINABTY remote control, displaying the layout of all function buttons.

### 3.1 Key Functions Overview

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels sequentially.
- **Mute Button (⏸):** Mutes or unmutes the TV sound.
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigate through menus and confirm selections.
- **EXIT Button:** Exits the current menu or function.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Colored Buttons (Red, Green, Yellow, Cyan):** Access specific functions depending on the TV's current mode or application.
- Other buttons provide access to features like Sleep, List, P.Mode, S.Mode, Aspect, Info, Guide, Index, TTX (Teletext), Sub.Pg (Subpage), Reveal, Mix, Cancel, Hold/Refresh, Size/Mouse, Fav (Favorites), Cap (Caption), Subtitle, TV/Radio.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.





Image: Back of the remote control with the battery compartment closed, showing its sleek design.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**

- Ensure batteries are installed correctly with the correct polarity.
- Replace old batteries with new AAA 1.5V batteries.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- Ensure you are within the effective operating range (approximately 10 meters) and pointing the remote directly at the TV.

- **Limited operating range:**

- Replace batteries with fresh ones.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

## 6. SPECIFICATIONS

---

<b>Brand</b>	VINABTY
<b>Model Number</b>	MB2199
<b>Compatible Models</b>	TREVI LTV 4008 Smart Fernbedienung
<b>Connectivity Technology</b>	Infrared
<b>Maximum Range</b>	10 Meters
<b>Number of Buttons</b>	20
<b>Supported Devices</b>	Television (up to 18 devices supported, though this remote is dedicated to one TV model)
<b>Battery Type</b>	2 x AAA 1.5V (not included)
<b>Material</b>	ABS
<b>Color</b>	Black
<b>Special Feature</b>	Ergonomic Design

## 7. WARRANTY AND SUPPORT

---

For any questions or issues regarding your VINABTY replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty details and customer service contact information.



