

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [URBAN ARMOR GEAR](#) /

› URBAN ARMOR GEAR UAG Wireless Charging Pad with Kickstand User Manual

URBAN ARMOR GEAR 9B4410114042

URBAN ARMOR GEAR UAG Wireless Charging Pad with Kickstand

Model: 9B4410114042

INTRODUCTION

The URBAN ARMOR GEAR (UAG) Wireless Charging Pad with Kickstand is designed to provide efficient and convenient wireless charging for your compatible devices. Featuring 15W fast charging capabilities and integrated magnets for perfect alignment with MagSafe-compatible cases, this pad offers a seamless charging experience. Its durable metal alloy housing and carbon fiber inlay ensure longevity, while the built-in metal kickstand allows for hands-free viewing during charging.



Figure 1: The UAG Wireless Charging Pad with Kickstand in use with a smartphone.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Magnetic wireless charging pad
- Detachable braided USB-C to USB-C 4ft (1.2m) cable
- User manual

Note: A USB-C wall charger is **not included** and must be purchased separately for optimal performance.



Figure 2: The UAG Wireless Charging Pad and its detachable USB-C cable.

SETUP GUIDE

Follow these steps to set up your UAG Wireless Charging Pad:

1. **Connect the Cable:** Insert one end of the provided USB-C to USB-C cable into the USB-C port on the wireless charging pad.
2. **Connect to Power:** Insert the other end of the USB-C cable into a compatible USB-C wall charger (not included). For 15W fast charging, ensure your wall charger supports Power Delivery (PD) and can output at least 15W.
3. **Placement:** Place the charging pad on a flat, stable surface.



Figure 3: Connecting the charging pad to a smartphone.

OPERATING YOUR CHARGING PAD

Using your UAG Wireless Charging Pad is simple and intuitive:

- **Wireless Charging:** Place your MagSafe-compatible iPhone (iPhone 12 series or newer) or other compatible device with a built-in magnet module directly onto the charging surface. The integrated magnets will align your device for optimal charging.
- **Fast Charging:** The pad delivers up to 15W of wireless power. Ensure your device supports 15W wireless charging and that your wall adapter provides sufficient power for maximum speed.
- **Using the Kickstand:** The integrated metal kickstand can be deployed to prop up your device for hands-free viewing while it charges. This is ideal for watching videos, making video calls, or using StandBy mode on compatible iPhones.



Figure 4: A smartphone charging on the UAG pad with its kickstand extended for viewing.

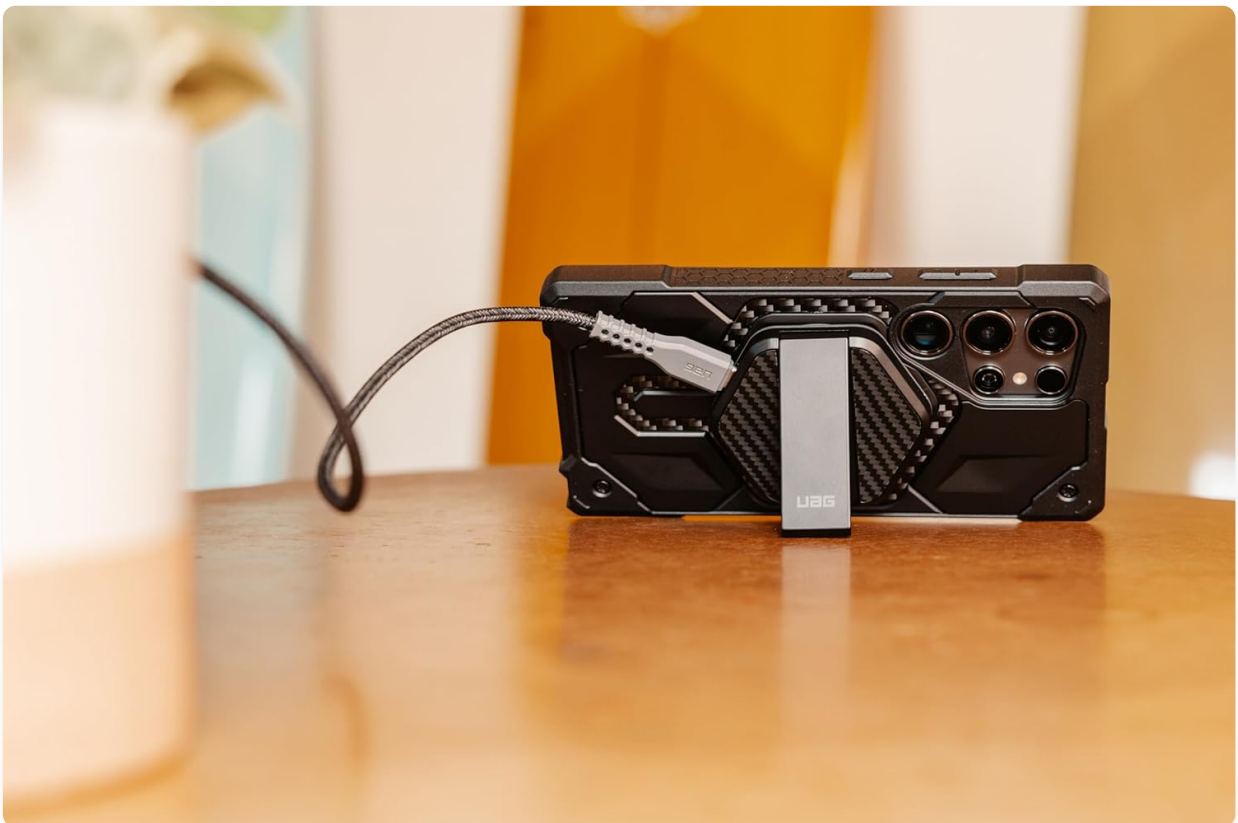


Figure 5: Side profile of the UAG Wireless Charging Pad demonstrating the kickstand functionality.

DEVICE COMPATIBILITY

The UAG Wireless Charging Pad is designed for broad compatibility:

- **iPhone:** Compatible with iPhone 16, iPhone 15, iPhone 14, iPhone 13, iPhone 12 series, and earlier

models that support wireless charging. For optimal magnetic alignment and performance, use with MagSafe-compatible cases.

- **AirPods:** Compatible with AirPods Pro 2nd Gen and AirPods 3rd Gen.
- **Android Devices:** Compatible with Samsung Galaxy and Google Pixel cases that have a built-in magnet module for magnetic alignment.
- **General Wireless Charging:** Can charge any Qi-enabled device, though magnetic alignment may not be supported without a compatible case.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your charging pad, follow these care instructions:

- **Cleaning:** Disconnect the charging pad from power before cleaning. Use a soft, dry, lint-free cloth to wipe the surface. Do not use abrasive cleaners, solvents, or aerosol sprays.
- **Storage:** Store the charging pad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. While designed to be rugged, excessive force can cause damage.

TROUBLESHOOTING

If you encounter issues with your UAG Wireless Charging Pad, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Device not charging	Improper alignment; incompatible case; insufficient power from wall adapter; faulty cable/pad.	Ensure device is centered on the pad. Remove thick or non-MagSafe cases. Use a USB-C PD wall adapter (15W or higher). Try a different USB-C cable.
Slow charging	Wall adapter not providing enough power; background apps on device; device overheating.	Use a 15W (or higher) USB-C PD wall adapter. Close unnecessary apps on your device. Ensure proper ventilation around the charging pad and device.
Pad or device getting hot	Normal during wireless charging; poor alignment; thick case; environmental factors.	Some heat is normal. Ensure proper alignment. Remove non-MagSafe cases. Avoid charging in direct sunlight or enclosed spaces. If excessively hot, disconnect and allow to cool.
Kickstand is loose or won't stay open	Wear and tear; physical damage.	Inspect for visible damage. If the issue persists and is not due to misuse, contact UAG support.

TECHNICAL SPECIFICATIONS

Detailed specifications for your UAG Wireless Charging Pad:

Feature	Detail
Product Dimensions	2.61 x 2.36 x 0.5 inches
Item Weight	3.52 ounces
Input Voltage	5 Volts
Amperage	3 Amps
Connector Type	USB Type C
Special Features	Fast Charging, Magnetic, MagSafe Compatible, Built-in Kickstand
Color	Black/Carbon Fiber

WARRANTY INFORMATION AND SUPPORT

URBAN ARMOR GEAR products are built to go further and are backed by a manufacturer's warranty. For specific warranty terms, conditions, and to register your product, please visit the official URBAN ARMOR GEAR website or contact their customer support directly.

For further assistance, technical support, or to inquire about replacement parts, please refer to the contact information provided on the official [URBAN ARMOR GEAR website](#).