

Xsarius RCU-A3

User Manual

XSARIUS ANDROID IR REMOTE CONTROL RCU-A3

Brand: Xsarius | Model: RCU-A3

1. Introduction

This manual provides detailed instructions for the Xsarius Android IR Remote Control RCU-A3. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your remote control. The RCU-A3 is designed for seamless control of compatible Xsarius devices, offering an ergonomic design and intuitive button layout.

2. Compatible Devices

The Xsarius Android IR Remote Control RCU-A3 is specifically designed for use with the following Xsarius products:

- Xsarius Pure 2
- Xsarius PURE 2+
- Xsarius Avant 2
- Xsarius Avant 2+
- Xsarius Avant 2+ Ultra

3. Key Features

- **Infrared (IR) Connectivity:** Reliable communication with your Xsarius device.
- **Ergonomic Design:** Comfortable to hold and easy to operate.
- **Intuitive Button Layout:** 25 clearly labeled buttons for quick access to functions.
- **Dedicated Shortcut Keys:** Quick access to Live TV, VOD, Series, and Radio functions.
- **TV Control Section:** Programmable keys for basic TV functions (Power, Volume, Input).

4. Setup and Programming

Before using your remote control, ensure that it has fresh batteries installed. The remote operates using infrared signals, requiring a clear line of sight to your Xsarius device.

4.1. Programming TV Control Keys

The top section of your RCU-A3 remote control includes dedicated keys for basic TV functions (TV Power, TV Volume Up, TV Volume Down, TV Input). These keys can be programmed to control your television directly. Follow these steps to program them:

1. Press and hold the **TV Control** button for 5 seconds. The LED indicator on the remote will begin to blink, then turn solid red, indicating it is in learning mode.
2. Place your original TV remote control and the RCU-A3 remote control head-to-head, approximately 2-3 cm apart.
3. On the RCU-A3, press the button you wish to program (e.g., **TV Power**). The LED will blink slowly.
4. On your original TV remote, press the corresponding button (e.g., **Power**). The LED on the RCU-A3 will blink 3 times quickly, then turn solid red, indicating successful learning.
5. Repeat steps 3 and 4 for any other TV control buttons you wish to program (e.g., **TV VOL+**, **TV VOL-**, **TV Input**).
6. To exit learning mode, press the **TV Control** button again. The LED will turn off.



Image 1: Rear view of the Xsarius RCU-A3 remote control, showing the battery compartment and printed instructions for programming the TV control keys. This image illustrates the text-based instructions for setting up universal TV functions.

5. Operating Instructions

The Xsarius RCU-A3 remote control provides comprehensive control over your compatible Xsarius device. Familiarize yourself with the button layout for efficient operation.

5.1. Button Layout Overview



Image 2: Front and angled side view of the Xsarius RCU-A3 remote control, highlighting its ergonomic design and the arrangement of its 25 buttons. This image provides a visual reference for the remote's overall appearance and button placement.

- **Power Button (Red):** Turns the Xsarius device on or off.
- **TV Control Section (Top):** Includes TV Power, TV VOL+, TV VOL-, and TV Input buttons (programmable).
- **Numeric Keypad (0-9):** For direct channel input or numerical selections.
- **Navigation Pad (Arrows & OK):** Used to navigate menus and confirm selections.
- **Volume Up/Down:** Adjusts the volume of the Xsarius device.
- **Channel Up/Down (Page Up/Down):** Changes channels or scrolls through pages.
- **Home Button (House icon):** Returns to the main menu or home screen.
- **Back Button (Arrow icon):** Returns to the previous screen or menu.
- **Media Control Buttons:** Play, Pause, Stop, Fast Forward, Rewind.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the application or menu.
- **Shortcut Buttons (LIVE, VOD, Series, Radio):** Direct access to specific content categories.

6. Maintenance and Care

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** If the remote control becomes unresponsive or its range decreases, replace the batteries. Ensure correct polarity when inserting new batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

7. Troubleshooting

- **Remote not responding:**
 - Check battery levels and replace if necessary.
 - Ensure there is a clear line of sight between the remote and the Xsarius device.
 - Verify that the remote is pointed directly at the IR receiver of the device.
- **TV Control keys not working:**
 - Re-program the TV Control keys following the instructions in Section 4.1.
 - Ensure your original TV remote is functioning correctly during the programming process.
- **Limited range:**
 - Replace batteries.
 - Remove any obstructions between the remote and the device.

8. Technical Specifications

Brand	Xsarius
Model Name	RCU-A3
Color	Black
Connectivity Technology	Infrared (IR)
Number of Buttons	25
Controller Type	Button Control
Maximum Range	10 Meters
Compatible Devices	Xsarius Pure 2, Pure 2+, Avant 2, Avant 2+, Avant 2+ Ultra
Special Features	Ergonomic Design, Programmable TV Control Keys

9. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your Xsarius device or visit the official Xsarius website. Keep your proof of purchase for warranty claims.

