

Fakir Arya Stand Mixer

Fakir Arya Stand Mixer Instruction Manual

Model: Arya Stand Mixer

Brand: Fakir

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Fakir Arya Stand Mixer. Retain this manual for future reference.

- Always ensure the appliance is switched off and unplugged from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance features a **Safety Lock** mechanism. Ensure the head is securely locked in place before operation.
- Use only original accessories supplied by the manufacturer.
- Do not use outdoors.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Fakir Arya Stand Mixer.



Image 2.1: The Fakir Arya Stand Mixer, featuring its main body, stainless steel mixing bowl, and a transparent splash guard. The speed control dial and head-lift lever are visible on the side.

Components:

1. Motor Unit / Main Body
2. Mixing Head (tilt-back design)
3. Stainless Steel Mixing Bowl
4. Splash Guard
5. Speed Control Dial
6. Head-Lift Lever
7. Attachment Port
8. Whisk Attachment
9. Flat Beater Attachment
10. Dough Hook Attachment



Image 2.2: Whisk Attachment. Used for whipping eggs, cream, and light batters.



Image 2.3: Flat Beater Attachment. Ideal for mixing cakes, cookies, and frostings.

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Dispose of packaging materials responsibly.
2. **Placement:** Place the stand mixer on a clean, dry, flat, and stable surface. Ensure there is adequate space around the appliance for ventilation and operation.
3. **Cleaning Before First Use:** Before initial use, wash the mixing bowl, splash guard, and all attachments (whisk, flat beater, dough hook) in warm, soapy water. Rinse thoroughly and dry completely. Wipe the motor unit with a damp cloth.
4. **Attaching the Mixing Bowl:** Place the stainless steel mixing bowl onto the base of the mixer. Turn it clockwise until it locks securely into position.
5. **Lifting the Mixing Head:** Press the head-lift lever located on the side of the mixer and gently lift the mixing head until it locks in the tilted-back position.
6. **Attaching an Accessory:** Select the desired attachment (whisk, flat beater, or dough hook). Align the top of the attachment with the attachment port on the mixing head. Push upwards and turn clockwise until it clicks into place.
7. **Lowering the Mixing Head:** With the attachment securely in place, press the head-lift lever again and gently lower the mixing head until it locks into the operating position. Ensure the **Safety Lock** is engaged.
8. **Connecting to Power:** Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Fakir Arya Stand Mixer offers multiple speed settings for various tasks.

1. **Adding Ingredients:** With the mixing head lowered and locked, add your ingredients to the mixing bowl. You can use the splash guard to prevent splattering, adding ingredients through its opening.
2. **Selecting Speed:** Turn the speed control dial to the desired setting. Start with a low speed and gradually increase as needed.
 - **Speed 1-2 (Low):** For kneading dough, mixing heavy batters.
 - **Speed 3-4 (Medium):** For mixing cakes, cookies, and frostings.
 - **Speed 5-6 (High):** For whipping cream, egg whites, and light batters.
 - **Pulse (P):** For short bursts of high speed.
3. **Operation Time:** Do not operate the mixer continuously for more than 10 minutes. Allow it to rest for at least 20 minutes before resuming operation to prevent overheating.

4. **Stopping Operation:** Turn the speed control dial to the "0" (off) position. Unplug the appliance from the power outlet.
5. **Removing Ingredients and Attachments:** Lift the mixing head using the head-lift lever. Scrape down the sides of the bowl with a spatula if necessary. Remove the attachment by pushing upwards and turning counter-clockwise. Unlock and remove the mixing bowl by turning it counter-clockwise.

5. CARE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your stand mixer.

- Always unplug the mixer before cleaning.
- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl, whisk, flat beater, and dough hook are generally dishwasher safe, but hand washing in warm, soapy water is recommended for best results and to prolong their lifespan. Rinse thoroughly and dry immediately.
- **Splash Guard:** Wash the splash guard in warm, soapy water, rinse, and dry.
- **Storage:** Store the cleaned and dried mixer and its accessories in a dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in; mixing head not locked; power outage.	Ensure plug is securely in outlet; lower and lock mixing head; check power supply.
Attachment not fitting correctly.	Incorrect alignment; debris in port.	Ensure attachment is aligned and pushed up firmly before twisting; clean attachment port.
Mixer stops during operation.	Overheating due to prolonged use or heavy load.	Turn off, unplug, and let cool for 20-30 minutes. Reduce load if consistently stopping.
Excessive noise or vibration.	Mixing head not locked; bowl not secured; uneven surface.	Ensure mixing head is locked; secure mixing bowl; place mixer on a stable, flat surface.

If the problem persists, please contact Fakir customer support.

7. SPECIFICATIONS

- **Model:** Arya Stand Mixer
- **Brand:** Fakir
- **Power:** 1500 W
- **Material:** Stainless Steel (bowl and some attachments)
- **Color:** Silverstone
- **Dimensions (approx.):** 50 cm (Depth) x 50 cm (Width) x 50 cm (Height)
- **Key Feature:** Safety Lock



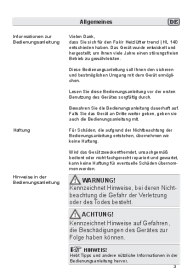

8. WARRANTY AND SUPPORT



Fakir products are manufactured to high-quality standards. For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Fakir website.

For service or spare parts, please contact an authorized Fakir service center.

© [Current Year] Fakir. All rights reserved.

Related Documents - Arya Stand Mixer

	<p>Fakir VC 80 DC Premium Stand Fan User Manual</p> <p>This user manual provides comprehensive instructions for the safe and efficient operation, setup, maintenance, and troubleshooting of the Fakir VC 80 DC Premium Stand Fan.</p>
	<p>Fakir trend VC 35 S Standventilator: User Manual and Safety Guide</p> <p>Official user manual and safety instructions for the Fakir trend VC 35 S Standventilator. Learn about intended use, safety warnings, electrical safety, and proper handling.</p>
	<p>Fakir Heizlüfter trend HL 140 Bedienungsanleitung und Sicherheitshinweise</p> <p>Umfassende Bedienungsanleitung und Sicherheitshinweise für den Fakir Heizlüfter trend HL 140, die bestimmungsgemäße Verwendung, Sicherheitswarnungen, elektrische Vorsichtsmaßnahmen und Fehlerbehebung abdecken.</p>
	<p>Fakir NANCY Toaster Instruction Manual - Safe Operation and Maintenance Guide</p> <p>Official instruction manual for the Fakir NANCY Toaster. Learn about safe operation, features, cleaning, maintenance, and troubleshooting for your kitchen appliance.</p>

 <p>trend VC 43 SF</p> <p>Bedienungsanleitung Stand-Ventilator</p> <p>User manual Pedestal fan</p>	<p>Fakir trend VC 43 SF Stand-Ventilator Bedienungsanleitung</p> <p>Entdecken Sie die Fakir trend VC 43 SF Stand-Ventilator Bedienungsanleitung. Umfassende Informationen zu Montage, sicherer Bedienung, Wartung und technischen Daten des Fakir Ventilators.</p>
 <p>Fakir HAUSGERÄTE</p> <p>INOVATOR X 7269</p>	<p>Fakir INOVATOR X 7269 Cordless Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the Fakir INOVATOR X 7269 bagless cordless upright vacuum cleaner, covering setup, operation, maintenance, safety, and troubleshooting. Includes technical specifications and warranty information.</p>