Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , JBL /
- > JBL PartyBox 310 Portable Bluetooth Speaker User Manual

JBL JBLPARTYBOX310AM_EDI_1

JBL PartyBox 310 Portable Bluetooth Speaker User Manual

Model: JBL PartyBox 310

Brand: JBL

1. Introduction

Thank you for choosing the JBL PartyBox 310 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

What's in the Box

- JBL PartyBox 310 Portable Bluetooth Speaker
- AC Power Cord
- · Auxiliary Cable
- MicroFiber Cloth

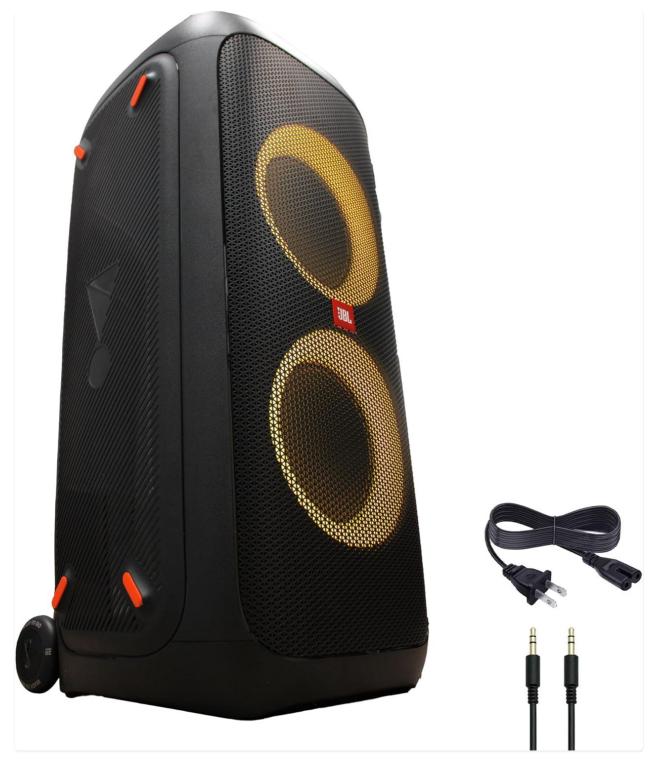


Image 1.1: JBL PartyBox 310 speaker with its power and auxiliary cables.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Ensure proper ventilation; do not block any ventilation openings.
- The speaker has an IPX4 splashproof rating, meaning it is resistant to splashing water. Do not submerge the speaker in water or expose it to heavy rain.
- Use only the provided AC power cord for charging.
- Keep the speaker away from flammable materials.
- Do not attempt to disassemble or modify the speaker. Refer all servicing to qualified personnel.

3. SETUP

3.1 Charging the Battery

- 1. Connect the AC power cord to the speaker's power input.
- 2. Plug the other end of the AC power cord into a wall outlet.
- 3. The battery indicator will show the charging status. A full charge provides up to 18 hours of playback, depending on usage.

3.2 Powering On/Off

• Press the power button located on the control panel to turn the speaker on or off.

3.3 Initial Placement and Portability

The JBL PartyBox 310 is designed for portability with integrated wheels and a telescoping handle. Extend the handle and tilt the speaker to roll it to your desired location. Ensure the speaker is placed on a stable, flat surface during use.



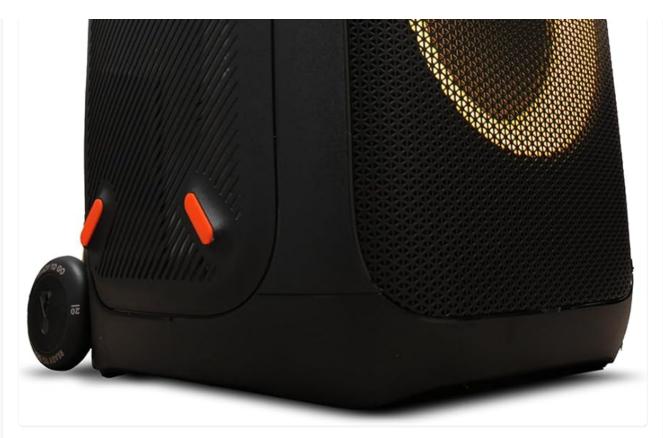


Image 3.1: Side view of the JBL PartyBox 310, illustrating its portability features.

4. OPERATING THE SPEAKER

4.1 Bluetooth Pairing

- 1. Turn on the JBL PartyBox 310.
- 2. Press the Bluetooth button on the speaker's control panel to enter pairing mode. The Bluetooth indicator will flash.
- 3. On your mobile device, enable Bluetooth and select "JBL PartyBox 310" from the list of available devices.
- 4. Once connected, the Bluetooth indicator will remain solid.

4.2 Using Audio Inputs

- Auxiliary Input (3.5mm): Connect an external audio device using the provided 3.5mm auxiliary cable to the AUX input port.
- **USB Input:** Insert a USB drive containing audio files into the USB port for direct playback. The USB port also supports device charging.

4.3 Microphone and Guitar Inputs

The speaker features two 1/4" input jacks. One is dedicated for a microphone, and the other can be switched between a microphone and an electric guitar input.

- 1. Connect your microphone or electric guitar to the respective 1/4" input jacks.
- 2. Adjust the volume and gain controls for each input on the speaker's control panel.

4.4 Party Lights

The JBL PartyBox 310 features built-in party lighting around the speakers. Use the dedicated light button on the control panel to cycle through different light modes or turn them off.





Image 4.1: Front view of the JBL PartyBox 310 showcasing its illuminated party lights.

4.5 Connecting Multiple Speakers (Daisy-Chain)

You can connect multiple JBL PartyBox speakers for a larger sound experience:

- True Wireless Stereo (TWS): Pair two compatible JBL PartyBox speakers wirelessly for stereo sound. Refer to the speaker's on-screen instructions or dedicated TWS button for pairing.
- **Daisy-Chain:** Use an 1/8" audio cable to connect the audio output of one speaker to the audio input of another. This allows multiple speakers to play the same audio source.

5. MAINTENANCE

5.1 Cleaning

- Ensure the speaker is powered off and unplugged before cleaning.
- Use the provided microfiber cloth or a soft, dry cloth to wipe the exterior surfaces.
- For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Do not allow water to enter any openings.

5.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every three months to maintain battery health.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Battery is depleted; Power cord not connected	Charge the speaker; Ensure AC power cord is securely connected to speaker and outlet
No sound from speaker	Volume too low; Incorrect input source selected; Device not paired (Bluetooth)	Increase volume; Select correct input (Bluetooth, AUX, USB); Re-pair Bluetooth device
Bluetooth connection issues	Speaker too far from device; Interference; Device not in pairing mode	Move device closer to speaker; Avoid obstacles; Ensure speaker is in Bluetooth pairing mode

Problem	Possible Cause	Solution
Microphone/Guitar not working	Incorrect input selected; Volume/gain too low; Cable not connected properly	Check input selection; Adjust volume/gain; Ensure cables are fully inserted

7. SPECIFICATIONS

Feature	Detail
Model Number	JBLPARTYBOX310AM_EDI_1
Output Power	Up to 240W RMS
Drivers	Two 6.5" Woofers, Two 2.5" Tweeters
Connectivity	Bluetooth, Auxiliary (3.5mm), USB
Inputs	3.5mm Audio In, 2 x 1/4" Mic/Guitar Inputs, USB
Battery Life	Up to 18 hours (rechargeable)
Water Resistance	IPX4 Splashproof
Dimensions (H x W x D)	27 x 14.5 x 12 inches
Weight	39 pounds
UPC	094148629919

8. WARRANTY AND SUPPORT

JBL products are designed for reliability and performance. For information regarding warranty coverage, technical support, or service, please visit the official JBL website or contact their customer service department. You can find more information and support resources by visiting the JBL Store on Amazon.

© 2024 JBL. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - JBLPARTYBOX310AM_EDI_1

