



Manuals.plus /

› JBL /

› JBL PartyBox 110 Portable Wireless Speaker Instruction Manual

JBL JBLPARTYBOX110AM

JBL PartyBox 110 Instruction Manual

Model: JBLPARTYBOX110AM

Brand: JBL

INTRODUCTION

The JBL PartyBox 110 is a powerful portable wireless speaker designed to elevate your audio experience with robust sound and dynamic light shows. This manual provides essential information for the proper setup, operation, and maintenance of your device, ensuring you get the most out of its features, including Bluetooth connectivity, microphone and guitar inputs, and splashproof design.

WHAT'S IN THE BOX

- 1 x JBL PartyBox 110 - 160W Portable Wireless Speaker
- 1 x JBL Wireless Two Microphone System with Dual-Channel Receiver
- 1 x Auxiliary Cable
- 1 x MicroFiber Cloth
- 1 x AC Power Cord

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your JBL PartyBox 110 speaker and accessories.



The JBL PartyBox 110 speaker shown with its complete bundle, including the wireless microphones, receiver, AUX cable, and microfiber cloth.



Front view of the JBL PartyBox 110 showcasing its dynamic purple LED light ring and central JBL logo.



Top control panel of the JBL PartyBox 110, featuring buttons for light modes, bass boost, power, Bluetooth pairing, and playback controls.



Angled side view of the JBL PartyBox 110, highlighting the speaker grille and green LED light effects.

SETUP

Charging the Speaker

Before first use, fully charge the PartyBox 110. Connect the supplied AC power cord to the speaker's power input and then to a wall outlet. The battery indicator will show charging status. A full charge provides up to 12 hours of playtime.

Connecting Microphones

Insert the receiver of the wireless microphone system into the dedicated microphone input on the PartyBox 110. Ensure the microphones are powered on and paired with the receiver. Adjust microphone volume using the dedicated knob on the speaker.

Powering On/Off

Press and hold the power button located on the top panel of the speaker for a few seconds to turn the PartyBox 110 on or off.

OPERATING INSTRUCTIONS

Bluetooth Connection

1. Turn on the JBL PartyBox 110.
2. Press the Bluetooth button on the top panel to enter pairing mode. The Bluetooth indicator will flash.
3. On your mobile device, enable Bluetooth and select 'JBL PartyBox 110' from the list of available devices.
4. Once connected, the Bluetooth indicator will glow solid, and you can begin streaming audio.

USB Playback

Insert a USB drive containing audio files into the USB port on the speaker. The speaker will automatically detect and begin playing compatible audio files. Use the playback controls on the speaker to navigate tracks.

AUX Connection

Connect an audio device to the AUX input using the supplied auxiliary cable. The speaker will automatically switch to AUX input mode. Adjust volume from both the connected device and the speaker.

Light Show Control

Press the light mode button on the top panel to cycle through various light patterns and colors. You can also customize the light show and other settings using the JBL PartyBox App on your smartphone.

Pairing Two Speakers (TWS)

For a larger sound experience, two JBL PartyBox 110 speakers can be wirelessly paired using True Wireless Stereo (TWS) technology. Refer to the JBL PartyBox App or the full user manual for detailed TWS pairing instructions.

Microphone and Guitar Inputs

The PartyBox 110 features dedicated inputs for a microphone and a guitar. Plug your instruments or microphones into the respective jacks. Use the individual gain knobs to adjust the input levels for optimal sound.

MAINTENANCE

Cleaning

To clean the speaker, use a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, benzene, or thinners, as these can damage the surface. Ensure all ports are dry before connecting power.

Storage

When not in use for extended periods, store the PartyBox 110 in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every three months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Battery is depleted; Power cord not connected properly.	Connect the speaker to a power outlet and allow it to charge. Ensure the power cord is securely plugged in.
No sound from speaker	Volume is too low; Incorrect input source selected; Bluetooth not connected.	Increase the volume on both the speaker and the connected device. Verify the correct input source (Bluetooth, AUX, USB) is selected. Re-establish Bluetooth connection.
Bluetooth connection issues	Speaker is not in pairing mode; Device is out of range; Interference.	Press the Bluetooth button to enter pairing mode. Move the device closer to the speaker. Avoid placing the speaker near other wireless devices that may cause interference.
Light show not working	Light mode is off; App settings.	Press the light mode button to activate the light show. Check settings within the JBL PartyBox App.

SPECIFICATIONS

Feature	Detail
Output Wattage	160 Watts
Drivers	2 x 2.25" Tweeters, 2 x 5.25" Woofers
Connectivity Technology	AUX, Bluetooth
Audio Input	Guitar, Microphone
Power Source	Battery Powered
Battery Life	Up to 12 Hours
Water Resistance	IPX4 Splashproof Design
Product Dimensions (L x W x H)	11.6 x 11.8 x 22 inches
Item Weight	25 Pounds
Model Number	JBLPARTYBOX110AM
UPC	094148629902

WARRANTY AND SUPPORT

Your JBL PartyBox 110 is covered by a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please visit the official JBL support website or contact their customer service department. Keep your proof of purchase for warranty validation.

For further assistance, you may visit the JBL Store on Amazon.

