



Manuals.plus /

› EasyKeys /

› Wesko W011 Office Furniture Replacement Key User Manual

EasyKeys W011

Wesko W011 Office Furniture Replacement Key User Manual

Model: W011 | Brand: EasyKeys

PRODUCT OVERVIEW

The Wesko W011 is a replacement key designed for various office furniture locks within the Wesko W001-W799 series. This key is specifically cut to match the W011 lock code, ensuring compatibility with corresponding office furniture locks. It is an OEM replacement key, meaning it is manufactured to the original equipment specifications for reliable performance.



This image displays a silver-colored Wesko replacement key. The key features a standard key head with a circular hole for a keyring and a blade designed for office furniture locks. The code "W401" is clearly stamped on the key head, serving as an example of how Wesko key codes appear. This visual representation helps in identifying the format of the correct key type, which for this product is W011.

KEY IDENTIFICATION

To ensure you have the correct replacement key, it is crucial to identify the lock code. The lock code for Wesko keys (W001-W799 series) is typically found in one of two locations:

- **On your original key:** The code (e.g., W011) is usually stamped directly onto the key head.
- **On the face of the lock:** If the original key is lost, the code may be stamped on the visible part of the lock cylinder itself.

The Wesko W011 key is cut on an IN8-W key blank, which is a standard blank for this series.

SETUP AND USAGE

The Wesko W011 replacement key is designed for straightforward use with compatible office furniture locks.

- 1. Verify Compatibility:** Before attempting to use the key, ensure the lock code on your furniture matches "W011".
- 2. Insert Key:** Gently insert the key into the lock cylinder. Do not force the key if it does not slide in smoothly.
- 3. Turn Key:** Once fully inserted, turn the key clockwise or counter-clockwise (depending on the lock mechanism) to engage or disengage the lock.
- 4. Remove Key:** After locking or unlocking, return the key to its original insertion position before removing it.

This key is compatible with various brands that use Wesko lock systems, including ARTOPEX, COREY HIEBRT, GLOBAL, LINCORA, OFFICE SPECIALTY, PUNDRA, SHAW WALKER, SIGNORE, SMED, TURNSTONE PAYBACK, and WESKO.

MAINTENANCE

Proper maintenance of your key and lock can extend their lifespan and ensure smooth operation.

- **Keep Clean:** Periodically wipe the key with a dry, soft cloth to remove dust or debris.
- **Avoid Bending:** Store the key in a manner that prevents it from bending or being subjected to excessive force, which could deform its shape.
- **Lubrication (for lock):** If the lock mechanism becomes stiff, a small amount of graphite lubricant (not oil-based lubricants) can be applied directly into the lock cylinder. Consult your furniture manufacturer's guidelines for specific lock maintenance.
- **Duplicate Keys:** If you require additional copies, ensure they are cut by a reputable locksmith using the correct IN8-W blank and the precise W011 code.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Key does not insert fully.	Incorrect key code; debris in lock; bent key.	Verify lock code. Check for obstructions in lock. Inspect key for damage.
Key turns but lock does not engage/disengage.	Internal lock mechanism issue; worn key.	Consult a locksmith or furniture repair specialist. Ensure key is not excessively worn.
Key is stiff to turn.	Lack of lubrication in lock; minor debris.	Apply graphite lubricant to the lock cylinder. Gently try to work the key.

SPECIFICATIONS

- **Product Name:** Wesko W011 Office Furniture Replacement Key
- **Model Number:** W011
- **Key Series:** Wesko W001-W799
- **Key Blank Type:** IN8-W
- **Material:** Metal alloy (typical for keys)
- **Weight:** 0.247 ounces (approximate)
- **Manufacturer:** Wesko (Key manufacturer), EasyKeys (Seller)

WARRANTY AND SUPPORT

This product is sold by EasyKeys Inc. USA. For specific warranty information regarding replacement keys, please refer to the seller's return policy or contact EasyKeys directly.

Return Policy: Typically, a 30-day refund/replacement policy applies from the date of purchase. Please check the specific terms at the point of purchase for the most accurate information.

For further assistance or inquiries, you may visit the [EasyKeys Store on Amazon](#) or contact their customer support.

