



Manuals.plus /

› EasyKeys /

› Knoll K220 Office Furniture Replacement Key User Manual

## EasyKeys K220

# Knoll K220 Office Furniture Replacement Key User Manual

Model: K220 | Brand: EasyKeys

## INTRODUCTION

---

This manual provides essential information for the proper identification and use of your Knoll K220 Office Furniture Replacement Key. This key is designed to replace lost or damaged keys for Knoll office furniture locks within the K001-K250 series.

## KEY IDENTIFICATION AND SETUP

---

To ensure you have the correct replacement key, it is crucial to identify the lock code. The lock code for your furniture will typically be stamped on your original key or directly on the face of the lock cylinder if the original key is unavailable.



**Image: Knoll K220 Replacement Key**

This image displays the Knoll K220 replacement key. It features a rectangular black plastic head for grip and a silver-colored metal blade. The key code "K220" is visibly stamped on the metal part of the key, just below the plastic head, which is essential for verifying the correct key for your lock.

Verify that the code on your new key matches the code on your lock or original key. This replacement key is cut on a K SERIES key blank, specifically for Knoll office furniture locks.

## **OPERATING INSTRUCTIONS**

---

Insert the key fully into the lock cylinder. Turn the key clockwise or counter-clockwise, depending on the lock mechanism, to engage or disengage the locking bolt. Remove the key once the lock is in the desired position.

- Ensure the key is inserted straight and without force.
- If the key does not turn easily, do not force it. Refer to the troubleshooting section.

## MAINTENANCE

---

To ensure the longevity and smooth operation of your key and lock:

- Keep the key clean and free from dirt or debris.
- Avoid bending or damaging the key blade.
- Store the key in a dry place to prevent corrosion.
- Periodically, a small amount of graphite lubricant can be applied to the lock cylinder to maintain smooth operation.

## TROUBLESHOOTING

---

| Problem                                       | Possible Cause                                 | Solution   |
|---|--|--|
| Key does not insert fully.                    | Obstruction in lock cylinder or incorrect key. | Check for debris in the lock. Verify key code matches lock code.       |
| Key turns but lock does not engage/disengage. | Internal lock mechanism issue.                 | Consult a locksmith or furniture repair specialist.                    |
| Key is difficult to turn.                     | Lack of lubrication or minor misalignment.     | Apply graphite lubricant to the lock cylinder. Ensure key is straight. |

## SPECIFICATIONS

---

**Item Weight:** 0.247 ounces

**Manufacturer:** Knoll

**ASIN:** B0CPRR3M5K

**Date First Available:** December 7, 2023

**Key Series:** K001-K250

**Key Blank Type:** K SERIES

## WARRANTY AND SUPPORT

---

This product is provided by EasyKeys, a small business brand. For any issues or inquiries regarding your replacement key, please refer to the seller's return policy or contact EasyKeys Inc. USA directly through the platform where the purchase was made.

Standard return policy allows for a refund or replacement within 30 days of purchase.

For additional support, you may visit the [EasyKeys Store](#).

